

## Severin FR 2462

# SEVERIN FR 2462 XXL 7-Liter Hot Air Fryer Instruction Manual

Model: FR 2462

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Always follow basic safety precautions when using electrical appliances.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the plug, mains cord, or the appliance itself is damaged.
- Always unplug the appliance after use and before cleaning. Allow it to cool down completely before handling.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot air is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- Do not fill the basket with oil or other liquids, as this may cause a fire hazard.

## 2. PRODUCT OVERVIEW

The SEVERIN FR 2462 Hot Air Fryer is designed for frying, baking, roasting, and grilling a variety of foods with little to no oil. Its large 7-liter capacity and intuitive touch display make it suitable for preparing generous portions.

### Key Features:

- **XXL Basket:** 7-liter capacity for large meals, such as a whole chicken or large batches of fries.
- **Touch Display & 12 Programs:** Easy-to-use LED touch panel with 12 automatic programs for various preparations including fries, chicken, fish, meat, vegetables, cakes, and frozen foods.
- **Programming & Extra Functions:** Two memory slots for custom settings, a 'keep warm' function, and a 'shake' reminder for even cooking.
- **Oil-Free Cooking:** Utilizes hot air technology for healthier cooking with significantly reduced oil or fat.
- **Ceramic Coated Basket:** Ensures high scratch resistance and excellent non-stick properties for easy

food removal and cleaning.

## Components:

1. Main Unit with Control Panel
2. Removable Basket with Ceramic Coating
3. Handle for Basket
4. Air Inlet and Outlet Vents



Figure 1: Front view of the SEVERIN FR 2462 Hot Air Fryer.



Figure 2: Detailed view of the intuitive LED touch display.

### 3. SETUP AND FIRST USE

#### Unpacking:

- Remove all packaging materials and stickers.
- Check if all parts are present and undamaged.

#### Initial Cleaning:

- Wipe the main unit with a damp cloth.
- Clean the basket and any removable accessories with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
- Do not use abrasive cleaning agents or scouring pads, as these can damage the non-stick coating.

#### Placement:

- Place the appliance on a stable, horizontal, and heat-resistant surface.
- Ensure adequate ventilation around the appliance.

#### First Use (Burn-in):

- Insert the clean basket into the appliance.
- Plug the appliance into a grounded wall socket.
- Set the temperature to 200°C and the timer to 10 minutes.

- A slight odor or smoke may be emitted during the first use; this is normal and will dissipate.
- After the cycle, unplug the appliance and let it cool down.

## 4. OPERATING INSTRUCTIONS

### Basic Operation:

1. Place the appliance on a stable surface and plug it in.
2. Carefully pull the basket out of the air fryer.
3. Place the food items into the basket. Do not exceed the MAX fill line.
4. Slide the basket back into the air fryer until it clicks into place.
5. Press the power button to turn on the display.
6. Select a preset program or manually set the temperature and time.
7. Press the Start/Pause button to begin cooking.



Figure 3: User interacting with the touch display to set cooking parameters.



Figure 4: Removing the basket to check or shake food during cooking.

## Using Preset Programs:

The FR 2462 features 12 automatic programs. Simply touch the icon corresponding to your desired food type (e.g., fries, chicken, fish). The appliance will automatically set the optimal temperature and time. You can adjust these settings manually after selecting a preset if needed.

## Manual Temperature and Time Setting:

- After turning on the display, use the temperature +/- buttons to adjust the cooking temperature (range typically 80°C to 200°C).
- Use the time +/- buttons to adjust the cooking time (range typically 1 to 60 minutes).

## Memory Function:

The appliance includes 2 memory slots (M1, M2) to save your personalized settings. To save a setting:

1. Set your desired temperature and time.
2. Press and hold the M1 or M2 button until the display confirms the setting is saved.

To recall a saved setting, simply press the M1 or M2 button.

## Shake Reminder:

For certain foods, the air fryer will emit a 'shake' reminder during the cooking cycle to prompt you to shake the basket for even cooking. Pull out the basket, shake the contents, and reinsert it to resume cooking.

## Keep Warm Function:

After the cooking cycle is complete, you can activate the 'keep warm' function to maintain the food's temperature until serving.

## Official Product Video:

Your browser does not support the video tag.

Video 1: This video demonstrates the general use and features of an air fryer, including cooking various foods. It provides a visual guide to the capabilities of similar hot air fryers.

## 5. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

### Before Cleaning:

- Always unplug the appliance and allow it to cool down completely before cleaning.

### Cleaning the Basket and Accessories:

- The ceramic-coated basket and any removable accessories are dishwasher-safe.
- Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residues, soak the basket in hot water with some dish soap for about 10 minutes before cleaning.

### Cleaning the Interior:

- Wipe the interior of the appliance with a damp cloth.
- Clean the heating element with a soft brush to remove any food residues. Do not use metal brushes or abrasive materials.

## Cleaning the Exterior:

- Wipe the exterior of the air fryer with a soft, damp cloth.
- Do not use harsh detergents or abrasive cleaners.



Figure 5: Cleaning the ceramic-coated basket for easy maintenance.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in or power outlet is not working.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Basket is overloaded or food was not shaken.	Do not overload the basket. Shake the basket contents halfway through cooking.
White smoke comes from the appliance.	Fat residues from previous use or excessive oil on food.	Clean the basket and interior thoroughly. Use less oil on food.
Food is not crispy.	Incorrect temperature or cooking time.	Increase temperature or cooking time. Ensure food is not too moist.

## 7. TECHNICAL SPECIFICATIONS

- **Model:** FR 2462
- **Brand:** Severin
- **Power:** 1700 Watts
- **Voltage:** 220 Volts (AC)
- **Capacity:** 7 Liters
- **Dimensions (L x W x H):** 38.7 x 29 x 31 cm
- **Weight:** 4.3 Kilograms
- **Color:** Black
- **Material:** Plastic, Ceramic-coated basket
- **Special Features:** Temperature control, Automatic shutdown, Timer, Touch Display, 12 Preset Programs, 2 Memory Slots, Keep Warm Function, Shake Reminder.

## 8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Severin website. If you encounter any issues or have questions regarding your SEVERIN FR 2462 Hot Air

Fryer, please contact Severin customer support for assistance.

You can find contact details on the official [Severin website](#).