

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [tectake](#) /

> [tectake 600W Stainless Steel Juicer User Manual](#)

tectake 405527-4

tectake 600W Stainless Steel Juicer User Manual

Model: 405527-4

INTRODUCTION

Thank you for choosing the tectake 600W Stainless Steel Juicer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.



Image: The tectake 600W Stainless Steel Juicer, showcasing its sleek design and included juice container.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is switched off and unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the feeding chute during operation to prevent injury. Use the food pusher provided.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance features an automatic shut-off system to prevent overheating. If the motor overloads, the appliance will stop automatically. Unplug and allow it to cool down before resuming use.

- Use only original accessories and spare parts.
- Do not use the appliance outdoors.

PRODUCT OVERVIEW

The tectake 600W Stainless Steel Juicer is designed for efficient extraction of juice from various fruits and vegetables. It features a powerful motor, two speed settings, and a durable stainless steel construction.

Components:

- Motor Base with Control Dial
- Pulp Container
- Juice Container (500 ml capacity)
- Filter Basket / Strainer
- Juicer Cover with Feeding Chute
- Food Pusher
- Cleaning Brush

POTENTE E
veloce

Ampia apertura

Contenitore succo da 500 ml

Contenitore residui da 1,4 litri

Abbondante resa di succo

Succo privo di pezzi

Uscita per succo in acciaio inox

tectake
home

Questo potente estrattore produce succhi sani, deliziosi e preparati al momento in pochissimo tempo. Le lame ultra affilate e le 2 impostazioni di velocità assicurano un risultato ottimale, sia con verdure dure che con frutta morbida. Per un piacere garantito!

Image: Disassembled view of the juicer showing the wide feeding chute, juice container, and pulp container.



Il filtro a maglia fine filtra efficacemente le particelle solide e la polpa, per un succo limpido.



L'apertura XXL può contenere grandi pezzi di frutta e verdura, riducendo i tempi di preparazione.



Il pressatore garantisce un utilizzo sicuro evitando che le dita entrino in contatto con le lame.



I piedini antiscivolo in plastica assicurano un appoggio stabile e sono delicati su qualsiasi superficie.

Image: Detailed views of the fine mesh filter, extra-large feeding chute, food pusher, and non-slip rubber feet on the base.

SETUP AND ASSEMBLY

Before first use, wash all removable parts (juice container, pulp container, filter basket, juicer cover, food pusher) in warm soapy water, rinse thoroughly, and dry. Wipe the motor base with a damp cloth.

1. Place the motor base on a stable, flat, and dry surface.
2. Insert the pulp container into its designated position on the motor base.
3. Place the filter basket onto the motor base, ensuring it is securely seated.
4. Position the juicer cover over the filter basket and align it with the motor base.
5. Secure the locking clamps on both sides of the juicer cover. Ensure they click into place, indicating the cover is properly locked. The appliance will not operate if the clamps are not secured.
6. Place the juice container under the juice spout.
7. Insert the food pusher into the feeding chute.
8. Plug the power cord into a suitable electrical outlet (220-240V).

OPERATING INSTRUCTIONS

Preparing Ingredients:

- Wash all fruits and vegetables thoroughly.
- For fruits with large seeds (e.g., peaches, plums, cherries), remove the seeds before juicing.
- For citrus fruits, peel them before juicing.
- The extra-large feeding chute allows for whole fruits and vegetables. However, for very large items, you may cut them into smaller pieces to fit.

Juicing Process:

1. Ensure the juicer is correctly assembled and the juice container is in place.
2. Turn the control dial to the desired speed setting:
 - **Speed 1 (Low):** Suitable for soft fruits and vegetables (e.g., berries, grapes, tomatoes).
 - **Speed 2 (High):** Suitable for hard fruits and vegetables (e.g., apples, carrots, celery).
3. With the motor running, gradually feed the prepared fruits or vegetables into the feeding chute.
4. Use the food pusher to gently guide the ingredients down. Do not force the ingredients, as this can damage the motor or reduce juice yield.
5. The fresh juice will flow into the juice container, and the pulp will collect in the pulp container.
6. When finished, turn the control dial to the "OFF" position and unplug the appliance.

Note: The appliance is equipped with an overheating protection system. If the motor becomes overloaded or overheated, the juicer will automatically shut off. If this occurs, turn the control dial to "OFF", unplug the appliance, and allow it to cool down for at least 15-20 minutes before attempting to use it again.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your juicer.

1. Before cleaning, always turn the control dial to "OFF" and unplug the appliance from the power outlet.
2. Disassemble the juicer by releasing the locking clamps and removing the food pusher, juicer cover, filter basket, juice container, and pulp container.
3. Empty the pulp container and juice container.
4. Rinse all removable parts under running water. Use the included cleaning brush to remove any pulp residue from the filter basket. Pay special attention to the fine mesh of the filter.
5. Wash all removable parts in warm soapy water. They are generally not dishwasher safe; refer to specific markings if present.
6. Rinse thoroughly and dry all parts completely before reassembling or storing.
7. Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
8. Store the assembled juicer in a dry place.

Caution: The blades on the filter basket are sharp. Handle with care during cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Juicer does not start.	Not plugged in. Locking clamps not secured. Overheating protection activated.	Ensure the power cord is securely plugged into an outlet. Check that both locking clamps are fully engaged. Unplug and allow the unit to cool for 15-20 minutes.
Low juice yield or excessive pulp.	Incorrect speed setting for produce. Filter basket clogged. Ingredients fed too quickly.	Use Speed 2 for harder produce. Clean the filter basket thoroughly. Feed ingredients slowly and gently.
Motor stops during operation.	Overheating protection activated. Too much pressure applied with food pusher.	Unplug and allow the unit to cool for 15-20 minutes. Reduce pressure on the food pusher.

SPECIFICATIONS

Feature	Detail
Model	405527-4
Brand	tectake
Power	600 W
Voltage	220 - 240 V
Number of Speeds	2
Dimensions (LxWxH)	Approx. 18 x 26 x 28.5 cm
Weight	Approx. 2.6 kg
Juice Container Capacity	Approx. 500 ml
Pulp Container Capacity	Approx. 1400 ml
Feeding Chute Diameter	64 mm
Cable Length	Approx. 80 cm
Material	Stainless Steel, Polypropylene, ABS Plastic, Acrylonitrile-Styrene, Copper, Polystyrene
Color	Silver

MISURE

Misure totali
18 x 26 x 28,5 cm

Contenitore per il succo
6,5 x 11 x 14 cm

Potenza
600 W

Lunghezza cavo
80 cm

Tutte le misure sono approssimative

DATI TECNICI

Capacità
Contenitore del succo ca. 500 ml
Contenitore residui ca. 1400 ml

Peso ca. 2,5 kg
Materiale acciaio, acciaio inox, polipropilene, plastica ABS, acrilonitrile stirene, rame, polistirolo

LA FORNITURA COMPRENDE

Estrattore con contenitore
Spazzola per la pulizia
Istruzioni per l'uso



Image: Technical diagram illustrating the overall dimensions and listing the components included in the package.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact tectake customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: tectake