

[Manuals.plus](#) /

› [QPLAY](#) /

› QPLAY Comfort Max 6-in-1 Evolving Tricycle User Manual (Models 5980, 5981, 5201)

QPLAY 5980 / 5981 / 5201

QPLAY Comfort Max 6-in-1 Evolving Tricycle User Manual

Models: 5980, 5981, 5201

1. INTRODUCTION

Thank you for choosing the QPLAY Comfort Max 6-in-1 Evolving Tricycle. This versatile tricycle is designed to adapt to your child's growth, offering comfort and safety from 10 months up to 6 years of age. Please read this manual carefully before assembly and use to ensure proper operation and to maximize the lifespan of your product.

Safety Warnings

- Always supervise your child when using the tricycle.
- Ensure all locking mechanisms are engaged before each use.
- Do not use the tricycle near stairs, hills, roads, or swimming pools.
- The tricycle is designed for one child at a time.
- Regularly inspect the tricycle for loose parts, damage, or wear. Discontinue use if any issues are found.
- Always use the 5-point safety harness when the child is seated.
- Maximum weight capacity: 25 kg (55 lbs).

Seguro y Divertido Viaje



10 meses
- 6 años



Pruebas
de Seguridad



Arnés de
5 puntos



Image: A child enjoying the tricycle, demonstrating the secure 5-point harness and protective bar for a safe and fun ride.

2. PRODUCT OVERVIEW AND STAGES

The QPLAY Comfort Max is an evolving tricycle designed to grow with your child through various stages. While marketed as a 6-in-1, the design supports multiple configurations to suit different developmental needs.



Image: An illustrative diagram showcasing the different evolving stages of the tricycle, adapting from a parent-controlled stroller-like mode for infants to an independent tricycle for older children.

Key Features

- **360° Rotating and Reclining Seat:** Allows for parent-facing or world-facing positions and comfortable resting.
- **Foldable Aluminum Frame:** Lightweight, durable, and easy to store or transport.
- **EVA Wheels with Shock Absorption:** Provides a smooth, quiet ride on various terrains.
- **5-Point Safety Harness:** Ensures your child's security.
- **Removable and Adjustable Canopy:** Offers protection from direct sunlight and UV rays.
- **Height-Adjustable Parent Push Bar:** For comfortable steering by adults.
- **Free-Wheel Function:** Allows pedals to spin independently when parent is pushing.
- **Removable Storage Bag and Cup Holder:** Convenient for essentials.

3. SETUP AND ASSEMBLY

The QPLAY Comfort Max tricycle is designed for minimal assembly. Most components come pre-assembled. Follow these steps for initial setup:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Unfolding the Frame:** If the tricycle is in its folded state, locate the folding mechanism (usually a latch or button on the frame) and release it to extend the frame until it locks into place.
3. **Attaching Wheels (if necessary):** Ensure all wheels are securely attached. The EVA wheels are designed for durability and do not require inflation.
4. **Installing Parent Push Bar:** Insert the parent push bar into its designated slot at the rear of the tricycle and secure it with the locking mechanism. Adjust to a comfortable height.
5. **Attaching Canopy:** Mount the canopy onto its supports above the seat. Ensure it clicks into place securely.
6. **Attaching Accessories:** Secure the removable storage bag and cup holder to their respective positions.
7. **Final Check:** Before first use, verify that all parts are correctly assembled and securely fastened.

Características Fáciles de Usar



Image: An annotated view of the tricycle, pointing out key components and their functions for easy setup and use.

4. OPERATING INSTRUCTIONS

4.1 Seat Adjustment (360° Rotation and Recline)

The seat can be rotated 360 degrees and reclined for your child's comfort and interaction.

- **To Rotate the Seat:** Locate the seat rotation lever or button, usually underneath the seat. Press or lift it and turn the seat to the desired position (parent-facing or world-facing) until it locks securely.
- **To Recline the Seat:** Find the recline mechanism, typically a lever or strap behind the seat's backrest. Adjust the backrest to the desired angle for your child to rest comfortably.

Asiento Giratorio 360°



Modo de cara al mundo



Modo de cara hacia los padres

Image: The tricycle seat shown in both forward-facing and parent-facing modes, illustrating the 360-degree rotation capability.

4.2 Parent Push Bar

The parent push bar is height-adjustable for ergonomic pushing.

- **To Adjust Height:** Locate the adjustment buttons or levers on the push bar. Press them and slide the bar up or down to your preferred height, then release to lock.

4.3 Canopy Adjustment

The canopy provides shade and UV protection and can be adjusted or removed.

- **To Adjust:** Gently push or pull the canopy to extend or retract it.
- **To Remove:** Unclip or detach the canopy from its supports.

Capota Desmontable y Ajustable

Protege a tu hijo de la luz solar directa y el daño de rayos UV.



Image: The tricycle's canopy being adjusted, demonstrating its flexibility and the convenience of the detachable backpack and cup holder.

4.4 Free-Wheel Function

The free-wheel function allows the pedals to spin freely without moving the front wheel, preventing your child's feet from getting caught while you push.

- **To Engage/Disengage:** Locate the free-wheel clutch on the front wheel. Slide the mechanism to engage or disengage the pedals from the wheel drive.

4.5 Brakes

The tricycle is equipped with linked brakes on the rear wheels for secure parking.

- **To Engage:** Press down on the brake lever(s) located near the rear wheels until they lock.
- **To Disengage:** Lift the brake lever(s) up.

4.6 Folding for Storage/Transport

The aluminum frame allows for easy folding.

- **Preparation:** Ensure the seat is in the forward-facing position and the parent push bar is at its lowest setting. Remove any accessories like the storage bag or cup holder.
- **Folding Mechanism:** Locate the main folding latch or button on the frame. Follow the instructions specific to your model to collapse the tricycle. Ensure it locks in the folded position.

Tamaño del Producto y Diseño Portátil



Image: The tricycle's dimensions and its compact folded state, demonstrating its portability and ease of storage in a car trunk.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your QPLAY Comfort Max tricycle.

- **Cleaning:** Wipe down the frame and plastic parts with a damp cloth and mild soap. Do not use abrasive cleaners. The fabric parts (seat cover, canopy) can typically be spot cleaned or removed for hand washing according to care labels.
- **Wheel Inspection:** Periodically check the EVA wheels for wear or damage. Ensure they spin freely and are securely attached. The wheels are designed to be maintenance-free and do not require inflation.
- **Harness and Buckles:** Inspect the 5-point harness and buckles for any fraying, tears, or damage. Ensure the buckles engage and disengage smoothly.
- **Moving Parts:** Check all joints, hinges, and locking mechanisms for smooth operation. If necessary, apply a small amount of silicone-based lubricant to prevent squeaking or stiffness.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.



Antideslizante



Amigable con
los pisos



A prueba de
golpes



Sin Inflado



Listo para Todo Terreno



Image: A detailed view of the EVA wheel, emphasizing its robust design for all-terrain use and minimal maintenance.

6. TROUBLESHOOTING

If you encounter any issues with your QPLAY Comfort Max tricycle, refer to the following common troubleshooting tips:

- **Tricycle does not fold smoothly:** Ensure all accessories are removed, the seat is in the correct position, and the parent push bar is lowered. Check for any obstructions in the folding mechanism.
- **Seat does not rotate or recline:** Verify that the locking levers or buttons for rotation/recline are fully disengaged. Check for any debris or obstructions preventing movement.
- **Wheels are stiff or noisy:** Inspect wheels for trapped debris (e.g., hair, dirt). Clean the axle area. If noise persists, a small amount of silicone lubricant might help.
- **Parent push bar is loose:** Ensure the height adjustment buttons are fully engaged and the bar is locked into place.
- **Harness buckles are difficult to operate:** Clean the buckles to remove any dirt or residue. Ensure they are aligned correctly.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Brand	QPLAY
Model Numbers	5980 / 5981 / 5201
Recommended Age	10 months - 6 years
Product Dimensions (L x W x H)	80 x 50 x 95 cm (31.5 x 19.7 x 37.4 inches)
Item Weight	12.05 kg (26.57 lbs)
Material	Aluminum (frame)
Wheels	EVA (Ethylene-vinyl acetate)
Assembly Required	No (minimal setup)
Components Included	Evolving 6-in-1 Tricycle

8. WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for the QPLAY Comfort Max 6-in-1 Evolving Tricycle are not provided in this manual. Please refer to the product packaging, your purchase receipt, or the retailer's website for information regarding warranty coverage and terms.

Customer Support

For further assistance, technical support, or to inquire about replacement parts, please contact the retailer where you purchased the product or visit the official QPLAY website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question