

[Manuals.plus](#) /

> [Gosasa](#) /

> Gosasa Men's Digital Watch User Manual

Gosasa 2447

Gosasa Men's Digital Watch User Manual

Model: 2447

INTRODUCTION

Thank you for choosing the Gosasa Men's Digital Watch. This manual provides detailed instructions on how to set up, operate, and maintain your watch. Please read this manual carefully to ensure proper use and to enjoy all the features of your new timepiece.





Image: Front view of the Gosasa Men's Digital Watch in all black, displaying the time and date.

PRODUCT OVERVIEW

The Gosasa Digital Watch is designed with a sleek, durable zinc alloy case and a high-quality stainless steel strap. It features a clear digital display with multiple functions.



FEATURE SET



Image: Diagram illustrating the watch's buttons and their functions: MODE/START button, LIGHT/RESET button, and display areas for time, date, week, and alarm status.

Key Features:

- **Dual Time Zones:** Track time in two different locations simultaneously.
- **Stopwatch:** Precise timing for various activities.
- **Countdown Timer:** Set a timer for specific durations.
- **Alarm:** Daily alarm function.
- **Day-Date Calendar:** Displays current day and date.
- **12/24-Hour Format:** Choose your preferred time display.
- **Luminous Backlight:** For easy reading in low-light conditions.
- **30M Water Resistance:** Suitable for daily splashes, handwashing, and rain. *Not suitable for swimming or*

SETUP AND INITIAL CONFIGURATION

Setting Time and Date:

1. In normal time display mode, press the **MODE** button (top left) repeatedly until the seconds start flashing. This indicates you are in time setting mode.
2. Press the **RESET** button (bottom right) to cycle through the settings: seconds → hour → minute → year → month → day.
3. Use the **START** button (top right) to adjust the flashing value. Hold to increase rapidly.
4. Once all settings are correct, press the **MODE** button to exit setting mode and return to normal time display.

12/24-Hour Format Selection:

In normal time display mode, press the **START** button (top right) to toggle between 12-hour (AM/PM indicator) and 24-hour formats.

OPERATING INSTRUCTIONS

Using the Backlight:

Press the **LIGHT** button (bottom left) to illuminate the display for a few seconds, allowing for easy reading in dark environments.

Stopwatch Function:

1. From normal time display, press the **MODE** button once to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **START** button (top right) to start the stopwatch.
3. Press the **START** button again to pause the stopwatch.
4. Press the **RESET** button (bottom right) to reset the stopwatch to "00:00:00" while it is paused.
5. Press the **MODE** button to exit Stopwatch mode.

Alarm Function:

1. From normal time display, press the **MODE** button twice to enter Alarm mode. The alarm time will be displayed.
2. Press the **RESET** button (bottom right) to select the hour or minute to set.
3. Use the **START** button (top right) to adjust the flashing value.
4. To turn the alarm ON/OFF, press the **START** button while in Alarm mode (without any digits flashing). An alarm icon will appear/disappear.
5. Press the **MODE** button to exit Alarm mode.

Countdown Timer Function:

1. From normal time display, press the **MODE** button three times to enter Countdown Timer mode.
2. Press the **RESET** button (bottom right) to select the hour, minute, or second to set.

3. Use the **START** button (top right) to adjust the flashing value.
4. Once the desired countdown time is set, press the **START** button to begin the countdown.
5. Press **START** again to pause/resume the countdown.
6. Press **RESET** to reset the countdown to the initial set time.
7. Press the **MODE** button to exit Countdown Timer mode.

Dual Time Function:

This watch supports dual time zones. To set the second time zone:

1. From normal time display, press the **MODE** button four times to enter Dual Time mode.
2. The hour digits will flash. Use the **START** button (top right) to adjust the hour.
3. Press the **RESET** button (bottom right) to move to the minute setting. Use the **START** button to adjust the minute.
4. Press the **MODE** button to exit Dual Time setting mode.

MAINTENANCE AND CARE

- **Water Resistance:** Your watch is 30M water resistant. This means it can withstand splashes, rain, and handwashing. *Do not press any buttons while the watch is wet or submerged. Do not use for swimming, diving, or showering with hot water.*
- **Cleaning:** Wipe the watch case and strap with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive materials.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods, as this can affect battery life and accuracy.
- **Impact:** While durable, avoid dropping the watch or subjecting it to strong impacts.
- **Battery Replacement:** When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have this done by a professional watch repair service to maintain water resistance.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------|--|--|
| Display is blank or dim. | Low battery. | Replace the battery. |
| Buttons are unresponsive. | Watch may be wet, or internal issue. | Ensure watch is dry. If problem persists, consult professional repair. |
| Time is inaccurate. | Incorrectly set, or battery low. | Re-set the time. If problem persists, replace battery. |
| Water inside the watch. | Exceeded water resistance limits, or seal compromised. | Immediately take to a professional for repair to prevent further damage. |

SPECIFICATIONS



PRODUCT PARAMETER



MODEL: 2447

WEIGHT: 132.5g

MOV' T: DIGITAL

CRYSTAL: GLASS

CASE: zinc alloy

BAND: STAINLESS STEEL

BUCKLE: STAINLESS STEEL

W / P : 30M

FUNCTION: 2Time, Chrono, Alarm, Date, Week, EL Light, 12/24 hour clock, count down timer.



Case width: 40mm /1.57in



Case thickness: 12.2mm /0.48in



Band Width: 35.5mm /1.4in



Watch length: 210mm /8.27in

Image: Graphic detailing the watch's dimensions and material specifications.

- **Model:** 2447
- **Weight:** 132.5g
- **Movement:** Digital
- **Crystal:** Mineral Glass
- **Case Material:** Zinc Alloy
- **Band Material:** Stainless Steel
- **Buckle Material:** Stainless Steel
- **Water Resistance:** 30M (3ATM)
- **Case Width:** 40mm / 1.57in
- **Case Thickness:** 12.2mm / 0.48in
- **Band Width:** 35.5mm / 1.4in

- **Total Length:** 210mm / 8.27in
- **Clasp Type:** Foldover Clasp With Push Button

WARRANTY AND SUPPORT

Gosasa watches are manufactured with high standards of quality and craftsmanship. For warranty information or technical support, please refer to the warranty card included with your purchase or contact Gosasa customer service through the retailer where you purchased the product.

For further assistance, please visit the official Gosasa website or contact their customer support directly.

