

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EMKE](#) /

› [EMKE 762x400mm Black Wall-Mounted Towel Radiator for Warm Water User Manual](#)

EMKE 762x400mm

EMKE 762x400mm Black Wall-Mounted Towel Radiator User Manual

Model: 762x400mm | Brand: EMKE

INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your EMKE 762x400mm Black Wall-Mounted Towel Radiator. Please read these instructions carefully before installation and retain them for future reference.

This towel radiator is designed for warm water central heating systems, offering both efficient heating and a convenient towel drying solution for your bathroom.

SAFETY INSTRUCTIONS

- Ensure all installation work is performed by a qualified professional in accordance with local building and plumbing codes.
- Do not cover the radiator with excessive items as this can impede heat dissipation and pose a fire hazard.
- Keep children away from the hot surface of the radiator to prevent burns.
- Before any maintenance or cleaning, ensure the radiator is cool and the heating system is turned off.
- Do not use abrasive cleaners or solvents on the radiator's surface.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation:

- EMKE 762x400mm Towel Radiator
- Wall mounting brackets and fixings
- Installation manual

Note: Connection valves are not included and must be purchased separately.

SETUP AND INSTALLATION

The EMKE towel radiator is designed for straightforward wall mounting. Follow these steps for proper installation:

1. **Choose Location:** Select a suitable wall in your bathroom, ensuring sufficient space for the radiator and access for connections.
2. **Mark Drilling Points:** Use the provided mounting brackets as a template to mark the drilling points on the wall. Ensure the marks are level and accurately spaced.
3. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your wall type. Insert wall plugs if necessary.
4. **Attach Brackets:** Securely fasten the mounting brackets to the wall using the provided screws.
5. **Mount Radiator:** Carefully lift the radiator and attach it to the wall brackets. Ensure it is securely seated.
6. **Connect to Heating System:** Connect the radiator to your warm water central heating system using compatible valves (not included). The connection distance between ports is 50 mm. The adjustable wall distance is between 99-115 mm.
7. **Bleed Radiator:** After filling the heating system, bleed the radiator to remove any trapped air.



Image: Connection details for the EMKE towel radiator, illustrating the 50mm connection spacing and adjustable wall distance of 90-115mm.

OPERATING INSTRUCTIONS

Your EMKE towel radiator operates as part of your existing warm water central heating system. Once installed and connected, its operation is typically controlled by your home's thermostat and heating schedule.

- **Initial Start-up:** After installation and bleeding, turn on your central heating system. The radiator will gradually heat up.
- **Heat Output:** The radiator provides efficient heat distribution, warming your bathroom and drying towels.
- **Towel Drying:** Hang towels evenly across the radiator bars for optimal drying. Avoid overcrowding to ensure proper airflow and heat transfer.

Hoogwaardige Materialen

Milieuvriendelijke coating
Laag-koolstofstaal Interne beschermi



Image: Visual representation of the radiator's high heat output, designed for efficient heating performance.

Precieze Technieken

Voor naadloos lassen

360



Image: Detail showing the 60mm spacing between the flat tubes, contributing to a large surface area for enhanced heat output.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your EMKE towel radiator.

- **Cleaning:** Wipe the radiator regularly with a soft, damp cloth to remove dust and dirt. For stubborn marks, use a mild soap solution.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scouring pads, or chemical solvents, as these can damage the scratch-resistant and water-resistant coating.
- **Bleeding:** If you notice cold spots on the radiator or hear gurgling noises, it may indicate trapped air. Bleed the radiator using a radiator key until water flows out steadily.
- **System Check:** Periodically check the connections for any signs of leaks. Address any leaks immediately to prevent damage.

Groot Oppervlak

Verbeterd de warmteafgifte

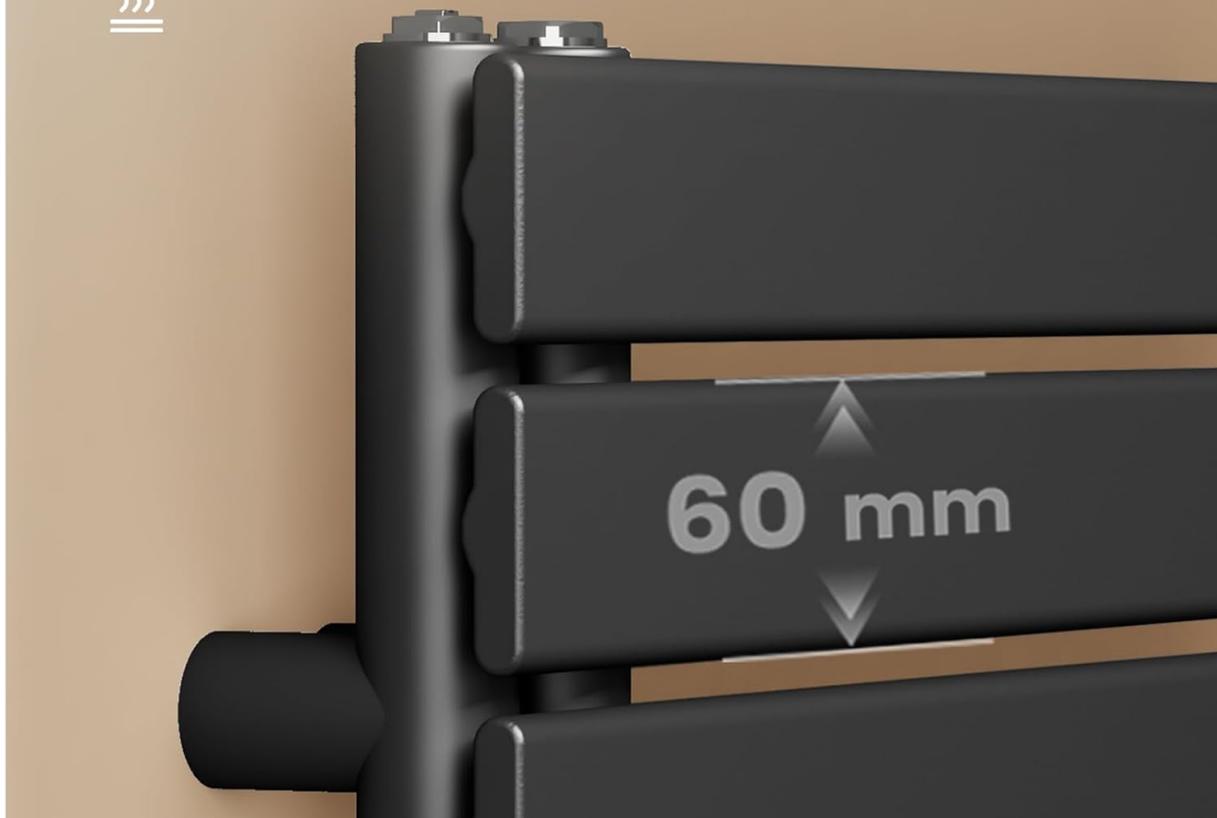


Image: Depiction of the radiator's high-quality materials, including an environmentally friendly coating and internal low-carbon steel for durability.

Veelzijdig inzetbaar



Badkamer

Baden in Warmte



Woonkamer

Leven in Constante Warmte



Slaapkamer

Slapen in rust en Warmte

Image: Illustration of the precise welding techniques employed for seamless and robust construction.

TROUBLESHOOTING

If you encounter issues with your EMKE towel radiator, refer to the following common troubleshooting steps:

- **Radiator Not Heating:**
 - Check if your central heating system is operational.
 - Ensure the radiator valves are fully open.
 - Bleed the radiator to release any trapped air.
- **Uneven Heating (Cold Spots):**
 - Bleed the radiator to remove air pockets.
 - Ensure the system pressure is adequate.
- **Leaking Connections:**
 - Tighten connections carefully. Do not overtighten.
 - If leaks persist, contact a qualified plumber.

For issues not resolved by these steps, please contact EMKE customer support.

SPECIFICATIONS

Feature	Specification
Model	762x400mm
Brand	EMKE
Color	Black
Dimensions (H x W x D)	76.2 x 40 x 5.9 cm
Power Type	Warm Water Central Heating
Heat Output (at $\Delta T=50$)	342 Watt
Suitable Area	3 m ²
Connection Distance	50 mm
Wall Distance (Adjustable)	99-115 mm
Material	High-quality, corrosion-resistant steel

Hoogte (mm)	Breedte (mm)	Uitgangsvermogen (Watt) bij $\Delta T=50$	Verwarmingsoppervlak (m ²)
762	400	342	3
	500	397	4
	600	479	5
1041	400	456	5
	500	529	5
	600	639	6
1320	400	570	6
	500	661	7
	600	798	8
1599	400	684	7
	500	794	8
	600	958	10

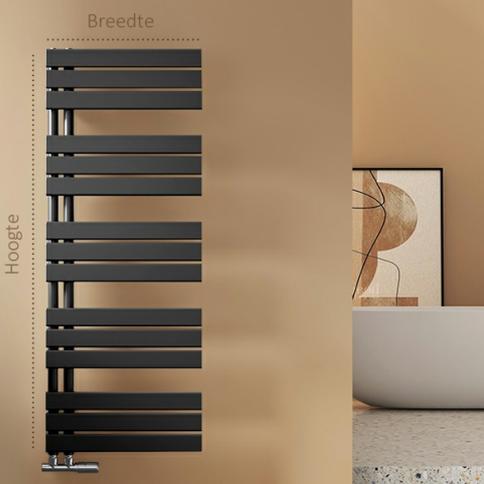


Image: Product information table detailing dimensions, heat output, and heating surface area for various EMKE radiator sizes.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact EMKE customer service. Keep your proof of purchase for any warranty claims.

EMKE is committed to providing quality products and customer satisfaction. For assistance, please refer to the contact information provided with your purchase or visit the official EMKE website.

