

[manuals.plus](#) /› [BELLA](#) /› **BELLA 3.5 Qt Hand & Stand Mixer Instruction Manual - Model 35196**

## BELLA 35196

# BELLA 3.5 Qt Hand & Stand Mixer Instruction Manual

Model: 35196 | Brand: BELLA

## 1. INTRODUCTION

Thank you for choosing the BELLA 3.5 Qt Hand & Stand Mixer. This versatile 2-in-1 electric mixer is designed to simplify your baking and cooking tasks, offering both handheld convenience and stationary mixing power. Please read this manual thoroughly before use to ensure safe and efficient operation.

## 2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the mixer.
- To protect against electrical shock, do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils away from bowl while mixing to reduce the risk of injury to persons or damage to the mixer.
- Never add ingredients while the mixer is operating at high speed.
- Do not use the mixer for anything other than its intended use.

## 3. PRODUCT COMPONENTS

The BELLA 3.5 Qt Hand & Stand Mixer includes the following parts:

- Removable Hand Mixer Unit

- Stand Base with Suction Feet
- 3.5 Qt Stainless Steel Mixing Bowl
- 3.5 Qt Plastic Mixing Bowl
- 2 Egg Beaters
- 2 Dough Hooks
- Cover Plate (doubles as bench scraper/dough cutter)



Image: All components of the BELLA 3.5 Qt Hand & Stand Mixer, including the removable hand mixer, two types of bowls, beaters, dough hooks, and the multi-use cover plate.

## 4. SETUP

Before first use, wash all removable parts (bowls, beaters, dough hooks, cover plate) in warm, soapy water or in the dishwasher. Wipe the motor unit with a damp cloth. Ensure all parts are completely dry before assembly.

### Assembling for Stand Mixer Use:

1. Place the stand base on a clean, dry, and stable surface. The suction feet on the bottom will help secure it.
2. Choose either the stainless steel or plastic mixing bowl and place it into the stand base. Ensure it is seated correctly.
3. Insert the desired attachments (beaters or dough hooks) into the hand mixer unit until they click into place.

4. Align the hand mixer unit with the opening on the stand base cover. Gently lower the hand mixer into the base until it locks securely. Ensure the gears on the hand mixer align with the gear system in the base.
5. Place the cover plate onto the stand base, aligning the viewing window over the bowl.

### **Assembling for Hand Mixer Use:**

1. To detach the hand mixer from the stand base, press the release button located on the hand mixer unit. Lift the hand mixer away from the base.
2. Insert the desired attachments (beaters or dough hooks) into the hand mixer unit until they click into place.

## **5. OPERATING INSTRUCTIONS**

---

### **Using the Stand Mixer:**

1. Ensure the mixer is properly assembled in stand mode and placed on a stable surface.
2. Add your ingredients to the mixing bowl.
3. Plug the mixer into a standard electrical outlet.
4. Select the desired speed using the speed control dial on the hand mixer unit (0-6 speeds). The bowl will rotate automatically during mixing, ensuring thorough incorporation of ingredients.
5. For quick bursts of power, press the 'TURBO' button.
6. To add ingredients while mixing, open the viewing window on the cover plate.
7. When finished, turn the speed dial to '0' and unplug the mixer.

---

Video: An overview of the BELLA Hand & Stand Mixer, demonstrating its 2-in-1 functionality, speed settings, and how the bowl rotates during mixing. This video highlights the product's features and ease of use.

### **Using the Hand Mixer:**

1. Ensure the hand mixer unit is detached from the stand base.
2. Insert the desired attachments (beaters or dough hooks).
3. Plug the hand mixer into a standard electrical outlet.
4. Hold the hand mixer firmly and immerse the attachments into your ingredients.
5. Select the desired speed using the speed control dial.
6. When finished, turn the speed dial to '0' and unplug the mixer.



**Easy storage**  
**All components fit comfortably inside**  
**the bowl for clutter-free storage**

Image: The BELLA mixer demonstrating its dual functionality, showing it configured as a stand mixer for kneading dough and as a handheld mixer for whipping batter.

## 6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your mixer.

- Always unplug the mixer before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- **Bowls, Beaters, Dough Hooks, and Cover Plate:** These parts are dishwasher safe for easy cleaning. Alternatively, they can be washed by hand in warm, soapy water.
- **Bench Scraper/Dough Cutter:** The removable part of the cover plate can be used as a bench scraper or dough cutter and is also dishwasher safe.
- Ensure all parts are completely dry before reassembling or storing.

## 7. STORAGE

The BELLA 3.5 Qt Hand & Stand Mixer is designed for compact, clutter-free storage. All components nest neatly inside the bowls.

1. Ensure all parts are clean and dry.

2. Place the hand mixer unit inside the stainless steel bowl.
3. Place the beaters and dough hooks into the designated storage compartments within the cover plate.
4. Place the stainless steel bowl (with the hand mixer inside) into the plastic bowl.
5. Secure the cover plate onto the top of the plastic bowl by twisting it to lock.



**Large capacity  
Two 3.5qt bowls to handle  
all your mixing needs**

Image: The BELLA mixer fully assembled for compact storage, with the hand mixer unit, beaters, and dough hooks neatly stored inside the mixing bowls, covered by the lid.

Video: This video demonstrates the space-saving design of the BELLA 2-in-1 Stand Mixer, showing how all its components can be neatly stored within the main bowl, making it ideal for small kitchens.

## 8. TROUBLESHOOTING

If you encounter issues with your mixer, please refer to the following common solutions:

| Problem                 | Possible Cause   | Solution  |
|-------------------------|--|---|
| Mixer does not turn on. | Not plugged in; power outlet not working; unit not properly assembled. | Ensure the power cord is securely plugged into a working outlet.<br>Check if the hand mixer unit is correctly locked into the stand base. |

| Problem  | Possible Cause  | Solution  |
|--|---|---|
| Attachments are difficult to insert or remove. | Attachments are not aligned correctly; release button not fully pressed.    | Ensure attachments are aligned with the correct slots. Press the release button firmly when removing attachments.   |
| Bowl does not rotate in stand mode.            | Bowl not seated correctly; gears not engaged.                               | Ensure the mixing bowl is fully seated in the base and the hand mixer unit is properly locked into place, engaging the gears.   |
| Mixer seems to struggle with ingredients.      | Too many ingredients; ingredients too thick/heavy; incorrect speed setting. | Reduce the amount of ingredients. For heavy doughs, use dough hooks and a lower speed setting initially, gradually increasing. Ensure ingredients are at room temperature if specified by recipe. |

## 9. SPECIFICATIONS

- **Brand:** BELLA
- **Model Name:** Hand Mixer
- **Model Number:** 35196
- **Capacity:** 3.5 Quarts
- **Power:** 200 Watt
- **Controls Type:** Touch (Speed Dial)
- **Special Features:** Adjustable Speed Control, Removable Bowl, 2-in-1 Hand & Stand Functionality, Compact Storage, Suction Feet, Viewing Window, Multi-use Cover Plate
- **Product Dimensions:** 9.65"D x 10.55"W x 12.28"H
- **Item Weight:** 4.59 pounds
- **Dishwasher Safe Parts:** Yes (Bowls, Beaters, Dough Hooks, Cover Plate)
- **UPC:** 829486351969

## 10. WARRANTY AND SUPPORT

The BELLA 3.5 Qt Hand & Stand Mixer comes with a **2-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. For warranty claims, technical support, or any questions regarding your product, please contact BELLA customer service through their official website or the contact information provided with your purchase documentation.

Please retain your proof of purchase for warranty purposes.