

[Manuals.plus](#) /

› [SHLUCE](#) /

› SHLUCE FLA007A-WH Caged Low Profile Ceiling Fan with Light User Manual

SHLUCE FLA007A-WH

SHLUCE FLA007A-WH Caged Low Profile Ceiling Fan with Light User Manual

Model: FLA007A-WH

INTRODUCTION

Thank you for choosing the SHLUCE FLA007A-WH Caged Low Profile Ceiling Fan with Light. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before beginning installation or use, and retain this manual for future reference.



Image: The SHLUCE FLA007A-WH ceiling fan installed, demonstrating its airflow and the included remote control.

SAFETY INFORMATION

- Always disconnect power at the circuit breaker before installation or servicing.
- Ensure all electrical connections comply with local codes and ordinances.
- Consult a qualified electrician if you are unsure about wiring procedures.
- Mount the fan to a structurally sound ceiling joist or outlet box rated for fan support.
- Do not insert objects into the fan blades while the fan is operating.
- Ensure the fan is installed at a height where blades are at least 7 feet (2.1 meters) from the floor.

WHAT'S IN THE BOX

Verify that all components are present before beginning installation:


- Low Profile Ceiling Fan with Light Unit
- Remote Control
- Mounting Hardware
- Instruction Manual (this document)

SETUP AND INSTALLATION

The SHLUCE FLA007A-WH ceiling fan is designed for straightforward installation, with most functional components pre-assembled. Follow these steps for proper setup:

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Clear the installation area.
2. **Mounting Bracket Installation:** Secure the mounting bracket to the ceiling outlet box. Ensure the box is rated for ceiling fan support.
3. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to the provided wiring diagram in the separate quick installation instructions. For easier wiring, consider temporarily hanging the fan using an additional wire (e.g., a coat hanger) after the hanger is secure, allowing both hands to connect wire nuts.
4. **Secure the Fan Unit:** Attach the fan unit to the mounting bracket. A small dab of super glue on the end of a Philips head screwdriver can assist in attaching the locking screws for easier installation.
5. **Install Light Bulbs:** Insert four E26 base light bulbs (not included) into the sockets.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

Product Specifications

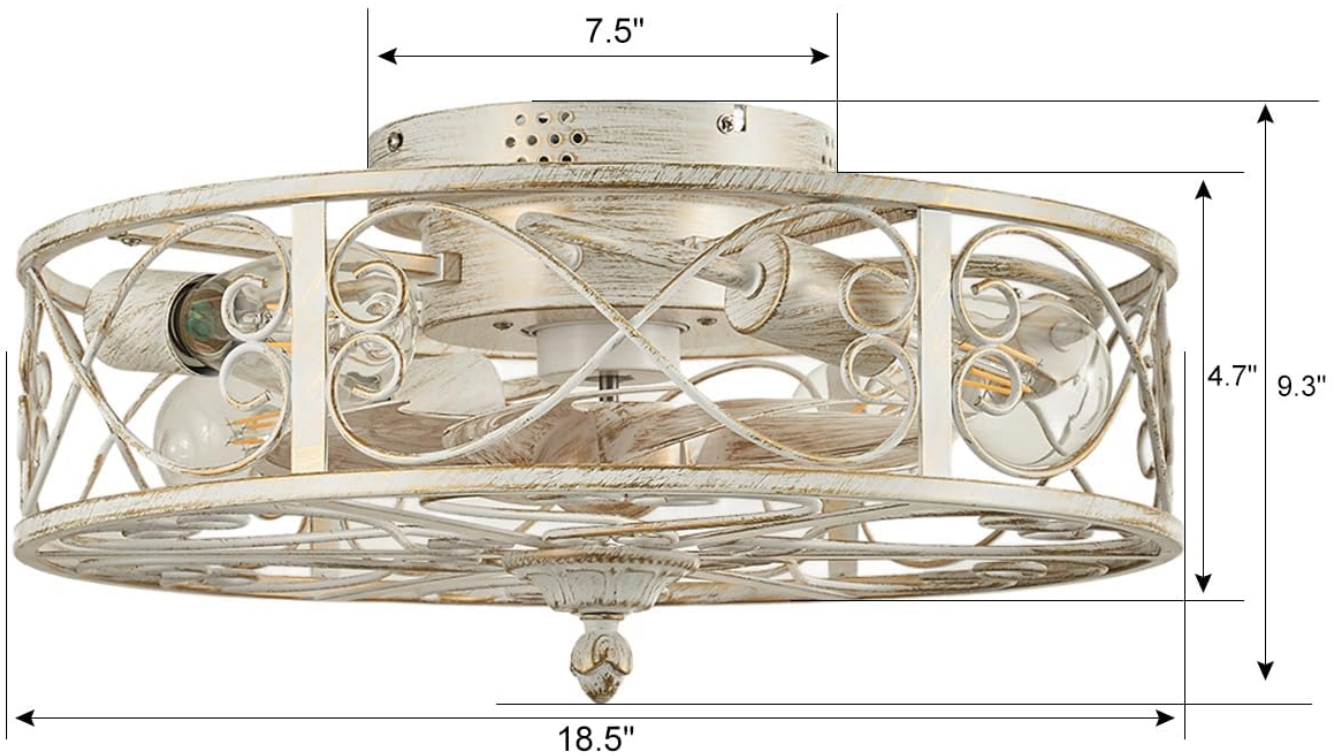

6 Speed + Natural Wind



4xE26 Base(More Brighter)



Reversible Motor



Timing 2/4H



Easy to Install(Already Assembled)



Mute: No beeping

Image: Product specifications including dimensions (18.5" diameter, 9.3" height) and features like 6 speeds, 4 E26 light bases, reversible motor, timing, and easy installation.

OPERATING INSTRUCTIONS

Your SHLUCE ceiling fan is controlled by the included remote. Ensure 2*AAA batteries (not included) are installed in the remote control.

Remote Control Functions



Image: Detailed layout of the remote control, indicating buttons for power, light, fan speed, direction, mute, and timer.

- **ALL ON/OFF:** Turns the lights and fan on/off simultaneously.
- **Light On/Off:** Controls the light function independently. Note: The light function does not include a dimmer.
- **Fan Reverse Transmission (R):** Changes the fan direction for updraft mode.
- **Fan Forward Transmission (F):** Changes the fan direction for downdraft mode.
- **Mute:** Activates/deactivates the no-beeping mode.
- **Fan On/Off:** Controls the fan function independently.
- **Fan Speed Control (LV1-6):** Adjusts the fan speed from 1 (gentle) to 6 (strong).
- **Natural Wind:** Activates a fluctuating fan speed to simulate natural breezes.
- **Timer (2H/4H):** Sets the fan and light to automatically turn off after 2 or 4 hours.

Fan Speed Settings

The fan offers 6 speed settings to suit your comfort needs:

- **Speeds 1-2:** Gentle wind, ideal for sleeping or minimal air circulation.
- **Speeds 3-4:** Comfortable wind, suitable for general use.
- **Speeds 5-6:** Strong wind, for maximum cooling effect.



Image: Visual representation of the fan's 6 speed settings, highlighting quiet operation and timing features.

Reversible Motor Function

The fan features a reversible motor for year-round comfort:

- **Downdraft Mode (Summer):** Fan blades rotate counter-clockwise, pushing cool air downwards to create a cooling breeze.
- **Updraft Mode (Winter):** Fan blades rotate clockwise, drawing air up towards the ceiling to circulate warm air more efficiently.

Reversible Motor



Image: Illustration of the fan's reversible motor, demonstrating how downdraft mode provides cold airflow in summer and updraft mode provides better airflow in winter.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically wipe the fan and light fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Blade Cleaning:** Gently clean the fan blades to prevent dust buildup, which can affect balance and airflow.
- **Tighten Fasteners:** Check all screws and fasteners annually to ensure they are secure.
- **Bulb Replacement:** Replace E26 bulbs as needed. Ensure power is off before changing bulbs.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common troubleshooting steps:

- **Fan Does Not Operate:**
 - Check that the power is on at the circuit breaker.
 - Ensure all wiring connections are secure.
 - Verify that the remote control batteries are correctly installed and not depleted.
- **Lights Do Not Work:**
 - Check the light bulb connections and ensure bulbs are not burnt out.
 - Confirm power is supplied to the fixture.
- **Fan Makes Clicking Sound:** A slight clicking sound may occur when the fan is first started, but it should dissipate shortly after operation begins. If the sound persists, ensure all mounting hardware is tightened.
- **Excessive Wobbling:** Ensure the fan is securely mounted to a proper ceiling support. Check that all blade screws are tight.

SPECIFICATIONS

Brand	SHLUCÉ
Model Name	FLA007A-WH
Color	White
Material	Metal
Style	Farmhouse / Rustic / Industrial
Light Fixture Form	Ceiling Fan Light
Product Dimensions	18.5"L x 18.5"W x 9.3"H
Indoor/Outdoor Usage	Indoor
Power Source	DC
Control Method	Remote
Voltage	110 Volts (DC)
Wattage	40 watts
Bulb Base	E26 (bulbs not included)
Item Weight	9.5 Pounds
Assembly Required	No (most functional components pre-assembled)
Batteries Required	Yes (2*AAA for remote, not included)

WARRANTY AND SUPPORT

SHLUCÉ provides a **2-year warranty** and a **30-day refund policy** for this product. We also offer free spare parts support. If you experience any issues, such as lost, defective, or missing parts (e.g., remote control), please contact SHLUCÉ customer support through your Amazon order details. Our team is available to assist you with any concerns or questions regarding your ceiling fan.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question