Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SINGMOOD /
- > SINGMOOD s63 Portable Karaoke Machine User Manual

SINGMOOD s63

SINGMOOD s63 Portable Karaoke Machine User Manual

1. Introduction

This manual provides comprehensive instructions for the safe and efficient operation of your SINGMOOD s63 Portable Karaoke Machine. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: The SINGMOOD s63 Portable Karaoke Machine, featuring its integrated screen and two wireless microphones.

2. PRODUCT OVERVIEW

Key Features:

- Integrated 14.1-inch Touch Screen: For lyrics display, video streaming, and settings adjustment.
- Dual Wireless UHF Microphones: Deliver crystal-clear sound with stable and fast connection.
- Powerful Audio Output: Up to 1000W peak power for immersive sound.
- Versatile Connectivity: Supports Bluetooth, HDMI, USB, TF Card, Live 3.5mm, Headset, and Live OTG.
- Android OS: Access to YouTube, Spotify, Apple Music, Chrome, and Google Play Store for various applications.
- Portable Design: Built-in handle and wheels for easy transport.
- 32-bit Digital Audio Decoder Chip: Ensures high-quality, clear, and full-bodied sound.

What's Included:

- SINGMOOD s63 Karaoke Machine
- 2x UHF Wireless Microphones
- Power Adapter
- User Manual
- 1x 12V Battery (pre-installed)



Figure 2: Package contents for the SINGMOOD s63 Karaoke Machine.

3. SETUP

3.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the karaoke machine and accessories for any signs of damage. Ensure all listed items in the 'What's Included' section are present.

3.2 Initial Charging

Before first use, fully charge the karaoke machine using the provided power adapter. Connect the adapter to the DC

12V IN port on the control panel and plug it into a power outlet. The charging indicator will illuminate.

3.3 Microphone Setup

The wireless UHF microphones come with rechargeable batteries. To activate a microphone, press and hold the power button on the microphone. The microphone will automatically pair with the karaoke machine. Ensure microphones are charged via their Type-C ports when low on battery.

3.4 Network Connectivity

To access online content, connect the machine to a Wi-Fi network. Navigate to 'Settings' on the touch screen, then 'Network & Internet', and select your preferred Wi-Fi network. The device supports both 2.4GHz and 5GHz Wi-Fi for stable streaming.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To power on the machine, locate the red 'POWER' switch on the control panel and toggle it to the 'ON' position. To power off, toggle the switch to 'OFF'.

4.2 Using the Touch Screen

The 14.1-inch full-touch display operates on an Android OS. You can navigate through applications like YouTube, Spotify, Apple Music, and Chrome directly from the home screen. Use the 'Play Store' to download additional apps.

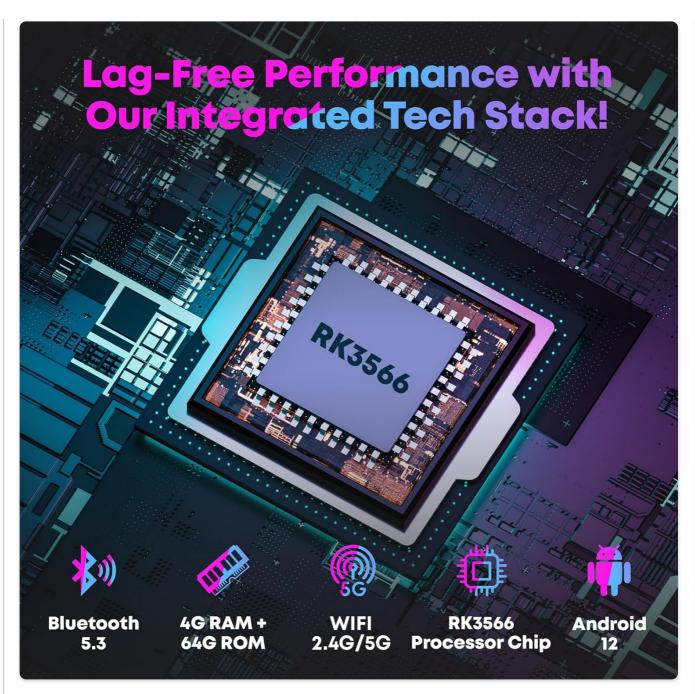


Figure 3: The intuitive touch screen interface of the SINGMOOD s63.

4.3 Microphone Functions

The control panel features dedicated knobs for microphone volume, bass, treble, echo, and delay. Adjust these to customize your vocal output. The 'Magic' button allows for voice effects (e.g., chipmunk, monster voice).

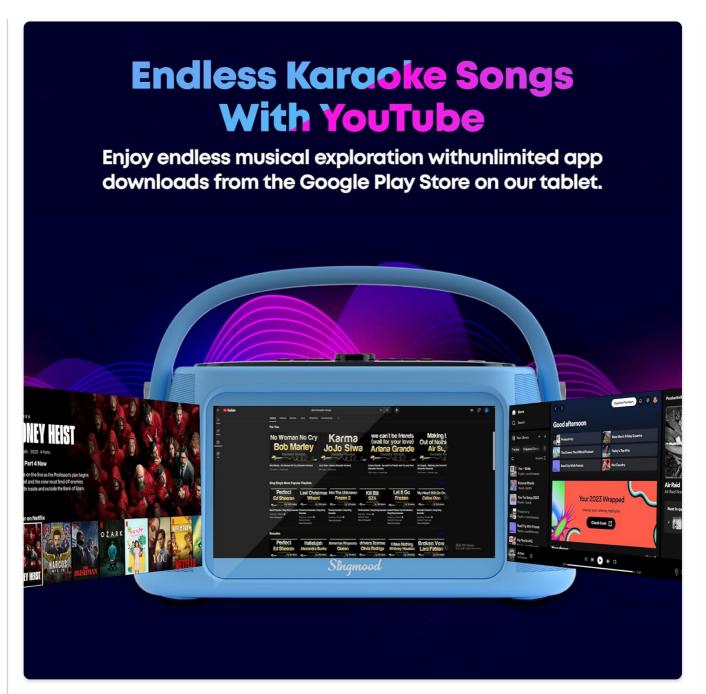


Figure 4: Detailed view of the control panel with microphone and music adjustment knobs.

4.4 Media Playback

Utilize the pre-installed apps like YouTube and Spotify for streaming karaoke songs and music. Local media files can be played via the 'MediaPlayer' app, supporting USB drives or TF cards inserted into the respective ports.

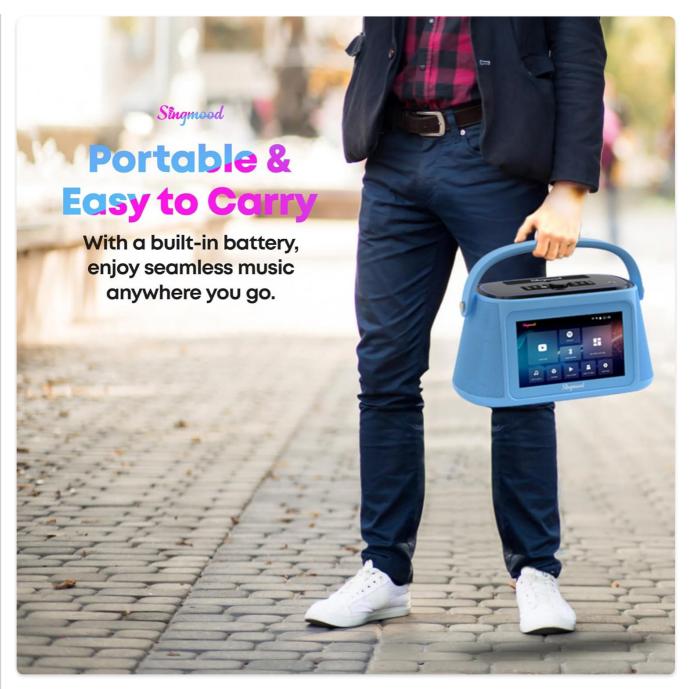


Figure 5: Accessing endless karaoke songs through YouTube on the integrated screen.

4.5 External Connections

The machine supports HDMI output for screen projection to an external TV or monitor. Connect external devices like guitars via the GT.IN port or headphones via the HEADSET port for private monitoring.



Figure 6: Screen projection to an external display via HDMI.

Video 1: Demonstration of playing songs from YouTube on the karaoke machine.

5. MAINTENANCE

5.1 Cleaning

Wipe the exterior of the machine and screen with a soft, dry cloth. Avoid using abrasive cleaners or solvents. For the microphone grilles, use a soft brush to gently remove any debris.

5.2 Battery Care

To prolong battery life, avoid fully discharging the machine frequently. Store the machine in a cool, dry place when not in use for extended periods. Recharge the battery periodically if stored for a long time.

6. TROUBLESHOOTING

6.1 No Sound Output

- Check if the master volume is turned up.
- Ensure microphones are powered on and paired.
- Verify external audio sources are correctly connected and playing.

6.2 Microphone Feedback

- Lower the microphone volume.
- Adjust the mic treble, echo, and delay settings on the control panel.
- Ensure microphones are not too close to the speaker.

6.3 Wi-Fi Connectivity Issues

- Check if the Wi-Fi is enabled in the settings.
- Ensure the machine is within range of your Wi-Fi router.
- Restart the machine and your Wi-Fi router.

7. SPECIFICATIONS

| Feature | Detail |
|--------------------|--|
| Model Number | s63 |
| Item Weight | 23 pounds |
| Product Dimensions | 12 x 7 x 16 inches |
| Screen Size | 14.1 inches |
| Peak Power | 1000W |
| RAM | 4GB |
| ROM | 64GB |
| Processor Chip | RK3566 |
| Bluetooth Version | 5.3 |
| Wi-Fi Support | 2.4G/5G |
| Batteries | 1 12V battery (included) |
| Compatible Devices | Headphones, Microphones, Smartphone/Tablet, Television |
| Connector Type | HDMI |

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact SINGMOOD customer service directly. Protection plans are available for purchase separately.



SINGMOOD S-330 Bluetooth Karaoke Machine User Manual

Comprehensive user guide for the SINGMOOD S-330 portable Bluetooth karaoke machine, featuring dual wireless microphones, TV connectivity, and adjustable sound controls. Includes setup, operation, troubleshooting, and safety information.



Singmood Singfinity S-68 Karaoke Machine User Manual

Comprehensive user manual for the Singmood Singfinity S-68 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting.



BMW Engine Oil Guide: Part Number Transition and 2016 Model Year Oils

This guide details the transition of BMW engine oil part numbers and specifies recommended engine oils for Model Year 2016 and newer BMW vehicles, including quick reference charts for gasoline and diesel engines.



SVAKOM Alex Neo User Manual and Safety Information

Comprehensive guide for the SVAKOM Alex Neo, including operating instructions, safety precautions, maintenance, and international certifications. Learn how to use, clean, and care for your device to ensure optimal performance and longevity.



SVAKOM Alex Neo User Manual - Intelligent Personal Massager

Comprehensive user manual for the SVAKOM Alex Neo, detailing setup, operation, safety guidelines, maintenance, and European compliance standards for this intelligent personal massager.