

Vonesse B0FB3KRQ6P

Vonesse Gaming Chair Instruction Manual

Model: B0FB3KRQ6P

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Always assemble the chair according to the provided instructions for stability and safety.
- Do not exceed the maximum weight recommendation of **250 pounds (113 kg)**.
- Ensure all screws and bolts are tightened securely before use and check periodically.
- Keep children and pets away from the assembly area.
- Avoid standing on the chair or using it as a step stool.

1. SETUP AND ASSEMBLY

Your Vonesse Gaming Chair comes with all necessary tools and step-by-step instructions for assembly. Please follow the included guide carefully.

1.1 Unboxing and Component Check

Carefully open the packaging and remove all components. Lay them out on a clean, flat surface. Refer to the parts list in your included assembly guide to ensure all pieces are present and undamaged.

1.2 Assembly Steps

1. Attach the casters to the chair base.
2. Insert the gas lift into the center of the chair base.
3. Assemble the seat and backrest components as per the detailed diagrams.
4. Connect the assembled seat and backrest to the gas lift.
5. Ensure all connections are secure and stable before use.



Image: The Vonesse Gaming Chair set up in a gaming environment, showcasing its design and presence.

2. OPERATING INSTRUCTIONS

The Vonesse Gaming Chair offers multiple adjustable features for personalized comfort.

2.1 Seat Height Adjustment

To adjust the seat height, locate the lever under the seat on the right side. While seated, pull the lever up to lower the seat. To raise the seat, stand up and pull the lever up. Release the lever at the desired height.

2.2 Backrest Recline Function

The backrest can be reclined between 90° and 155°. Pull the recline lever, typically located on the left side under the seat, and lean back to your desired angle. Release the lever to lock the backrest in position. To return to an upright position, pull the lever and lean forward.



Image: Visual representation of the chair's adjustable backrest (90-155 degrees) and 360-degree swivel capability.

2.3 Retractable Footrest

To deploy the footrest, pull it out from under the seat. Extend it to your preferred length. To retract, push it back under the seat until it is fully stored.

2.4 Lumbar Massage Function

The adjustable lumbar support includes a built-in massage function. Connect the USB cable from the lumbar pillow to a compatible USB power source (e.g., power bank, computer USB port, or wall adapter). Press the button on the massage unit to activate or deactivate the massage.

2.5 Armrest Adjustment

The chair features linkage armrests that move with the recline of the backrest, providing continuous support.

DESIGNED

LINKAGE ARMREST



Image: Detail of the linkage armrests, designed to move with the chair's recline for consistent support.

2.6 360-Degree Swivel

The chair is designed to swivel 360 degrees for ease of movement and multi-tasking convenience.

2.7 Product Video Overview

Your browser does not support the video tag.

Video: An official Vonesse product video demonstrating the reclining and footrest features of the gaming chair.

3. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your Vonesse Gaming Chair.

- **Cleaning Fabric Surfaces:** The chair features a soft and breathable fabric. For general cleaning, use a soft brush or vacuum cleaner to remove dust and debris. For spills, gently blot with a clean, damp cloth and mild soap solution.

Avoid harsh chemicals or abrasive cleaners.

- **Checking Connections:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent wobbling.
- **Caster Care:** Keep the casters free from hair and debris to ensure smooth movement.
- **Gas Lift:** The gas lift is designed for durability. Avoid excessive force when adjusting height.



Image: Detail of the chair's fabric and cushion, highlighting its breathable and easy-to-clean properties.

4. TROUBLESHOOTING

If you encounter any issues with your Vonesse Gaming Chair, refer to the following common solutions:

- **Chair is Wobbly:**
Ensure all assembly screws are fully tightened. Check the connection between the seat mechanism and the gas lift.
- **Chair Does Not Recline:**
Verify that the recline lever is functioning correctly and not obstructed. Ensure no foreign objects are preventing the

mechanism from engaging.

• **Seat Height Adjustment Not Working:**

Check if the gas lift lever is properly engaged. If the chair is new, ensure the protective cap on the gas lift piston has been removed during assembly.

• **Massage Function Not Activating:**

Confirm the USB cable is securely connected to a working power source. Try a different USB port or power adapter.

• **Squeaking Noises:**

Apply a small amount of silicone lubricant to moving parts, such as the recline mechanism or caster stems. Ensure all bolts are tightened.

If these steps do not resolve the issue, please contact Vonesse customer service for further assistance.

5. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Vonesse
Model Number	B0FB3KRQ6P
Color	Black
Material	Textile (Fabric), Foam, Metal Frame
Product Dimensions (D x W x H)	19.2"D x 25.6"W x 48"H
Item Weight	44 pounds (20 kg)
Maximum Weight Recommendation	250 pounds (113 kg)
Reclining Angle	90° to 155°
Additional Features	Adjustable Height, Ergonomic Design, Retractable Foot Rest, Massage Lumbar Support, 360° Swivel
Included Components	Chair components, Assembly tools, Arm Pad

DIMENSIONS



	Recommended	Max Load
 Size	5-6.2 FT	6.3 FT
 Weight	100LBS-250 LBS	300 LBS

Note: There will be errors in the data due to manual measurement

Image: Diagram illustrating the key dimensions of the Vonesse Gaming Chair, including height, width, and depth.



Image: Cross-section view highlighting the internal pocket spring cushion design for enhanced support and comfort.

6. WARRANTY AND SUPPORT

Vonesse is committed to customer satisfaction. Your gaming chair is covered by the following:

- **30-Day Policy:** A 30-day replacement or refund policy from the date of purchase.
- **1-Year Repair Service:** A 1-year repair service for manufacturing defects.

For warranty claims or technical support, please contact our customer service team. Have your purchase receipt and model number (B0FB3KRQ6P) ready for faster service.

7. CONTACT INFORMATION

For any inquiries, support, or feedback, please reach out to Vonesse customer service. Our team is ready to provide efficient and timely assistance.

Please refer to your purchase platform or the Vonesse official website for the most current contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FB3KFBCJ>

More documents and user manuals: <https://manuals.plus/>