

[Manuals.plus](#) /

› [SakerPlus](#) /

› SakerPlus Portable Cordless Pressure Washer User Manual (20000mAh Model)

SakerPlus CP91954-X62590

SakerPlus Portable Cordless Pressure Washer User Manual

Model: CP91954-X62590 (20000mAh Battery)

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your SakerPlus Portable Cordless Pressure Washer. Please read this manual thoroughly before using the product and retain it for future reference.



Image 1: SakerPlus Portable Cordless Pressure Washer with main components including the washer unit, hose, charger, and various nozzles.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses, when operating the pressure washer.
- Do not direct the water jet at people, pets, electrical devices, or the unit itself.
- Ensure all connections are secure before operation to prevent leaks and maintain pressure.
- Keep children and bystanders away from the operating area.
- Do not operate the pressure washer if any parts are damaged or missing.
- Use only the charger provided for the battery.
- Store the pressure washer in a dry, secure location when not in use.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Portable Cordless Pressure Washer Unit
- 20000mAh Lithium-Ion Battery (pre-installed or separate)
- Battery Charger
- 6-in-1 Adjustable Nozzle
- 16.4 ft (5m) Drain Hose with Filter Basket
- Foam Pot/Soap Bottle
- Quick Connectors and Adapters
- User Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your pressure washer before first use:

1. **Charge the Battery:** Ensure the battery is fully charged before use. Connect the charger to the battery and a power outlet. The indicator light on the charger will show charging status.
2. **Install the Battery:** Slide the charged battery into the battery compartment on the bottom of the pressure washer handle until it clicks securely into place.
3. **Connect the Outlet Pipe:** Attach the metal outlet pipe to the main pressure washer unit. Twist until secure.
4. **Attach the Nozzle:** Select the desired nozzle (e.g., the 6-in-1 adjustable nozzle) and attach it to the end of the outlet pipe. Ensure it is firmly connected.
5. **Connect the Water Hose:**
 - Attach one end of the 16.4 ft drain hose to the water inlet on the pressure washer unit using the quick connector.
 - Place the filter basket end of the hose into your water source (e.g., a bucket of water, a pool, or a river). The filter basket prevents debris from entering the pump.



Image 2: Visual guide for assembling the pressure washer components, including connecting the outlet pipe, hose, and nozzle.

2 METHODS OF WATER DRAWING



**Flexible
Switch**



**Convenient
Water Access**



Image 3: Illustration of flexible water source options, showing the pressure washer drawing water from a bucket and a pool.



Image 4: Detail of the upgraded filter, designed to efficiently remove impurities like leaf debris, dust, and sand from the water source.

5. OPERATING INSTRUCTIONS

Once assembled and connected to a water source, your SakerPlus pressure washer is ready for use.

5.1 Powering On and Priming

- Ensure the battery is securely installed.
- Submerge the filter basket end of the hose completely in water.
- Press and hold the trigger to start the pump. It may take a few seconds for water to flow consistently as the system primes.

5.2 Adjusting the Nozzle

The 6-in-1 adjustable nozzle allows you to select various spray patterns for different cleaning tasks:

- **0° High Pressure Jet:** For concentrated, powerful cleaning of stubborn dirt.
- **15° Small Fan Spray:** A narrow fan for focused cleaning.

- **25° Medium Fan Spray:** A balanced spray for general cleaning.
- **40° Large Fan Spray:** A wider spray for gentle cleaning or rinsing large areas.
- **Straight Mode:** For quickly washing away standing water or sediment.
- **Shower Mode:** A gentle, wide spray suitable for watering plants or delicate surfaces.

Rotate the nozzle head to switch between these modes. Always test the spray pattern on an inconspicuous area first.



Image 5: Detailed view of the 6-in-1 multifunctional nozzle, illustrating its various spray patterns for diverse cleaning needs.

5.3 Using the Foam Pot

For applying soap or cleaning solutions:

1. Fill the foam pot with your desired cleaning solution.
2. Attach the foam pot to the pressure washer unit in place of the standard nozzle.
3. Press the trigger to spray foam onto the surface.
4. After applying foam, remove the foam pot and reattach the adjustable nozzle to rinse the surface with water.

5.4 General Cleaning Applications

The SakerPlus pressure washer is suitable for various tasks:

- **Car Washing:** Use a wide fan spray (25° or 40°) for general rinsing, and the foam pot for soap application.
- **Floor and Wall Cleaning:** Adjust the spray to match the surface and dirt level.
- **Garden Furniture:** Use a gentle spray (shower mode or 40°) to avoid damage.
- **Plant Irrigation:** The shower mode provides a soft, wide spray for watering.

APPLICABLE TO MORE SCENARIOS



Portable Car Washing



Motorcycle Washing



Balcony Washing



Wall Washing



Plant Irrigation



Furniture Cleaning

Image 6: Examples of various applications for the pressure washer, including vehicle cleaning, outdoor surface washing, and plant care.

5.5 Product Demonstration Video

Your browser does not support the video tag.

Video 1: A demonstration of the SakerPlus Portable Cordless Pressure Washer, showcasing its 6-in-1 nozzle, foam jetting, and various cleaning applications.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your pressure washer.

- **After Each Use:**
 - Disconnect the water hose and remove the battery.
 - Run the pressure washer for a few seconds to clear any remaining water from the pump and hose.
 - Clean the filter basket to remove any trapped debris.
 - Wipe down the unit with a damp cloth.
- **Battery Care:**
 - Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
 - Do not store the battery completely discharged. Charge it periodically if not used for extended periods.
- **Storage:** Store the pressure washer and all accessories in a dry, frost-free environment.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not start	Battery not charged or improperly installed.	Ensure battery is fully charged and correctly inserted.
No water flow or low pressure	Water source empty or hose kinked. Filter basket clogged. Air in the pump (not primed). Nozzle clogged.	Check water source and straighten hose. Clean the filter basket. Run unit for a few seconds with hose submerged to prime. Clean or replace the nozzle.
Water leaks from connections	Loose connections or worn O-rings.	Tighten all connections. Inspect and replace O-rings if damaged.

8. SPECIFICATIONS

Feature	Detail
Model Number	CP91954-X62590
Brand	SakerPlus
Power Source	Battery Powered (Lithium Ion)
Battery Capacity	20000mAh (as per product variant)
Maximum Pressure	36 bar (520 psi)
Hose Length	16.4 ft (5m)
Product Dimensions	14.96"L x 14.96"W x 10.2"H
Item Weight	3.9 pounds

9. WARRANTY INFORMATION

SakerPlus products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official SakerPlus website. Keep your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue, please contact SakerPlus customer support through the following channels:

- **Website:** Visit the [SakerPlus Store on Amazon](#) for product information and support.
- **Email:** Refer to your product packaging or warranty card for direct email support.

© 2025 SakerPlus. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question