

[Manuals.plus](#) /

› [Pinmoco](#) /

› Pinmoco 47-inch TV Stand with LED Lights (Model L103720X) Instruction Manual

Pinmoco L103720X

Pinmoco 47-inch TV Stand with LED Lights Instruction Manual

Model: L103720X

INTRODUCTION

Welcome to your new Pinmoco 47-inch TV Stand. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your product. Please read all instructions carefully before beginning assembly or use.


SAFETY INFORMATION

Adhering to these safety guidelines is crucial for preventing injury and damage to the product.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 248 pounds (112.5 kg) for the entire unit. Ensure the TV placed on top does not exceed this limit.
- **Anti-Tip Kit:** Always use the included anti-tip kit to secure the TV stand to the wall. This prevents accidental tipping, especially in households with children or pets.
- **Assembly:** Ensure all screws and fasteners are tightened securely during assembly. Periodically check all connections for tightness.
- **Small Parts:** Keep all small parts and hardware away from children to prevent choking hazards.
- **Surface Protection:** Assemble the unit on a soft, clean surface (e.g., a carpet or blanket) to prevent scratches or damage to the product.
- **Assistance:** Two people are recommended for assembly to ensure safety and ease of construction.



High Gloss Finish

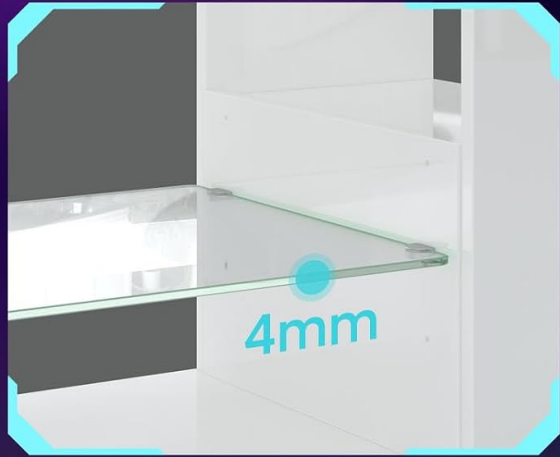

4mm Tempered Glass



Easy to Clean



Anti-Tipping Design

The image illustrates key features including the anti-tipping design for safety, the high gloss finish, the 4mm tempered glass, and the easy-to-clean surface of the TV stand.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Hardware (Quantities may include spares):

- A: Cam Lock Screws (x16)
- B: Cam Locks (x16)
- C: Wooden Dowels (x20)
- D: Small Screws (x8)
- E: Medium Screws (x12)
- F: Large Screws (x8)
- G: LED Strip Screws (x10)
- H: Feet (x4)
- W1, W2, W3, W4: Anti-tip Kit Components (screws, anchors, brackets, strap)

Panels and LED Components:

- 1: Top Panel (x1)
- 2: Bottom Panel (x1)
- 3: Inner Side Panels (x2)
- 4: Outer Side Panels (x2)
- 5: Middle Shelf Panels (x2)
- 6: Back Support Panels (x2)
- 7: Tempered Glass Shelf (x1)
- 8: Feet Mounting Brackets (x4)
- 9A: LED Strip
- 9B: LED Remote Control

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your TV stand. Refer to the assembly video for visual guidance.

Your browser does not support the video tag.

This video provides a step-by-step visual guide for assembling the TV stand. While the video shows a black unit, the assembly process is identical for the white model.

1. **Prepare the Bottom Panel (2):** Attach the LED strip (9A) to the designated area on the bottom panel using screws (G). Insert cam lock screws (A) and wooden dowels (C) into the pre-drilled holes on the bottom panel.
2. **Assemble Side Compartments:** Attach the inner side panels (3) and outer side panels (4) to the middle shelf panels (5) using cam lock screws (A), wooden dowels (C), and cam locks (B). Repeat for both side compartments.
3. **Attach Back Supports (6):** Secure the back support panels (6) to the assembled side compartments using wooden dowels (C) and cam locks (B).
4. **Connect Top Panel (1):** Place the top panel (1) onto the assembled structure, aligning the cam lock screws with the cam locks in the side panels. Tighten all cam locks (B) to secure the top panel.
5. **Install Feet (H) and Brackets (8):** Attach the feet mounting brackets (8) to the bottom of the stand using large screws (F). Then, attach the feet (H) to these brackets.
6. **Insert Glass Shelf (7):** Carefully slide the tempered glass shelf (7) into the central open compartment, resting it on the pre-installed supports.
7. **Install Anti-Tip Kit:** Position the TV stand against the wall. Mark the wall through the holes on the anti-tip brackets (W3) attached to the top rear of the stand. Drill pilot holes, insert wall anchors (W2), and secure the brackets to the wall using screws (W1). Connect the anti-tip strap (W4) between the stand and the wall bracket.

Spacious & Organized Storage for Diverse Needs

2 Large Side Compartments

2 Open Storage Shelves




The TV stand features two large side compartments and two open storage shelves, providing versatile storage options for various media devices and accessories.

OPERATING INSTRUCTIONS

LED Lighting System:

Your TV stand is equipped with an integrated RGB LED lighting system to enhance your entertainment experience.

- **Power Connection:** Connect the USB plug of the LED strip (9A) to a standard USB power adapter (not included) or a USB port on your TV/console.
- **Remote Control (9B):** Use the provided remote control to manage the LED lights.
- **Color Selection:** Choose from 7 main colors to match your mood or decor.
- **Dynamic Modes:** Select from 22 dynamic modes for various lighting effects.
- **Brightness Adjustment:** Adjust the brightness levels using the remote control.

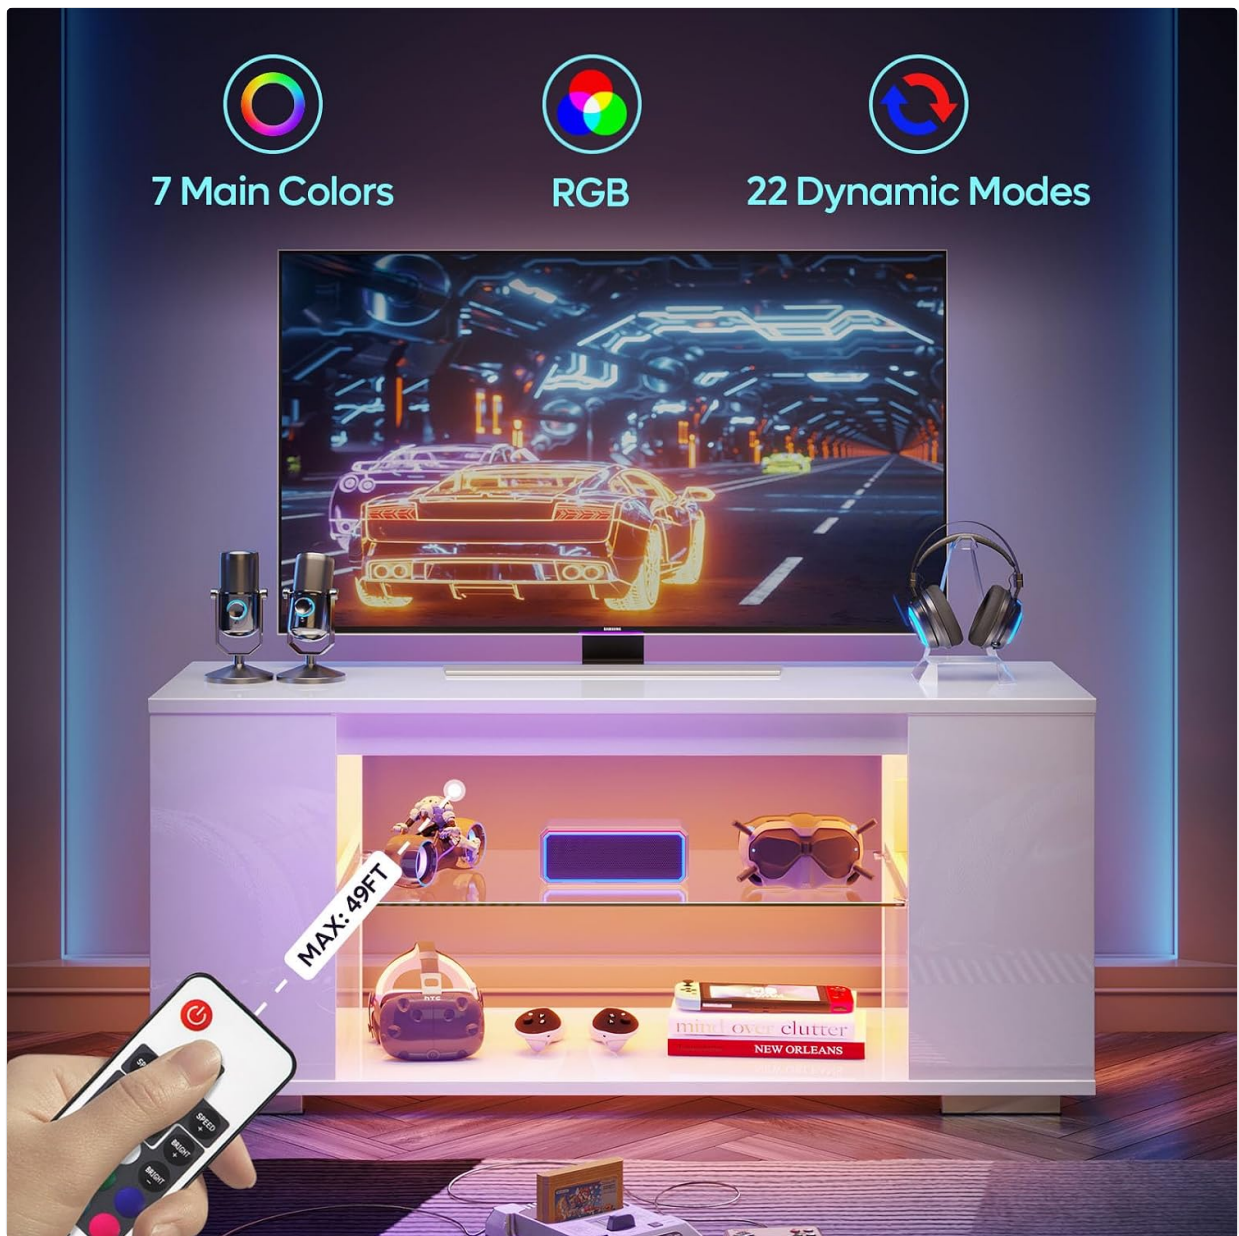

The image displays the TV stand's RGB LED lighting, showcasing the remote control and the variety of 7 main colors and 22 dynamic modes available.


MAINTENANCE

Proper care will help maintain the appearance and functionality of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, slightly damp cloth. Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the high gloss finish.
- **Dusting:** Regularly dust the unit with a dry, soft cloth.
- **Fasteners:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Glass Care:** Clean the tempered glass shelf with a glass cleaner and a soft cloth.



High Gloss Finish

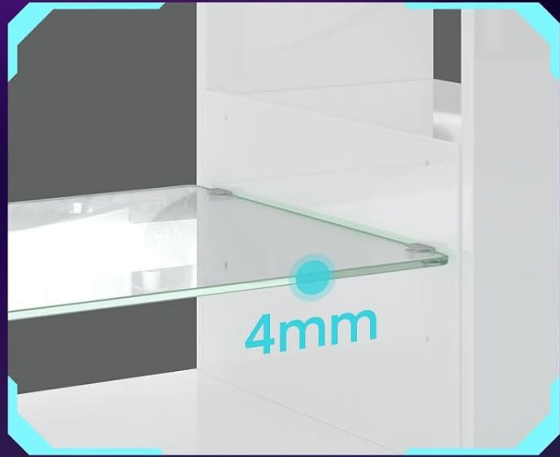

4mm Tempered Glass



Easy to Clean



Anti-Tipping Design

The image highlights the easy-to-clean nature of the high gloss finish, showing water droplets being wiped away with a cloth.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions.

- **LED Lights Not Working:**

- Check if the USB plug is securely connected to a working power source.
- Ensure the remote control battery is functional and correctly inserted.
- Point the remote directly at the LED strip's receiver.

- **Stand Feels Unstable or Wobbly:**


- Verify that all assembly screws and cam locks are fully tightened.
- Ensure the anti-tip kit is properly installed and secured to a wall stud or appropriate anchor.
- Check that the stand is placed on a flat, level surface.

- **Scratches or Surface Damage:**

- For minor scratches, specialized furniture repair kits for high gloss finishes may be used.
- For significant damage, contact Pinmoco customer support for potential replacement parts or advice.

SPECIFICATIONS

Detailed product specifications for the Pinmoco 47-inch TV Stand.

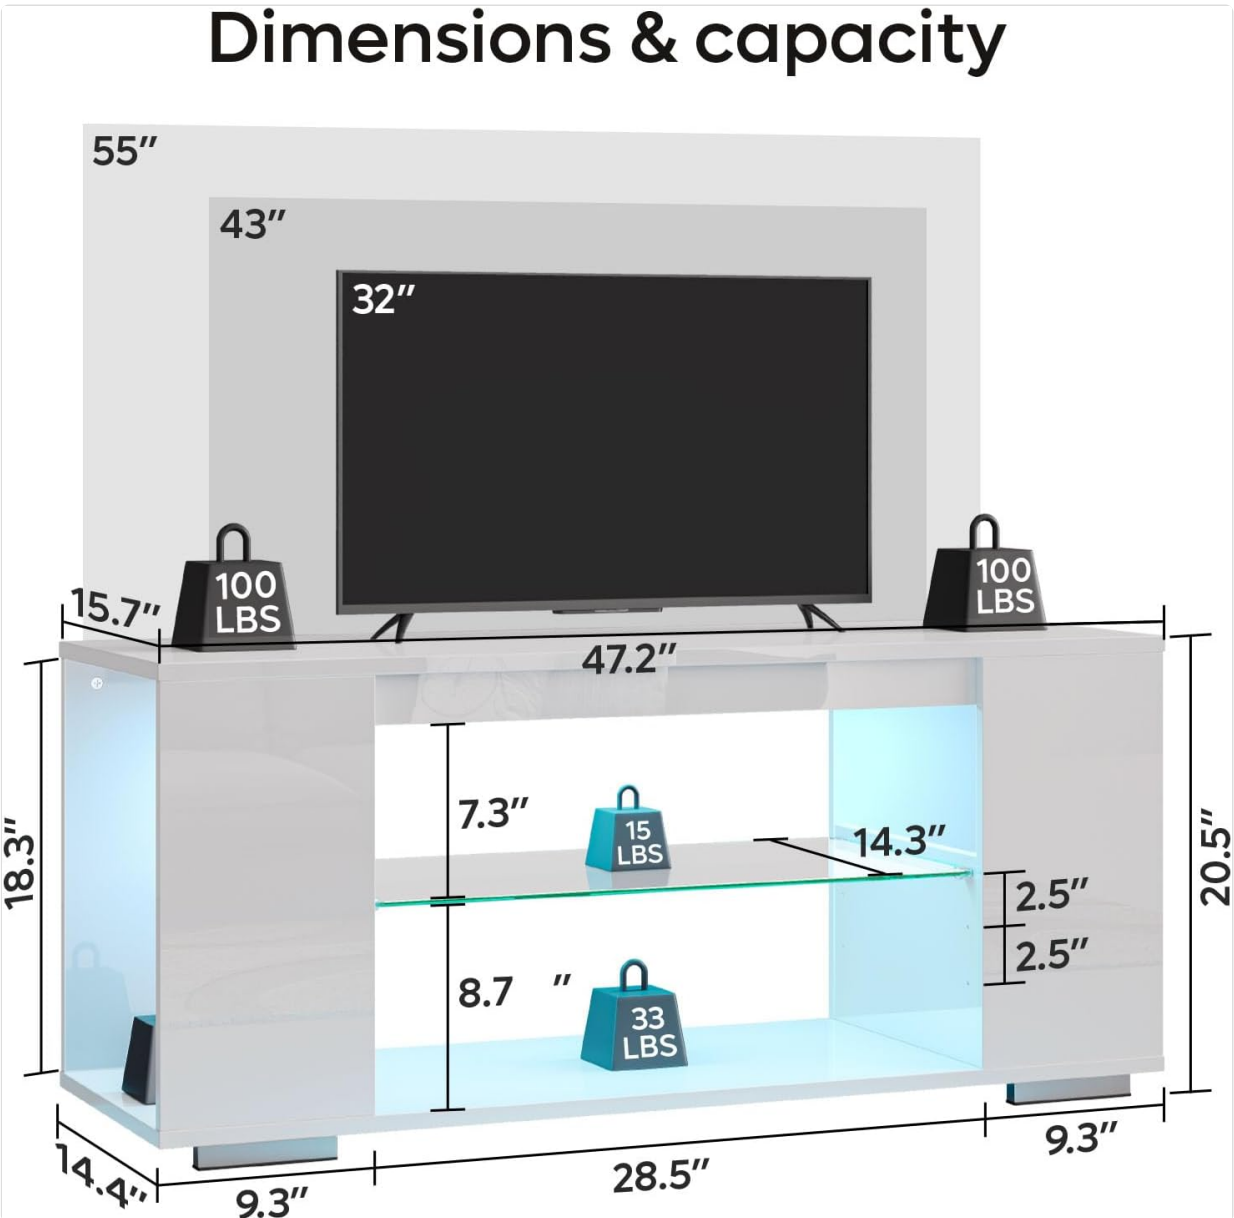

This diagram illustrates the overall dimensions and weight capacities of the TV stand, including the top surface and internal shelves.

Attribute	Detail
Brand	Pinmoco
Model Number	L103720X
Color	White
Product Dimensions (L x W x H)	119.99 x 39.8 x 51.94 cm (47.24" W x 15.67" D x 20.28" H)
Item Weight	21.6 kg (47.6 lbs)
Maximum Weight Capacity	248 Pounds (112.5 kg)
Material	Engineered Wood

Finish Type	High Gloss
Number of Shelves	3 (1 tempered glass, 2 wood)
Included Components	TV stand, LED lights, Remote control, Anti-tip kit

WARRANTY AND SUPPORT

Pinmoco stands behind the quality of its products. For warranty information, replacement parts, or any other support needs, please contact Pinmoco customer service directly. Keep your purchase receipt as proof of purchase.

You can find more information and contact details on the official Pinmoco store page:[Pinmoco Direct Store](#)