

[Manuals.plus](#) /

› [M-Amazup](#) /

› M-Amazup V60098BT-BLK Portable Boombox CD Player Instruction Manual

M-Amazup V60098BT-BLK

M-Amazup V60098BT-BLK Portable Boombox CD Player Instruction Manual

Model: V60098BT-BLK | Brand: M-Amazup

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your M-Amazup V60098BT-BLK Portable Boombox CD Player. This versatile audio system supports CD, cassette, Bluetooth, USB, TF card, AUX input, and FM radio playback. Please read this manual thoroughly before use to ensure proper function and to maximize your listening experience.

Versatile CD Boombox

Plays CDs, Tapes, Bluetooth, USB, AUX | Features Recording, FM Radio & Remote Control



CD Player



Cassette



Bluetooth



AUX



USB Drive



Recorder



Dual Speakers



Earphone Jack



Remote Control



FM Radio



Image: The M-Amazup V60098BT-BLK Portable Boombox showcasing its multiple playback options including CD, Cassette, Bluetooth, AUX, USB, Recorder, Dual Speakers, Earphone Jack, Remote Control, and FM Radio.

2. SAFETY INFORMATION

- Do not expose the unit to rain or moisture.
- Do not block ventilation openings.
- Ensure proper power supply (AC or 6 C-cell batteries).
- Avoid placing the unit near heat sources or direct sunlight.
- Do not attempt to disassemble or repair the unit yourself. Refer to qualified service personnel.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- M-Amazup V60098BT-BLK Boombox CD Player
- AC Power Cord
- Remote Control
- Operating Instructions Manual

Video: An unboxing and overview of the M-Amazup Boombox CD Player, showing the contents of the package including the main unit, manual, and remote control.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your boombox:

- **Top Panel:** CD compartment, function buttons (Power, Mode, Rec/Del, Play/Scan, Sleep, Rep/Prog), Volume controls.
- **Front Panel:** LCD display, dual speakers, cassette compartment.
- **Side Panel:** Headphone jack, AUX input, USB port.
- **Rear Panel:** AC power input, battery compartment, telescopic FM antenna.
- **Handle:** Integrated for portability.



Image: The M-Amazup Boombox highlighting its Bluetooth 5.1 connection, tape playing, and CD playing capabilities.

5. SETUP

5.1 Powering the Unit

Your boombox can be powered by AC electricity or batteries.

AC Power:

1. Ensure the unit is turned off.
2. Connect the provided AC power cord to the AC input jack on the rear of the unit.
3. Plug the other end of the AC power cord into a standard wall outlet.

DC Battery Power:

1. Ensure the unit is turned off and disconnected from AC power.
2. Open the battery compartment cover on the bottom of the unit.
3. Insert 6 C-cell batteries (not included), ensuring correct polarity (+/-).

4. Close the battery compartment cover securely.



Image: The M-Amazup Boombox illustrating its dual power options: AC power via a wall outlet and DC power using 6 C-cell batteries (not included).

6. OPERATING INSTRUCTIONS

6.1 General Operation

1. **Power On/Off:** Press the **Power** button to turn the unit on or off.
2. **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume level.
3. **Mode Selection:** Press the **MODE** button to cycle through available functions: CD, Cassette, FM Radio, Bluetooth, USB, AUX.

6.2 CD Playback

1. Press the **MODE** button to select CD mode. The display will show 'CD'.

2. Open the CD compartment cover.
3. Place a CD (CD, CD-R/RW, MP3 format) onto the spindle with the label side facing up.
4. Close the CD compartment cover. The unit will read the disc and display the total number of tracks.
5. Press the **Play/Pause** button to start playback.
6. Use the **Skip Forward** or **Skip Backward** buttons to navigate tracks.
7. **Repeat Function:** Press **REP/PROG** repeatedly to select repeat modes (e.g., repeat one, repeat all).
8. **Program Playback:** In stop mode, press **REP/PROG** to enter program mode. Select desired tracks using skip buttons and press **Play** to start programmed playback.

Plays All Your CDs


Enjoy seamless playback of CDs, CD-R, CD-RW, and MP3 formats.



**Single
cycle**



**Repeat the
current folder**

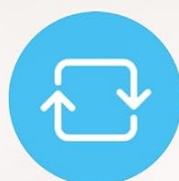


**Repeat
all**



**Random
Play**



**Play in
order**

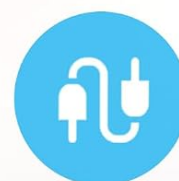

**A-B
repeat**



Image: The M-Amazup Boombox demonstrating seamless CD playback with features such as single cycle, repeat current folder, repeat all, random play, play in order, and A-B repeat.

6.3 Cassette Playback and Recording

1. Press the **MODE** button to select TAPE mode.
2. Open the cassette compartment door.

3. Insert a cassette tape.
4. Close the cassette compartment door.
5. **Playback:** Press the **Play** button on the cassette controls to start playback.
6. **Recording:** Select the desired source (CD, Radio, Bluetooth, USB, AUX, or built-in microphone). Press the **Record** button on the cassette controls to begin recording. Press **Stop** to end recording.
7. Use **Fast Forward** and **Rewind** buttons to navigate the tape.

Bring Your Tapes Back to Life

Replay cherished memories and relive the soundtrack of your past.



Recording



Tape Player



Image: The M-Amazup Boombox highlighting its cassette tape player and recording capabilities, allowing users to replay and record audio.

6.4 FM Radio Operation

1. Press the **MODE** button to select FM Radio mode.
2. Extend the telescopic antenna for optimal reception.
3. **Auto Scan:** Press and hold the **SCAN** button to automatically scan and save available FM stations.
4. **Manual Tuning:** Briefly press the **Skip Forward** or **Skip Backward** buttons to fine-tune the frequency.
5. **Preset Stations:** Use the **REP/PROG** button to cycle through saved preset stations.

Precision FM Radio

The large tuner delivers stable digital reception and effortless station selection.



Image: The M-Amazup Boombox with its adjustable telescopic antenna, demonstrating its precision FM radio tuning capabilities for clear reception.

6.5 Bluetooth Connection

1. Press the **MODE** button to select Bluetooth mode. The display will show 'BLUE' and the Bluetooth indicator will flash.
2. Enable Bluetooth on your external device (e.g., smartphone, tablet).
3. Search for 'M-Amazup' in your device's Bluetooth settings and select it to pair.
4. Once paired, the Bluetooth indicator will stop flashing and remain solid. You can now stream audio from your device to the boombox.

Seamless Bluetooth Streaming

Enjoy flawless, lag-free music with advanced Bluetooth 5.1 technology



Image: The M-Amazup Boombox demonstrating seamless Bluetooth streaming with a smartphone, indicating its advanced Bluetooth 5.1 technology.

6.6 USB and TF Card Playback

1. Insert a USB drive into the USB port or a TF card into the TF card slot.
2. Press the **MODE** button to select USB or TF mode. The unit will automatically detect and begin playing audio files (MP3, WMA).
3. Use the **Play/Pause** and **Skip** buttons to control playback.

6.7 AUX Input

1. Connect an external audio device (e.g., MP3 player) to the AUX input jack using a 3.5mm audio cable (not included).
2. Press the **MODE** button to select AUX mode.
3. Control playback and volume from your external device.

6.8 Using the Remote Control

The included remote control allows for convenient operation of all functions from a distance. Ensure batteries are inserted correctly into the remote control.



Image: The M-Amazup Boombox being operated with its handy remote control, allowing for hassle-free playback across multiple formats.

7. MAINTENANCE

7.1 Cleaning

- Wipe the unit with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- For the CD lens, use a specialized CD lens cleaner.

7.2 Battery Replacement

If using battery power, replace all 6 C-cell batteries when the unit's performance diminishes or the display becomes dim. Always replace with new batteries of the same type.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	No AC power / Dead batteries.	Check AC connection or replace batteries.
CD does not play.	CD inserted incorrectly / Disc is dirty or scratched / Incorrect mode.	Reinsert CD correctly, clean or replace disc, select CD mode.
Poor FM radio reception.	Antenna not extended / Weak signal.	Fully extend and adjust the telescopic antenna. Try repositioning the unit.
Bluetooth pairing fails.	Device too far / Bluetooth not enabled / Incorrect pairing procedure.	Ensure devices are close, Bluetooth is enabled, and follow pairing steps.
Cassette tape not playing/recording.	Tape inserted incorrectly / Incorrect mode / Tape mechanism issue.	Reinsert tape correctly, select TAPE mode, ensure tape is not jammed.

9. SPECIFICATIONS

Feature	Detail
Brand	M-Amazup
Model Number	V60098BT-BLK
Connectivity Technology	Bluetooth
Color	Black
Speaker Type	Stereo
Item Dimensions (L x W x H)	10 x 2 x 2.7 inches
Power Source	Corded Electric (AC) / 6 C-cell Batteries (DC)
Bluetooth Version	5.3
Supported Audio Formats	CD, CD-R, CD-RW, MP3, WMA
Number of Speakers	2
Item Weight	1.89 Kilograms

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This M-Amazup product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, troubleshooting, or any questions regarding your M-Amazup Boombox, please visit the official

M-Amazup store or contact their customer service. You can find more information and contact details at the [M-Amazup Store on Amazon](#).

© 2026 M-Amazup. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question