

[Manuals.plus](#) /

› [M-Amazup](#) /

› M-Amazup V60098BT-BLK CD Player Boombox Cassette Player Combo User Manual

M-Amazup V60098BT-BLK

M-Amazup V60098BT-BLK CD Player Boombox Cassette Player Combo User Manual

Model: V60098BT-BLK | Brand: M-Amazup

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before operating the unit and retain them for future reference. Follow all warnings and instructions marked on the product.

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- M-Amazup V60098BT-BLK Portable CD Player Boombox
- Remote Control
- USB-C Cable

- 3.5mm AUX Cable
- User Manual (this document)

PRODUCT OVERVIEW

The M-Amazup V60098BT-BLK is a versatile audio system combining a CD player, cassette player, AM/FM radio, Bluetooth connectivity, and AUX/USB input. It features dual speakers, a headphone jack, and can be operated via a remote control.

Versatile CD Boombox

Plays CDs/Tapes, Bluetooth, USB, AUX | Features Recording, FM Radio & Remote Control



CD Player



Cassette



Bluetooth



AUX



USB Driver



Recorder



Dual Speakers



Earphone Jack



Remote Control



FM Radio



Image: Overview of the M-Amazup V60098BT-BLK Boombox, highlighting its versatile functions including CD, Cassette, Bluetooth, AUX, USB, Recording, Dual Speakers, Earphone Jack, Remote Control, and FM Radio capabilities.

Controls and Indicators

Familiarize yourself with the buttons and ports on your boombox for optimal use.

- **Power Button:** Turns the unit on or off.

- **Mode Button:** Switches between CD, Cassette, Radio, Bluetooth, AUX, and USB modes.
- **Volume +/-:** Adjusts the audio output level.
- **Play/Pause Button:** Controls playback for CD, USB, and Bluetooth.
- **Stop Button:** Stops playback.
- **Skip/Search Buttons:** Navigates tracks/stations.
- **Record Button:** Initiates recording to cassette.
- **Cassette Door:** Opens to insert or remove cassette tapes.
- **CD Compartment:** Opens to insert or remove CDs.
- **Tuning Dial/Buttons:** For selecting radio stations.
- **LCD Display:** Shows current mode, track number, frequency, etc.
- **AUX Input:** 3.5mm jack for connecting external audio devices.
- **USB Port:** For playing audio from USB drives.
- **Headphone Jack:** 3.5mm jack for private listening.
- **AC Power Input:** For connecting the AC power cord.
- **Battery Compartment:** For C-size batteries.
- **Telescopic Antenna:** For FM radio reception.

SETUP

Power Supply

Your boombox can be powered by either AC power or batteries.

Two Types of Power Supply



Image: Illustration of the two power supply options for the boombox: connecting to an AC outlet and inserting C-size batteries into the battery compartment.

AC Power Operation

1. Ensure the unit is turned off.
2. Connect the supplied AC power cord to the AC power input on the back of the boombox.
3. Plug the other end of the AC power cord into a standard wall outlet.

Battery Operation

For portable use, the boombox requires 6 x 'C' size batteries (not included).

1. Ensure the unit is turned off and disconnected from AC power.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 'C' size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.

Antenna Setup (for Radio)

For optimal FM radio reception, fully extend the telescopic antenna. For AM reception, rotate the unit for the best signal.

OPERATING INSTRUCTIONS

General Operation

1. **Power On/Off:** Press the Power button to turn the unit on or off.
2. **Select Mode:** Press the Mode button repeatedly to cycle through CD, Cassette, Radio, Bluetooth, AUX, and USB modes.
3. **Adjust Volume:** Use the Volume +/- buttons to increase or decrease the sound level.

CD Playback

Plays All Your CDs

Enjoy seamless playback of CDs, CD-R, CD-RW, and MP3 formats.



Single
cycle



Repeat the
current folder



Repeat
all



Random
Play



Play in
order



A-B
repeat



Image: The boombox with a CD being placed into its top-loading compartment, illustrating its capability to play various CD formats and offering multiple playback options.

1. Press the Mode button to select CD mode.
2. Open the CD compartment cover.
3. Place a CD (CD, CD-R, CD-RW, MP3, WMA format) onto the spindle with the label side facing up.
4. Close the CD compartment cover.
5. The CD will begin playing automatically. If not, press the Play/Pause button.
6. Use the Skip/Search buttons to navigate between tracks.
7. Press the Stop button to stop playback.
8. **Program Play:** Refer to the remote control section for programming specific track orders.

Cassette Playback and Recording

Bring Your Tapes Back to Life

Replay cherished memories and relive the soundtrack of your past.



Recording



Tape Player



Image: The boombox with its cassette door open, ready for tape insertion, highlighting its tape playback and recording capabilities.

Cassette Playback

1. Press the Mode button to select Cassette mode.
2. Open the cassette door and insert a cassette tape.
3. Press the Play button on the unit or remote to start playback.
4. Use the Fast Forward/Rewind buttons to quickly move through the tape.
5. Press the Stop/Eject button to stop playback and eject the tape.

Cassette Recording

You can record from CD, Radio, AUX, or Bluetooth to a cassette tape.

1. Insert a blank cassette tape into the cassette compartment.
2. Select the desired source (CD, Radio, AUX, or Bluetooth) using the Mode button.
3. Start playback on the source (e.g., play a CD track, tune to a radio station).
4. Press the Record button on the boombox. The Play button will also engage.
5. To stop recording, press the Stop button.

AM/FM Radio

Precision FM Radio

The large tuner delivers stable digital reception and effortless station selection.



Image: The boombox with its antenna extended, demonstrating its FM radio function and stable digital reception.

1. Press the Mode button to select Radio mode.
2. Extend the telescopic antenna for FM reception. For AM, rotate the unit for best signal.
3. Use the Tuning dial or buttons to scan for desired radio stations. The frequency will be displayed on the LCD screen.

Bluetooth Mode



Image: A user enjoying seamless music streaming via Bluetooth from their smartphone to the boombox, highlighting the Bluetooth 5.1 technology.

1. Press the Mode button to select Bluetooth mode. The LCD display will show "BT" or a similar indicator, and the unit will enter pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "V60098BT-BLK" from the list of devices.
4. Once paired, you can play audio from your device through the boombox.

5. Use the Play/Pause and Skip buttons on the boombox or your device to control playback.

AUX Input

1. Press the Mode button to select AUX mode.
2. Connect one end of the 3.5mm AUX cable (supplied) to the AUX input jack on the boombox.
3. Connect the other end of the AUX cable to the headphone jack or audio output of your external audio device.
4. Play audio from your external device. The sound will be output through the boombox speakers.

USB Playback

1. Press the Mode button to select USB mode.
2. Insert a USB flash drive (containing MP3 or WMA audio files) into the USB port.
3. The unit will automatically detect and begin playing audio files from the USB drive.
4. Use the Play/Pause and Skip buttons to control playback.

Remote Control

CD Boombox with Handy Remote

Experience hassle-free playback across multiple formats



Image: A user operating the boombox with the included remote control, demonstrating convenient, hassle-free playback across multiple formats.

The included remote control allows for convenient operation of the boombox from a distance. Insert 2 x AAA batteries (not included) into the remote control before use.

- **Power:** Turns the unit on/off.
- **Mode:** Selects input source (CD, Radio, BT, AUX, USB, Tape).
- **Volume +/-:** Adjusts volume.
- **Play/Pause:** Starts or pauses playback.
- **Stop:** Stops playback.
- **Skip Forward/Backward:** Skips tracks/stations.
- **Repeat:** Repeats current track/album (CD/USB).
- **Program:** Programs CD tracks for custom playback order.
- **EQ:** Adjusts equalizer settings (if available).

Headphone Use

To listen privately, plug 3.5mm stereo headphones (not included) into the headphone jack. The sound from the speakers will be muted automatically.

MAINTENANCE

Cleaning

- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For the CD lens, use a specialized CD lens cleaner.
- Keep the cassette head clean to ensure optimal sound quality. Use a cassette head cleaning kit periodically.

Storage

When not in use for extended periods, store the unit in a cool, dry place. Remove batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cord not connected; Batteries depleted or incorrectly inserted.	Ensure AC cord is securely plugged in; Replace batteries or check polarity.
No sound	Volume too low; Wrong mode selected; Headphones connected.	Increase volume; Select correct mode; Disconnect headphones.
CD not playing	CD inserted incorrectly; CD dirty/scratched; CD compartment not closed.	Insert CD with label side up; Clean or replace CD; Close compartment securely.
Radio static/poor reception	Antenna not extended; Weak signal.	Fully extend FM antenna; Rotate unit for AM reception; Try a different location.
Bluetooth not pairing	Boombox not in pairing mode; Device Bluetooth off; Device too far.	Ensure boombox is in BT mode; Enable Bluetooth on device; Move device closer (within 10m).
Cassette recording issues	Tape not inserted; Write-protect tab engaged; Source not playing.	Insert tape; Cover write-protect tab; Ensure source is playing.

SPECIFICATIONS

- **Model:** V60098BT-BLK
- **Brand:** M-Amazup
- **Power Source:** AC 220-240V ~ 50/60Hz or 6 x 'C' size batteries (DC 9V)
- **Supported CD Formats:** CD, CD-R, CD-RW, MP3, WMA
- **Radio Frequencies:** AM/FM
- **Bluetooth Version:** 5.1

- **Connectivity:** Bluetooth, AUX-in (3.5mm), USB
- **Headphone Jack:** 3.5mm Stereo
- **Dimensions:** Approximately 33.1 x 24 x 15.9 cm
- **Weight:** Approximately 1.88 kg

WARRANTY AND SUPPORT

M-Amazup products are designed for reliability and performance. For any issues or questions not covered in this manual, please contact M-Amazup customer support. Keep your purchase receipt as proof of purchase for warranty claims.

For detailed warranty information and support contacts, please refer to the warranty card included in your package or visit the official M-Amazup website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question