

## **crosson B0FB8PDKDL**

# **CROSSON 16x16 Inch Electric Countertop Griddle User Manual**

Model: B0FB8PDKDL

## **1. INTRODUCTION**

---

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your CROSSON 16x16 Inch Electric Countertop Griddle. Please read all instructions thoroughly before initial use and retain this manual for future reference.

### **Important Safety Information**

- Always connect the griddle to a grounded electrical outlet with the correct voltage (120V).
- Do not immerse the griddle, cord, or plug in water or other liquids.
- Keep children and pets away from the griddle during operation.
- Use caution when handling hot surfaces. Always use oven mitts or heat-resistant gloves.
- Unplug the griddle from the outlet when not in use and before cleaning.
- Do not operate the griddle with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Ensure adequate ventilation around the griddle during use.

## **2. PRODUCT OVERVIEW**

---

The CROSSON Electric Countertop Griddle is designed for versatile cooking, featuring a durable chrome-plated surface and precise temperature control. Key components include:

- **Chrome-Plated Cooking Surface:** Provides excellent non-stick properties and even heat distribution.
- **Temperature Control Knob:** Adjustable from 190°F to 575°F (88°C to 300°C) for various cooking needs.
- **Splash Guard:** A 2.7-inch high guard to contain splatters and maintain kitchen cleanliness.
- **Removable Drip Tray:** Collects excess grease for easy disposal and cleaning.

- **Adjustable Stainless-Steel Legs:** Allows height adjustment from 2 inches to 3 inches for different countertop setups.



Image: The CROSSON Electric Countertop Griddle, showing the internal heating elements and control panel.

# PRODUCT DETAILS

## User-friendly design for peace of mind



Image: Close-up details of the griddle's user-friendly design, highlighting the enlarged oil collection tray, laser seamless welding, adjustable legs, and splash guard.

### 3. SETUP

---

1. **Unpacking:** Carefully remove the griddle and all packaging materials from the box. Inspect the unit for any signs of damage.
2. **Placement:** Place the griddle on a stable, level, heat-resistant surface. Ensure there is sufficient clearance around the unit for ventilation. The stainless-steel legs can be adjusted from 2 inches to 3 inches to suit your countertop height.
3. **Initial Cleaning:** Before first use, wipe down the chrome-plated cooking surface and exterior with a damp cloth and mild detergent. Rinse thoroughly and dry completely. Ensure the removable drip tray is properly inserted.
4. **Power Connection:** Plug the power cord into a standard 120V, 1750W grounded electrical outlet.

### 4. OPERATING INSTRUCTIONS

---

1. **Power On:** Ensure the griddle is plugged in.
2. **Set Temperature:** Turn the temperature control knob to your desired cooking temperature, ranging

from 190°F to 575°F (88°C to 300°C). The indicator light will illuminate, signaling that the griddle is heating.

3. **Preheating:** Allow the griddle to preheat for approximately 10-15 minutes to ensure even heat distribution across the entire 16x16 inch cooking surface. The indicator light will turn off once the set temperature is reached, and cycle on/off during cooking to maintain temperature.
4. **Cooking:** Place food directly onto the chrome-plated cooking surface. The high splash guard will help contain any splatters.
5. **Grease Management:** Excess grease and food bits will drain into the removable drip tray located at the front of the unit. Empty and clean the drip tray as needed.
6. **Power Off:** After cooking, turn the temperature control knob to the 'OFF' position and unplug the griddle from the electrical outlet. Allow the unit to cool completely before cleaning.



Image: A hand adjusting the precise temperature control knob, showing temperature settings from 190°F to 575°F.



Image: The CROSSON Electric Griddle in use, cooking pasta on its chrome-plated surface within a kitchen environment.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your griddle.

1. **Cool Down:** Always ensure the griddle is unplugged and completely cool before attempting any cleaning.
2. **Clean Cooking Surface:** The chrome-plated surface is designed for easy cleaning. Use a griddle scraper to remove any food residue. Then, wipe the surface with a damp cloth and mild soap. Rinse with a clean damp cloth and dry thoroughly. The chrome-plated surface has good anti-rust properties, so there is no need to wait for the panel to dry completely after use.
3. **Clean Drip Tray:** Remove the drip tray and wash it with warm, soapy water. Rinse and dry completely before reinserting.
4. **Clean Exterior:** Wipe the exterior stainless-steel surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could scratch the finish.
5. **Storage:** Store the griddle in a clean, dry place when not in use.

## CROSSON Chrome-Cooking Plate



## Other Iron Cooking Plate

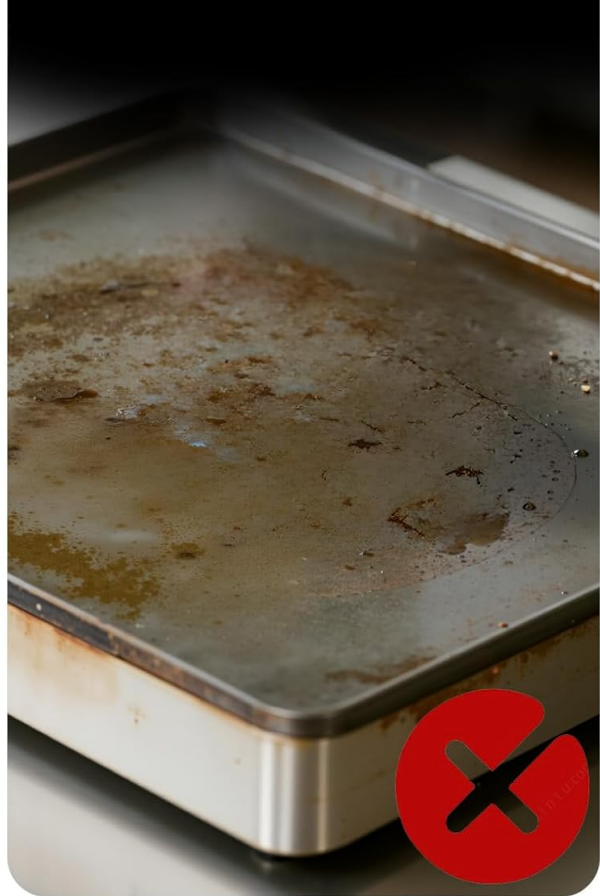


Image: A visual comparison highlighting the clean, non-stick nature of the CROSSON chrome-cooking plate against a traditional iron cooking plate with residue.

## 6. TROUBLESHOOTING

If you encounter issues with your griddle, refer to the following common problems and solutions:

- **Griddle Not Heating:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the temperature control knob is set to an 'ON' position and not 'OFF'.
- Verify that the circuit breaker has not tripped.

- **Uneven Heating:**

- Allow sufficient time for the griddle to preheat completely before cooking.
- Ensure the griddle is placed on a level surface.

- **Food Sticking:**

- Ensure the griddle is properly preheated to the correct temperature for your food.
- Apply a small amount of cooking oil or butter to the surface if necessary, especially for foods prone to sticking.

If problems persist after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	CROSSON
Model	B0FB8PDKDL
Special Feature	Temperature Control
Color	Silver
Material	Stainless Steel
Product Dimensions (D x W x H)	19.5" x 15.7" x 13.8"
Cooking Surface Size	16" x 16"
Wattage	1750 watts
Item Weight	44.6 Pounds
Included Components	Spatula
Voltage	120 Volts
Temperature Range	190°F to 575°F (88°C to 300°C)



Image: A diagram illustrating the precise dimensions of the griddle in inches and millimeters.

## 8. WARRANTY AND SUPPORT

Your CROSSON Electric Countertop Griddle is designed for durability and performance. For any product-related inquiries or support, please refer to the following:

- **Returns:** The product is eligible for 30-day easy returns. Please refer to your purchase platform's return policy for details.
- **Protection Plans:** Extended protection plans may be available for purchase, including 3-Year, 4-Year, and Complete Protect options. These plans offer additional coverage beyond the standard return period.
- **Customer Support:** For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact CROSSON customer support through the retailer where the product was purchased.