

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [kolegend](#) /

› [kolegend 2.4GHz High-Speed RC Monster Truck Instruction Manual \(Model: B0FB8PR86F\)](#)

kolegend B0FB8PR86F

kolegend 2.4GHz High-Speed RC Monster Truck Instruction Manual

Model: B0FB8PR86F

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your kolegend 2.4GHz High-Speed RC Monster Truck. Please read all instructions carefully before use and retain this manual for future reference.

2. WHAT'S IN THE Box

Verify that all components are present:

- kolegend RC Monster Truck
- 2.4GHz Remote Control
- 2 x 7.4V 1200mAh Rechargeable Batteries (for car)
- USB Charging Cable
- Screwdriver
- Instruction Manual



Image: The kolegend RC Monster Truck, remote control, two rechargeable batteries, USB charging cable, and screwdriver.

3. SETUP INSTRUCTIONS

3.1. Charging the Car Batteries

1. Locate the battery compartment on the underside of the RC truck. Use the provided screwdriver to open the compartment.
2. Connect one of the 7.4V 1200mAh rechargeable batteries to the USB charging cable.
3. Plug the USB charging cable into a compatible USB power source (e.g., computer, USB wall adapter). The indicator light on the USB cable will show charging status.
4. Allow approximately 2.5 hours for a full charge. The indicator light will change when charging is complete.
5. Once charged, carefully insert the battery into the compartment and secure the cover with the screwdriver.
6. Repeat the process for the second battery to ensure extended playtime.



Image: Underside of the RC car with the battery compartment visible. The green QC sticker is also visible.

3.2. Installing Remote Control Batteries

- The remote control requires 2 AA batteries (not included).
- Open the battery compartment on the back of the remote control.
- Insert the 2 AA batteries, ensuring correct polarity (+/-).
- Close the battery compartment securely.

3.3. Pairing the Remote Control and Car

1. Ensure the car battery is charged and installed, and the remote control has fresh batteries.
2. Turn on the RC car using the ON/OFF switch located on the underside. The car's lights will flash, indicating it is ready for pairing.
3. Turn on the remote control by pressing the power button. The remote's indicator light will also flash.
4. The car and remote should automatically pair. Once paired, the flashing lights on both the car and remote will become solid, indicating a successful connection.
5. If pairing fails, turn off both devices and repeat the steps.



Image: The 2.4GHz remote control and the kolegend RC Monster Truck, ready for operation.

4. OPERATING INSTRUCTIONS

4.1. Basic Controls

- Throttle Trigger:** Pull the trigger to move the car forward. Push the trigger away from you to brake or reverse.
- Steering Wheel:** Turn the wheel left or right to steer the car.

4.2. Features

- High Speed:** The RC truck can reach speeds up to 20km/h, powered by a 280 motor.
- LED Headlights & Chassis Lights:** Equipped with bright LED headlights and cool chassis lights for enhanced visibility and aesthetic appeal, especially during night operation.
- All-Terrain Capability:** Designed with an upgraded frame, impact-resistant material, and a tire suspension system for excellent grip and cushioning, allowing operation on various terrains such as sand, grass, and concrete.
- Extended Playtime:** Two 1200mAh batteries provide over 30 minutes of continuous play.

50+
MINS
Running Time



- ***Two Batteries***



Image: The kolegend RC Monster Truck showcasing its bright LED headlights and blue chassis lights.



Image: The RC car demonstrating its ability to drive on different terrains including dirt, asphalt, and grass.

Your browser does not support the video tag.

Video: A short demonstration of the kolegend RC Truck's features, including its speed, shock absorption, and ability to handle various terrains. It also highlights the 2.4G remote control and available colors.

5. CARE AND MAINTENANCE

- If the toy is not used for a long period of time, always remove the batteries from both the car and the remote control.
- Wipe the toy clean with a clean, damp cloth for storage.
- Avoid exposing the toy to direct sunlight for extended periods, as this can cause material deterioration.
- Avoid getting the toy wet, as this could damage the electronic components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Car does not respond to remote control.	Batteries are low or not installed correctly in car or remote. Not paired.	Ensure car battery is charged and installed. Install fresh AA batteries in remote. Re-pair car and remote (refer to Section 3.3).
Car runs slowly or stops unexpectedly.	Car battery is low.	Recharge the car battery. Use the spare charged battery.
Remote control indicator light is flashing.	Remote control batteries are low or not paired with car.	Replace AA batteries in remote. Ensure car is on and attempt to re-pair.

7. SPECIFICATIONS

- Product Dimensions:** 7 x 5 x 12 inches
- Item Weight:** 3.21 pounds
- Model Number:** B0FB8PR86F
- Manufacturer Recommended Age:** 8 years and up
- Car Batteries:** 2 x 7.4V 1200mAh Rechargeable (included)
- Remote Control Batteries:** 2 x AA (not included)
- Max Speed:** Up to 20 km/h
- Control Distance:** Up to 50 meters

PRODUCT DIMENSION

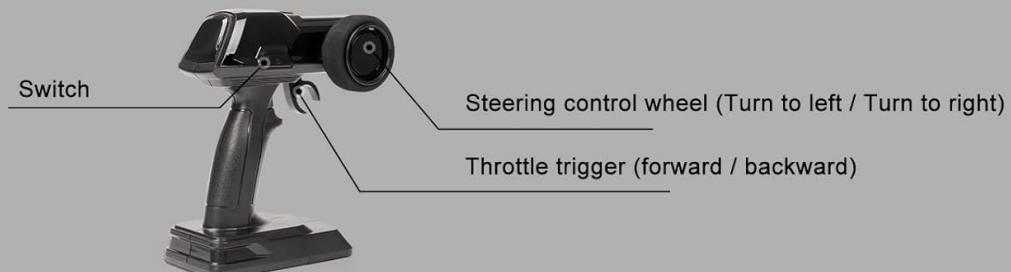


Image: Detailed diagram illustrating the dimensions of the kolegend RC Monster Truck.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official kolegend website. Keep your purchase receipt as proof of purchase.