

[manuals.plus](#) /› [Lefant](#) /› [Lefant LS200 Cordless Wet Dry Vacuum Cleaner Instruction Manual](#)

Lefant LS200

Lefant LS200 Cordless Wet Dry Vacuum Cleaner Instruction Manual

Model: LS200

INTRODUCTION

Thank you for choosing the Lefant LS200 Cordless Wet Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

1. PRODUCT OVERVIEW & COMPONENTS

The Lefant LS200 is a versatile 3-in-1 cleaning device designed to vacuum, wash, and self-clean, making floor maintenance effortless. It is suitable for various hard floor types including tile, marble, parquet, and laminate.

Included Components

- Main Unit
- Charging Base
- HEPA Filter
- Cleaning Brush
- Power Adapter
- Rotating Brush



Figure 1: Package contents including the main unit, charging base, HEPA filter, cleaning brush, adapter, and rotating brush.

2. SETUP

Handle Installation

1. Align the handle with the main unit's connection point.
2. Push firmly until you hear a 'click', indicating it is securely locked in place.

Charging

1. Place the main unit onto the charging base, ensuring the charging contacts align.
2. Connect the power adapter to the charging base and plug it into a wall outlet.
3. The battery indicator on the display will show the charging status. Fully charge the device before first use.

Water Tank Filling

1. Remove the clean water tank (700ml capacity) from the main unit.
2. Open the tank cap and fill with clean water. You may add a suitable amount of cleaning solution (refer to solution instructions for proportion).
3. Close the cap securely and reinsert the clean water tank into the main unit until it clicks into place.



Figure 2: The clean water tank (700ml) and dirty water tank (420ml) are easily removable for filling and emptying.

3. OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

1. To power on, press the power button on the handle.
2. The device defaults to Standard mode for light dirt.
3. Press the mode button to switch to Turbo mode for stubborn stains and deeper cleaning.
4. To power off, press and hold the power button.



Figure 3: Switch between Standard mode for light dirt and Turbo mode for tough stains to optimize cleaning efficiency.

Cleaning Performance

- **3-in-1 Cleaning:** The LS200 vacuums, washes, and self-cleans simultaneously, providing a thorough clean in one pass.
- **Self-Propelled System:** Equipped with drive wheels and a self-propelled roller, the device moves forward on its own, reducing user effort by 25%.
- **Anti-Tangle Brush & Scraper:** The brush head with bristles effectively prevents hair and lint from tangling. The constant pressure scraper removes excess moisture from the roller, ensuring quick drying and preventing odors.
- **Ultra-Thin 5mm Edge:** Designed with a 5mm ultra-thin edge, the vacuum can clean close to baseboards and into corners, eliminating dead zones.
- **Powerful Suction:** Delivers 20,000 Pa suction power for effective cleaning of various debris on hard floors.
- **Cordless Freedom:** Enjoy up to 30 minutes of continuous cleaning on a single charge, covering up to 216 m².
- **Low Noise Operation:** Operates at a quiet 80 dB, allowing for peaceful cleaning.



Figure 4: The self-propelled roller simplifies and speeds up cleaning, moving forward instantly upon startup for easy maneuverability.



Figure 5: The ultra-thin 5mm edge design allows for thorough cleaning along baseboards and in tight corners.



Figure 6: The LS200's superior 20,000 Pa suction power captures debris in a single pass for quick and effective cleaning.

4. MAINTENANCE

Automatic Self-Cleaning

1. After use, place the device on its charging base.

2. Ensure the clean water tank is sufficiently filled and the dirty water tank is empty.
3. Press the self-cleaning button on the handle. The device will perform a 2-4 minute ultra-fast rotation and pure water rinse to clean the brush roll.

Aspiration 20000 Pa : La Puissance du LS200 de Lefant

Cette puissance supérieure capture tout en un seul passage pour un nettoyage rapide et efficace



Autres



Lefant LS200



Balai traditionnel

Figure 7: The automatic self-cleaning cycle ensures a pristine brush roll, eliminating dirt and odors with minimal effort.

Manual Cleaning of Components

- Dirty Water Tank:** Remove the dirty water tank (420ml capacity) and empty its contents. Rinse thoroughly with clean water.
- Brush Roll:** The rotating brush is quick-release. Press the release button and slide out the brush. Rinse it under running water and allow it to air dry completely before reinserting. Use the provided cleaning brush to remove any tangled hair.
- HEPA Filter:** Remove the HEPA filter from the dirty water tank cover. Tap it gently to remove loose debris or rinse it under running water. Ensure it is completely dry before reinstallation to maintain optimal suction.

La Magie Autonettoyante du LS200 : La Touche Finale à Votre Nettoyage

Cycle express de 2-4 minutes :
une rotation ultra-rapide et un rinçage à l'eau pure pour un rouleau impeccable. Libérez-vous les mains, dites adieu à la saleté et aux mauvaises odeurs



1. The Device Must be Properly Installed on Its Base



2. The Battery Level Must be Above 10%



Figure 8: The quick-release brush roll and removable water tanks make manual cleaning and maintenance simple and hassle-free.

5. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------------|---|--|
| No Power / Device Not Turning On | Battery is depleted. Device not properly charged. | Charge the device fully. Ensure the adapter is correctly connected to the charging base and power outlet. |
| Low Suction Power | Dirty HEPA filter. Blocked air inlet or brush roll. Dirty water tank is full. | Clean or replace the HEPA filter. Remove any blockages from the brush roll or air inlet. Empty and clean the dirty water tank. |
| Water Leakage | Water tanks not properly installed. Tank caps not securely closed. | Ensure both clean and dirty water tanks are correctly seated and clicked into place. Check that all tank caps are tightly sealed. |
| Self-Cleaning Not Activating | Device not on charging base. Clean water tank empty. Dirty water tank full. Battery level too low. | Place the device firmly on the charging base. Fill the clean water tank. Empty the dirty water tank. Charge the device to at least 10% battery. |
| Unpleasant Odor | Dirty brush roll or water tanks. | Perform a self-cleaning cycle. Manually clean the brush roll and both water tanks thoroughly. Allow all components to air dry completely. |

6. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|--|
| Brand | Lefant |
| Model Number | LS200 |
| Product Dimensions (L x W x H) | 27.8 x 24 x 110 cm |
| Item Weight | 4.8 Kilograms |
| Runtime | 30 minutes |
| Special Features | Intelligent Self-Cleaning; 16000 Pa Suction Power; Anti-Tangle Design and 5 mm for Corners |
| Filter Type | HEPA Filter |

| Feature | Detail |
|---------------------------|-----------------|
| Surface Recommendation | Hard Floor |
| Power Source | Battery Powered |
| Voltage | 19 Volts |
| Clean Water Tank Capacity | 700 ml |
| Dirty Water Tank Capacity | 420 ml |

7. WARRANTY & SUPPORT

Lefant products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included in your package or visit the official Lefant website. You can also contact customer service through your purchase platform for assistance.