

[Manuals.plus](#) /

› [Lynnloland](#) /

› Lynnloland 36-inch Gold 6-Light Chandelier Instruction Manual

Lynnloland MP250061P6

Lynnloland 36-inch Gold 6-Light Chandelier Instruction Manual

Model: MP250061P6

1. PRODUCT OVERVIEW

The Lynnloland 36-inch Gold 6-Light Chandelier is designed to provide ambient lighting for dining rooms, kitchens, foyers, or living areas. This fixture features a durable metal frame with a gold baked finish and six white fabric shades, offering a blend of modern and farmhouse aesthetics. It is engineered for ease of installation with a pre-assembled design.



Figure 1: General view of the Lynnlund 36-inch Gold 6-Light Chandelier.


2. SAFETY INFORMATION

- **WARNING:** To avoid electric shock, ensure power is turned off at the circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code (NEC). Consult a qualified electrician if you are unsure about wiring procedures.
- Do not exceed the maximum wattage specified for the bulbs (Max 60W per bulb).
- Handle glass components and bulbs with care to prevent breakage.
- Keep flammable materials away from the light fixture.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Chandelier body (pre-assembled)
- White fabric shades (6x)
- Mounting hardware kit (canopy, mounting plate, screws, wire nuts)
- Adjustable downrods (various lengths)
- Instruction manual

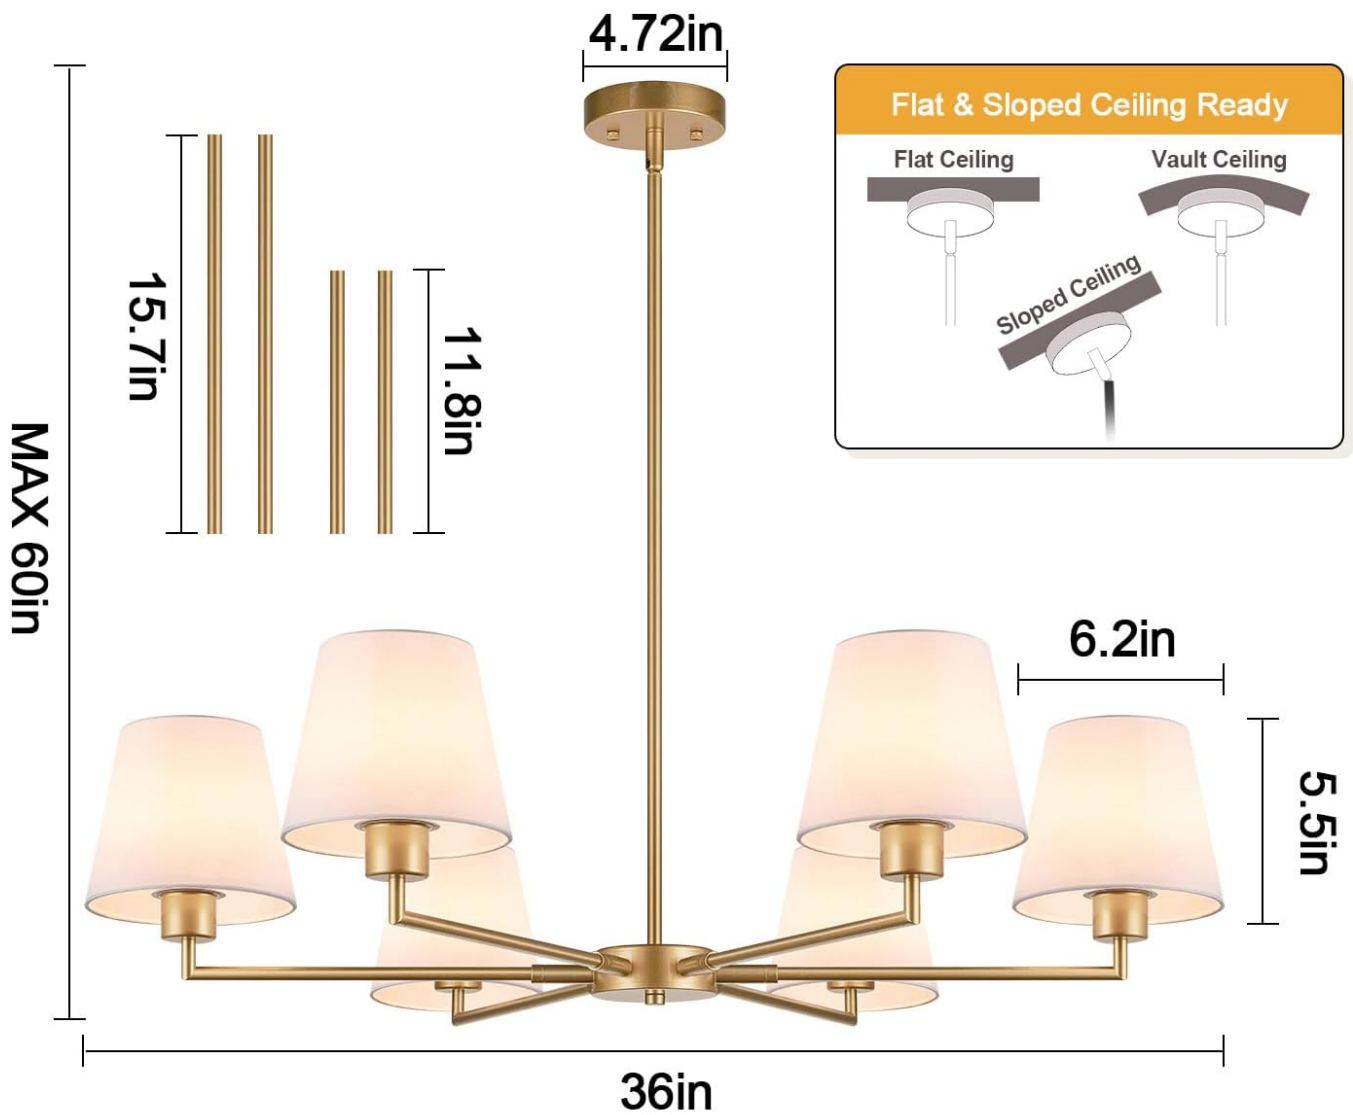

E26 Bulb Base (Max 60W)

Works with Multiple Bulb Types



Figure 2: The chandelier arrives largely pre-assembled, minimizing complex setup.

4. SPECIFICATIONS

Brand	Lynnoland
Model Number	MP250061P6
Dimensions (L x W x H)	23.62"L x 13.98"W x 17.72"H (Fixture body, excluding rods)
Size	36-inch (width)
Material	Fabric, Metal
Finish	Gold (Lacquered)
Shade Material	Fabric (White)
Number of Lights	6
Bulb Base	E26
Max Wattage per Bulb	60 watts
Voltage	120 Volts
Light Source Type	LED, Incandescent, Halogen, CFL (Bulbs not included)
Mounting Type	Ceiling Mount (Semi Flush Mount)
Required Assembly	No (Pre-assembled)



Figure 3: Detailed dimensions and bulb compatibility.

5. SETUP AND INSTALLATION

This chandelier is designed for quick and effortless installation as it arrives fully pre-assembled. Follow these general steps for mounting:

1. **Turn off Power:** Before starting, ensure the power to the installation area is turned off at the main circuit breaker.
2. **Prepare Mounting:** Attach the mounting plate to your ceiling junction box.
3. **Adjust Height:** Select the appropriate length of downrods for your desired hanging height. The fixture includes multiple rod lengths (e.g., 15.7 inches, 11.8 inches) for customization.
4. **Wire Connections:** Carefully connect the fixture's electrical wires to your household wiring (black to black, white to white, ground to ground) using the provided wire nuts.

5. **Secure Canopy:** Tuck the wires into the junction box and secure the canopy to the mounting plate.
6. **Install Shades and Bulbs:** Screw the white fabric shades onto each light socket. Insert E26 base bulbs (not included) into each socket.
7. **Restore Power:** Once installation is complete, turn the power back on at the circuit breaker.

Your browser does not support the video tag.

Video 1: This video demonstrates the assembly and installation process for the chandelier.

Your browser does not support the video tag.

Video 2: This video highlights the pre-assembled nature of the chandelier, simplifying installation.



Figure 4: The pre-assembled design eliminates complex setup steps.

6. OPERATING INSTRUCTIONS

The chandelier operates via a standard wall switch (not included). Ensure compatible E26 base bulbs are installed. The white fabric shades provide soft, diffused lighting, reducing glare and creating a comfortable ambiance.

Pre-Assembled & Eye-Friendly





Upgraded version



Fabric shade
Soft light



Pre-assembled
Ready to use

VS

Market regular



Exposed bulb
Harsh light



Assembly required
Multiple parts

Figure 5: Chandelier providing illumination in a dining room.

7. MAINTENANCE

- **Cleaning:** To clean the fixture, turn off the power and wipe with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or fabric shades.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow old bulbs to cool before removal. Use only E26 base bulbs with a maximum wattage of 60W.
- **Shade Care:** The handmade fabric shades are designed to resist curling or wear. If necessary, gently dust with a soft brush

or lint roller.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	1. Power is off. 2. Loose wiring connection. 3. Faulty bulb.	1. Check circuit breaker and wall switch. 2. Verify all wire connections are secure (ensure power is off first). 3. Replace bulb with a new, working E26 bulb.
Flickering lights.	1. Loose bulb. 2. Incompatible dimmer switch. 3. Loose wiring.	1. Tighten bulbs. 2. Ensure dimmer switch is compatible with your bulb type. 3. Check wiring connections (ensure power is off first).
Fixture is unstable.	Improper mounting.	Ensure mounting plate and canopy are securely fastened to the ceiling junction box.

9. WARRANTY AND SUPPORT

This Lynnoland chandelier comes with a **36-month warranty** and dedicated technical support. If you encounter any issues or have questions regarding your product, please contact customer support. To do so, navigate to your order page and click the "Contact Seller" option. A response will be provided within 24 hours to assist you with problem resolution. Customer comfort and satisfaction are our priority.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question