

Cecotec A01_EU01_100066

Cecotec Fun EasyPasta Cordless Pasta and Churro Maker Instruction Manual

Model: A01_EU01_100066

1. SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the appliance is fully charged before first use.
- Do not immerse the main unit (motor part) in water or any other liquid.
- Keep hands and utensils away from moving parts during operation.
- This appliance is intended for household use only.
- Keep out of reach of children.
- Use only original accessories and discs provided by Cecotec.
- Do not operate the appliance if it is damaged or malfunctioning.

2. PRODUCT COMPONENTS

The Cecotec Fun EasyPasta includes the following components:

- 1 x Main Pasta and Churro Maker Unit
- 4 x Extrusion Discs (for noodles, spaghetti, tagliatelle, and churros)
- 1 x USB Charging Cable
- 1 x Instruction Manual



Image: Main unit of the Cecotec Fun EasyPasta, showing the cordless design, the metal extrusion tube, and the four included discs for various pasta types and churros, along with the USB charging cable.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the appliance. Connect the provided USB charging cable to the charging port on the main unit and to a suitable USB power adapter (not included). The indicator light will show charging status. A full charge provides power for up to 50 uses.



Image: The cordless pasta maker highlighting its long battery life, capable of up to 50 uses on a single charge, emphasizing its portability.

3.2 Assembly

1. Select the desired extrusion disc for your pasta or churros.
2. Insert the chosen disc into the metal extrusion tube.
3. Attach the metal extrusion tube to the main unit by twisting it securely until it clicks into place.



Image: A sequence demonstrating the assembly process: selecting an extrusion disc, loading dough into the metal tube, and the machine extruding pasta.

4. OPERATING INSTRUCTIONS

4.1 Preparing Dough

For best results, ensure your pasta or churro dough has the correct consistency. The dough should be firm but pliable, not too sticky or too dry. The appliance has a capacity of up to 200 grams of dough per use.



Image: A plate of freshly made spaghetti, representing the 200-gram capacity of the pasta maker for a single batch.

4.2 Extruding Pasta or Churros

1. Load the prepared dough into the metal extrusion tube.
2. Point the appliance towards a clean surface, a pot of boiling water, or a frying pan (for churros).
3. Press and hold the power button to begin extrusion. The 40W motor will automatically push the dough through the disc.
4. Release the button to stop extrusion. Cut the pasta or churros to your desired length.



Image: A visual demonstration of the machine extruding three different types of pasta, showcasing the versatility of the included discs.



Image: A user extruding churro dough directly from the Cecotec Fun EasyPasta, demonstrating the churro making function.



Image: The pasta maker extruding spaghetti directly into a pot of boiling water, illustrating a convenient method of preparation.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your appliance.

1. **Disassembly:** After use, ensure the appliance is turned off. Carefully detach the metal extrusion tube and remove the disc.
2. **Cleaning Components:** Wash the metal extrusion tube and the discs with warm, soapy water. Use a brush or sponge to remove any dough residue. Rinse thoroughly and dry completely before storage.
3. **Main Unit:** Wipe the main unit (motor part) with a damp cloth. Do not immerse it in water.
4. **Storage:** Store the appliance and its accessories in a clean, dry place.

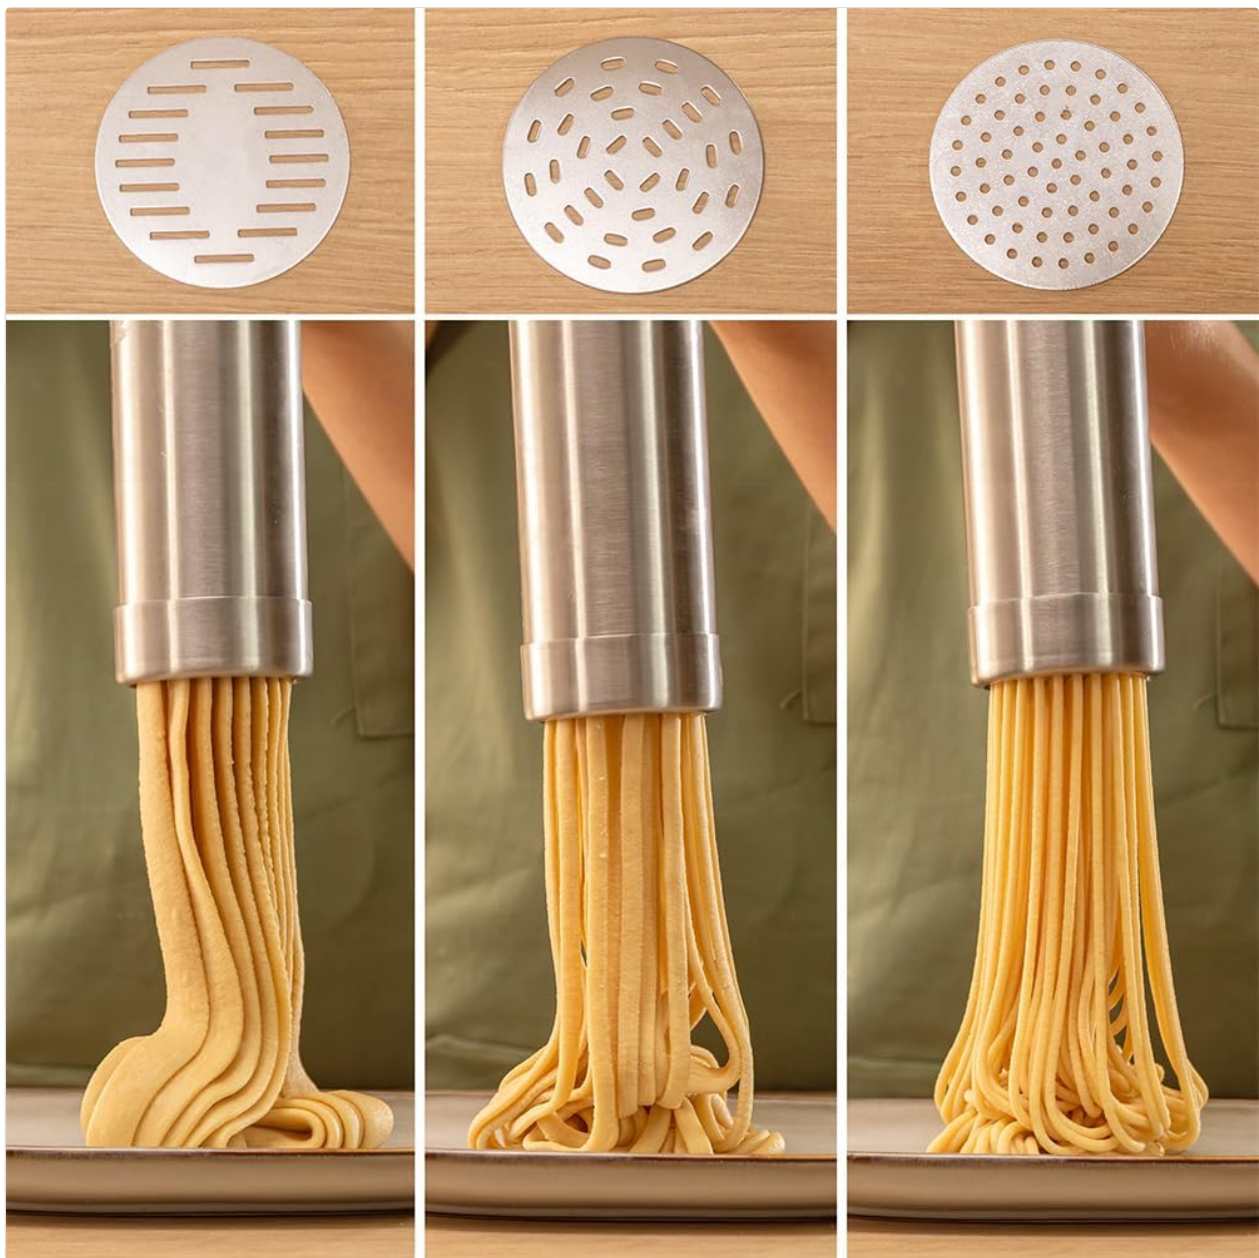


Image: A user cleaning the detachable metal extrusion tube of the pasta maker with a sponge under running water, demonstrating the ease of cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your Cecotec Fun EasyPasta, please refer to the following common problems and solutions:

- **Appliance not turning on:** Ensure the battery is fully charged. If the issue persists, contact customer support.
- **Dough not extruding or extruding slowly:**
 - Check the dough consistency. It might be too dry or too wet. Adjust by adding a small amount of flour or water.
 - Ensure the extrusion disc is not clogged. Clean it if necessary.
 - Do not overload the appliance; adhere to the 200g capacity.
- **Battery life seems short:** Ensure the appliance is fully charged before each use. Battery performance can vary based on dough consistency and frequency of use.

7. SPECIFICATIONS







Brand	Cecotec
Model Number	A01_EU01_100066
Power	40 W
Capacity	Up to 200 grams
Discs Included	4 (for noodles, spaghetti, tagliatelle, churros)
Operation Mode	Automatic
Wireless	Yes
Battery Life	Up to 50 uses per charge
Material	Stainless Steel (for extrusion tube and discs)
Color	Black
Dimensions	22 x 6 x 30.5 cm
Weight	1.29 kg

8. WARRANTY AND SUPPORT

This product is covered by the standard manufacturer's warranty. Please refer to the warranty card included in the packaging for specific terms and conditions.

Cecotec ensures the availability of spare parts for this product in the EU for a period of 10 years from the date of purchase.

For technical support, warranty claims, or inquiries about spare parts, please contact Cecotec customer service through their official website or the contact information provided in your purchase documentation.

	<p>Cecotec FUN&TASTE P'CORN EASY Popcorn Maker - User Manual</p> <p>User manual for the Cecotec FUN&TASTE P'CORN EASY popcorn maker, providing instructions on safe operation, cleaning, maintenance, technical specifications, and warranty information.</p>
	<p>Cecotec Fun Creepy Crepe Maker: Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Fun Creepy crepe maker, covering safety, operation, cleaning, maintenance, specifications, and warranty information. Learn how to use and care for your appliance.</p>
	<p>Cecotec Fun Crepestone Crepe Maker: Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Fun Crepestone crepe maker (Model 08009). Covers parts, safety, operation, cleaning, technical specifications, and warranty information.</p>
	<p>Cecotec Rock'nToast 3in1 Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Rock'nToast 3in1 multi-sandwich maker, grill, and waffle maker. Learn about parts, operation, cleaning, safety, and technical specifications.</p>
	<p>Cecotec Rock'n'Toast 3IN1 Sandwich Maker - Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Rock'n'Toast 3IN1 sandwich maker, covering safety guidelines, operation instructions, cleaning and maintenance procedures, technical specifications, and warranty information.</p>
	<p>Cecotec Fun&Taste P'CORN: Manual de Instrucciones y Uso</p> <p>Descubra la forma más fácil y rápida de disfrutar de palomitas caseras con la Cecotec Fun&Taste P'CORN. Diseñada para un uso doméstico sencillo, esta máquina de palomitas le permite preparar su snack favorito en minutos, ideal para reuniones familiares o noches de cine en casa. Conozca sus características y modo de empleo en este manual.</p>

