

X9

2025 X9 Handheld Game Console User Manual

Model: X9

1. INTRODUCTION

Thank you for purchasing the 2025 X9 Handheld Game Console. This portable gaming device offers a rich retro gaming experience with a 5.5-inch HD display, pre-loaded with 3000 classic games, and support for 10 different emulators. It also features TV output for a larger screen experience. Please read this manual carefully to ensure proper use and maintenance of your console.



Figure 1.1: The X9 Handheld Game Console, showcasing its ergonomic design and central display.

Package Contents:

- X9 Handheld Game Console
- USB Charging Cable
- AV Cable (for TV output)
- User Manual

2. SETUP

2.1 Initial Charging

Before first use, fully charge the console. Connect the provided USB charging cable to the console's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator light will typically show charging status and turn off or change color when fully charged.

- **Charging Time:** Approximately 2-3 hours for a full charge.
- **Battery Type:** 1 Lithium Ion battery (included).

2.2 Powering On/Off

- **To Power On:** Press and hold the "Power" button located on the top or side of the console until the screen illuminates.
- **To Power Off:** Press and hold the "Power" button until a power-off prompt appears on the screen, then confirm. Alternatively, for a hard shutdown, hold the power button for several seconds until the device turns off.

2.3 Connecting to a TV (TV Output)

The X9 console supports TV output, allowing you to play games on a larger screen.

1. Ensure the console is powered off.
2. Connect one end of the provided AV cable to the AV output port on the console.
3. Connect the other end of the AV cable (red, white, yellow connectors) to the corresponding AV input ports on your television.
4. Turn on your television and select the correct AV input source.
5. Power on the X9 console. The display should automatically switch to your TV screen.

Connect TV

Play classic game on big screen



Figure 2.1: The X9 console connected to a television via AV cable, demonstrating the TV output feature.

3. OPERATING INSTRUCTIONS

3.1 Navigating the Menu

Use the directional pad (D-pad) on the left side of the console to navigate through menu options. The "A" button (or equivalent action button) is typically used to confirm selections, and the "B" button (or equivalent back button) to go back.

Classic game handheld

5.5 inches | super clear picture quality |
support massive games



Figure 3.1: The X9 console displaying a classic game, highlighting the 5.5-inch screen and control layout.

3.2 Playing Games

The console comes pre-loaded with 3000 classic games. To start playing:

1. From the main menu, select the "Games" or "Emulator" section.
2. Browse through the list of available games or emulators.
3. Select a game to launch it.
4. Use the console's buttons and D-pad to control gameplay.

5.5-inch HD large screen

3000 Games/ 10 Emulator



Figure 3.2: The X9 console screen highlighting its 5.5-inch HD display, 3000 pre-loaded games, and support for 10 emulators.

3.3 Supported Emulators

The X9 console supports 10 different emulators, allowing access to a wide range of classic gaming libraries. These include:

Build in 10 emulators

Support 3000 classic games



Figure 3.3: Visual representation of the 10 built-in emulators supported by the X9 console, including MAME, GBA, GBC, GB, SFC, FC, NEC, MD, SMC, and CPS.

- MAME
- GBA (Game Boy Advance)
- GBC (Game Boy Color)
- GB (Game Boy)
- SFC (Super Famicom / SNES)
- FC (Famicom / NES)
- NEC
- MD (Mega Drive / Genesis)
- SMC
- CPS (Capcom Play System)

4. MAINTENANCE

4.1 Cleaning the Console

- Use a soft, dry, lint-free cloth to clean the console's exterior.
- For stubborn smudges, slightly dampen the cloth with water. Do not use harsh chemicals, cleaning sprays, or abrasive materials.
- Avoid getting moisture into any openings.

4.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the console regularly, even if not in use for extended periods (e.g., once every 3 months).
- Do not expose the console to extreme temperatures (hot or cold), as this can damage the battery.

4.3 Storage

Store the console in a cool, dry place away from direct sunlight and excessive dust. If storing for a long time, ensure the battery has a partial charge (around 50%).

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Console does not power on.	Low battery; Power button not held long enough; System crash.	Charge the console for at least 30 minutes. Hold the power button for 5-10 seconds. If unresponsive, try a hard reset (if a reset pinhole exists, otherwise let battery drain and recharge).
Screen is blank or flickering.	Loose connection; Software glitch; Hardware issue.	Restart the console. Ensure no external cables are interfering. If problem persists, contact support.
No display on TV when connected.	Incorrect TV input selected; Loose AV cable connection; Console not in TV output mode.	Verify TV input source (e.g., AV1, Video). Ensure AV cable is securely connected to both console and TV. Restart console after connecting.
Games are slow or freezing.	System overload; Software bug; Low battery.	Restart the console. Ensure battery is sufficiently charged. Close any background applications if applicable.

6. SPECIFICATIONS

Feature	Detail
Model Number	X9

Feature	Detail
Display	5.5-inch HD Screen
Pre-loaded Games	3000 Classic Games
Supported Emulators	10 (MAME, GBA, GBC, GB, SFC, FC, NEC, MD, SMC, CPS)
TV Output	Yes (AV Cable)
Battery	1 Lithium Ion battery (included)
Product Dimensions	5.1 x 3.4 x 1.2 inches
Manufacturer	BNEW

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

The warranty typically does not cover damage caused by:

- Accident, abuse, misuse, or neglect.
- Unauthorized repair or modification.
- Improper installation or operation.
- Exposure to extreme temperatures or liquids.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact the retailer or manufacturer directly. Refer to the packaging or purchase documentation for specific contact details.

Manufacturer: BNEW