

## Emasme cabinet safe

# Emasme Electronic Keypad Safety Box (Model: cabinet safe) Instruction Manual

Model: cabinet safe

## 1. INTRODUCTION

---

This instruction manual provides essential information for the safe and efficient operation of your Emasme Electronic Keypad Safety Box. Please read this manual thoroughly before installation and use, and retain it for future reference.

## 2. PRODUCT CONTENTS

---

Verify that all items listed below are included in your package:

- Emasme Electronic Keypad Safety Box
- Emergency Keys (x2)
- Foot Mats (x4)
- Emergency Battery Box (x1)
- Expansion Bolts (x6)
- Instruction Manual (x1)

## Small household safe, size



Figure 2.1: Included accessories for the Emasme Electronic Keypad Safety Box.

### 3. SAFETY INFORMATION

- Do not store emergency keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is placed on a stable, level surface or securely mounted to a wall/floor.
- Keep the safe away from excessive moisture or direct heat sources.
- Regularly check battery levels to ensure proper operation of the electronic keypad.

### 4. SETUP

#### 4.1 First Opening or Emergency Opening

For the initial opening or in case of emergency (e.g., forgotten code, dead batteries), use the emergency key:

1. Locate the emergency keyhole, usually concealed behind the keypad or a cover.
2. Insert the emergency key into the keyhole.
3. Rotate the key counter-clockwise to unlock the safe.
4. Turn the knob to open the safe door.

Your browser does not support the video tag.

**Video 4.1:** Demonstrates the first opening and emergency opening procedure using the emergency key and knob. This video also shows battery installation and code setting.

## 4.2 Battery Installation

The electronic keypad requires 4\*AA alkaline batteries for operation. Install them as follows:

1. Open the safe door.
2. Locate the battery compartment on the inside of the door.
3. Remove the battery cover.
4. Insert four AA batteries, ensuring correct polarity (+/-).
5. Replace the battery cover.




## 4.3 Mounting the Safe

The safe can be mounted to a wall or floor for added security. It features 4 pre-drilled holes on the back and 2 on the bottom.

1. **Step 1:** Place the safe in the desired installation location (wall or floor). Mark the drilling spots on the wall/floor through the pre-drilled holes.
2. **Step 2:** Remove the safe and drill a 10mm hole at each marked spot using a drill bit.
3. **Step 3:** Position the safe back in place and insert the expansion bolts through the safe's holes into the drilled holes. Tighten the screws securely.

# WALL & FLOOR MOUNTING

## A Wall Mounting

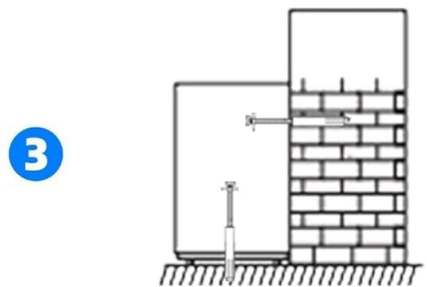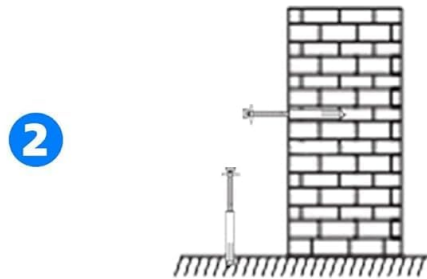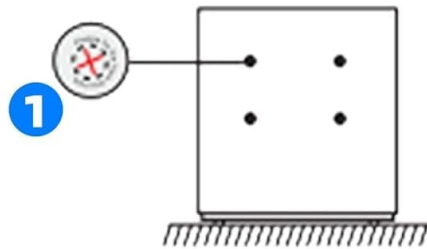

## B Floor Mounting



Figure 4.1: Wall and floor mounting instructions for the Emasme Safety Box.

## 5. OPERATION

### 5.1 Setting the First Code

To set your personal access code:

1. With the safe door open, locate and press the red "SETTING BUTTON" on the inside of the door.
2. Enter your desired new code (1-8 digits).
3. Press "#" to confirm.
4. Re-enter the new code.
5. Press "#" again to confirm. The safe will emit a confirmation sound.

The default password is "123456".

### 5.2 Setting the Second Code

To set a secondary access code:

1. Press "00" followed by the "SETTING BUTTON" on the inside of the door.
2. Enter your desired new code (1-8 digits).

3. Press "#" to confirm.
4. Re-enter the new code.
5. Press "#" again to confirm. The safe will emit a confirmation sound.

## 5.3 Opening the Safe

The safe offers three methods for quick access:

- **Code + Knob:** Enter your 1-8 digit code, then turn the knob.
- **Key + Knob:** Insert the emergency key, turn it counter-clockwise, then turn the knob.
- **Backup Power Box + Code + Knob:** If batteries are dead, connect the emergency battery box, enter your code, then turn the knob.



Figure 5.1: Three methods for unlocking the safe.

## 5.4 Silent Mode

To turn on/off silent mode (mute keypad sounds):

- Press the "\*" key for approximately 3 seconds.
- The safe will indicate silent mode activation/deactivation.

## 5.5 Dual Alarm System

The safe is equipped with a dual alarm system for enhanced security:

- **Vibration Alarm:** If the safe is shaken or hit hard, it will activate an alarm immediately.
- **Incorrect Code Alarm:** Entering an incorrect code three times consecutively will trigger the alarm.
- The alarm sound exceeds 70 decibels and lasts for one minute. To stop the alarm, enter the correct code.



Figure 5.2: The safe's smart anti-theft system with dual alarm features.

## 5.6 Adjustable and Removable Shelf

The safe includes a removable shelf that can be adjusted to different heights or removed entirely to accommodate larger items. This provides flexible storage options for various valuables such as cash, jewelry, documents, cameras, watches, medicine, books, or trophy cups.

# Cabinet Safe with Removable Interior Shelf



## With Shelf



Cash



Camera



Watch



Jewelry

 
## Without Shelf



Document



Medicine

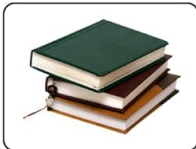

Book



Trophy Cup



Figure 5.3: Flexible storage with the adjustable/removable shelf.

## 5.7 Key Rack

A convenient key rack is located inside the safe door, providing a secure and organized space for multiple keys.

## 6. MAINTENANCE

- Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners.
- Regularly check the battery compartment and replace batteries as needed to prevent leakage.
- Ensure the door seals are free from debris to maintain optimal security.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keypad not responding.	Dead batteries.	Replace batteries or use the emergency battery box.

Problem	Possible Cause	Solution
Safe door will not open with code.	Incorrect code entered; batteries low.	Ensure correct code is entered; replace batteries or use emergency key.
Alarm sounds unexpectedly.	Safe was shaken/hit; incorrect code entered multiple times.	Enter the correct code to disarm the alarm. Avoid shaking the safe.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Emasme
Model Number	cabinet safe
Lock Type	Electronic lock
Capacity	2 Cubic Feet
Product Dimensions	6.69 x 9.06 x 6.69 inches
Mounting Options	Wall or Floor (6 pre-drilled holes)
Alarm System	Vibration Alarm, 3 Incorrect Password Alarms (>70dB)
Power Source	4*AA Alkaline batteries

## 9. ADDITIONAL RESOURCES

For further assistance or to view more product details, please refer to the official product videos:

Your browser does not support the video tag.

**Video 9.1:** "Emasme Security Home Safe" - A comprehensive overview of the safe's features and benefits.

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Emasme customer service. Details can typically be found on the product packaging or the official Emasme website.

If there are any problems with your product, please tell us directly, and our professional customer service team will respond and resolve the problem within 24 hours.