

Gudsunal C6003B

Gudsunal C6003B 60cm 4-Zone Ceramic Hob User Manual

Model: C6003B

[Overview](#) [Installation](#) [Safety Information](#) [Product](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. SAFETY INFORMATION

Please read this manual carefully before installing or using your Gudsunal C6003B ceramic hob. Keep this manual for future reference.

- This appliance is intended for domestic use only.
- Ensure the electrical installation is suitable for the hob's power requirements (6000W, 220V). Professional installation is recommended.
- Do not touch hot surfaces. Always use oven mitts or pot holders.
- Supervise children when the appliance is in use. The child lock feature should be activated when not in use.
- Do not store flammable materials on or near the hob.
- Never use the hob as a work surface or for storage.
- If the ceramic surface is cracked, immediately switch off the appliance and disconnect it from the power supply to avoid electric shock.
- Do not clean the hob with a steam cleaner.

2. PRODUCT OVERVIEW

The Gudsunal C6003B is a 60cm ceramic hob featuring four radiant cooking zones and touch controls. It offers 9 heat levels, a timer function, automatic shut-off, and a child lock for enhanced safety and convenience.

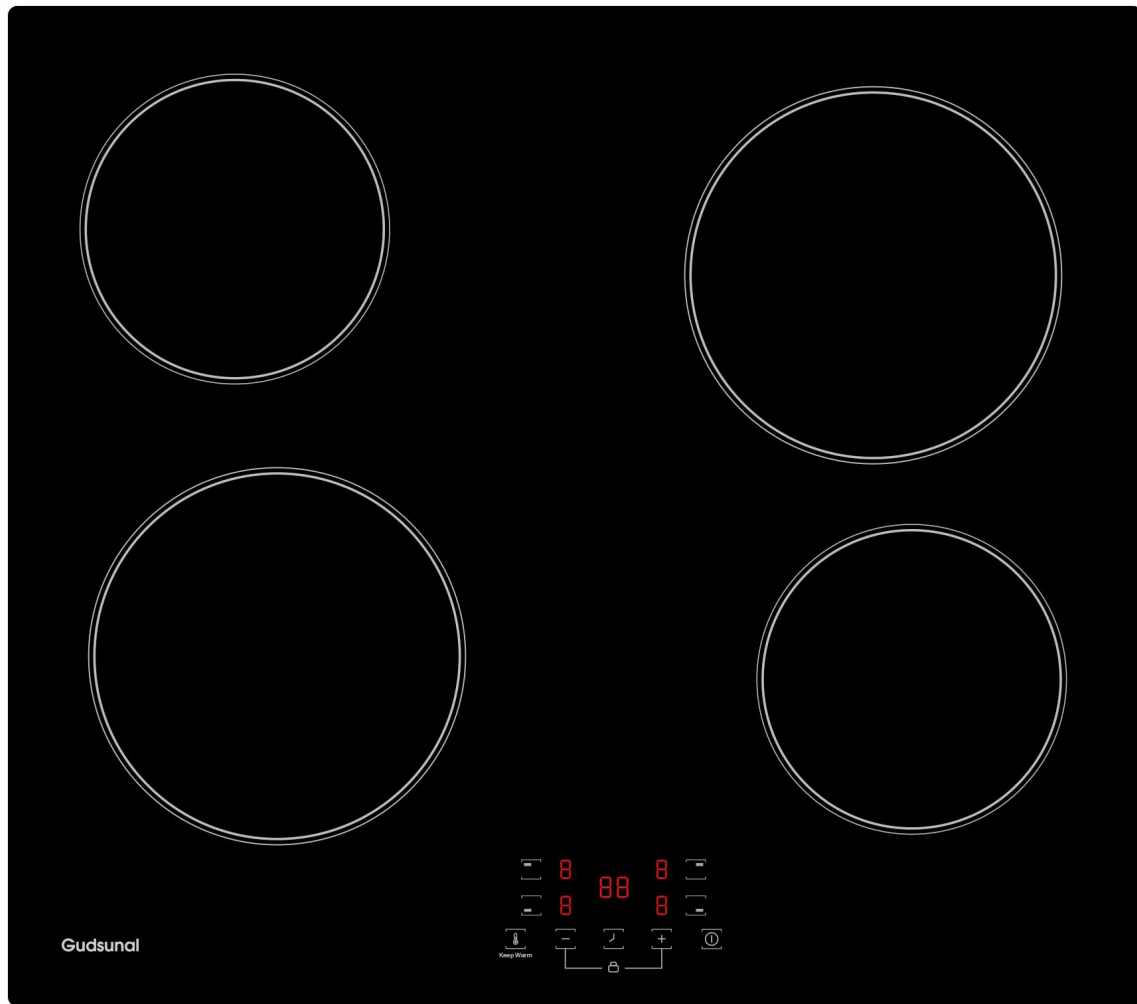


Figure 2.1: Gudsunal C6003B 60cm 4-Zone Ceramic Hob. This image shows the sleek black ceramic surface with four distinct cooking zones and the integrated touch control panel at the front.

2.1 Components

- Ceramic Glass Surface
- Four Radiant Heating Zones
- Touch Control Panel
- Hot Surface Indicators

2.2 Control Panel

The touch control panel is located at the front of the hob and includes:

- Power On/Off button
- Zone selection buttons
- Heat level adjustment (+/-) buttons
- Timer button
- Child Lock button

3. INSTALLATION

Installation should be performed by a qualified electrician or technician in accordance with local regulations and standards.

3.1 Unpacking

- Carefully remove the hob from its packaging.
- Check for any damage during transit. Do not install if damaged.
- Ensure all included components are present: sealing tape, installation kits, and the trim size chart.

3.2 Countertop Preparation

- Refer to the provided trim size chart for the exact cutout dimensions required in your countertop.
- Ensure adequate ventilation space beneath the hob as specified in the installation instructions.

3.3 Electrical Connection

- The hob requires a 220V electrical supply.
- The electrical connection must be made by a qualified professional.
- Ensure the appliance is properly grounded.

3.4 Securing the Hob

- Apply the sealing tape around the edges of the hob before placing it into the countertop cutout.
- Use the provided installation kits to secure the hob firmly to the countertop from underneath.

4. OPERATION

4.1 Turning On/Off

- To turn on: Press the Power On/Off button. The display will show '0' for all zones.
- To turn off: Press the Power On/Off button again.

4.2 Adjusting Heat Levels

- Select the desired cooking zone by pressing its corresponding selection button.
- Use the '+' or '-' buttons to adjust the heat level from 1 (low) to 9 (high).
- The hob also features a warm setting for keeping food warm after cooking.

4.3 Timer Function

- To set the timer: Select a cooking zone, then press the Timer button.
- Use the '+' or '-' buttons to set the desired cooking time.
- The timer will count down, and the hob will automatically switch off the selected zone when the time expires.

4.4 Child Lock

- To activate: Press and hold the Child Lock button for a few seconds until an indicator appears. This prevents accidental operation.
- To deactivate: Press and hold the Child Lock button again until the indicator disappears.

4.5 Automatic Shut-off

The hob is equipped with an automatic shut-off feature that activates if a cooking zone is left on for an extended period without adjustment, or if a spill occurs on the control panel.

4.6 Hot Surface Indicator

After a cooking zone is turned off, the hot surface indicator (usually an 'H' on the display) will remain lit until the surface temperature has cooled down to a safe level. Do not touch the surface while the indicator is on.

5. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your ceramic hob.

- **Before Cleaning:** Always ensure the hob is switched off and has completely cooled down. The hot surface indicator should be off.
- **Daily Cleaning:** Wipe the ceramic surface with a soft cloth and warm soapy water. Rinse thoroughly and dry with a clean cloth to prevent water spots.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic hob cleaner and a non-abrasive scraper. Follow the cleaner's instructions carefully.
- **Avoid:** Do not use abrasive sponges, scouring pads, harsh chemicals, or steam cleaners, as these can damage the ceramic surface.
- **Control Panel:** Wipe the touch control panel with a soft, damp cloth. Ensure it is dry before operating the hob.

6. TROUBLESHOOTING

If you encounter issues with your hob, refer to the following common problems and solutions before contacting customer service.

- **Hob does not turn on:**
 - Check if the hob is properly connected to the power supply.
 - Ensure the main circuit breaker has not tripped.
 - Verify that the child lock is not activated.
- **Cooking zone not heating:**
 - Ensure the correct cooking zone has been selected and a heat level is set.
 - Check if the cookware is suitable for ceramic hobs and has a flat bottom.
- **Hob turns off unexpectedly:**
 - This may be due to the automatic shut-off feature. Check if a timer has expired or if there was a spill on the control panel.
 - Ensure there is adequate ventilation around the hob.
- **Control panel unresponsive:**
 - Clean the control panel to remove any spills or debris.
 - Ensure your finger is dry when touching the controls.
 - Deactivate the child lock if it is active.

If the problem persists after attempting these solutions, please contact Gudsunal customer support.

7. SPECIFICATIONS

Brand	Gudsunal
Model Number	C6003B
Product Dimensions	52D x 59W x 4.9H cm
Power	6000 Watts
Voltage	220 Volts
Material	Metal (with Ceramic Glass Surface)
Heating Elements	4
Power Source	Electric
Burner Type	Radiant
Control Type	Touch
Special Features	Warm setting, Automatic shut-off, Safety lock, Hot surface indicator, Timer
Included Components	Sealing tape, Installation kits, Manual, Hob, Trim size chart

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Gudsunal C6003B ceramic hob, please refer to the warranty card included with your purchase or visit the official Gudsunal website for contact details.

Always provide your model number (C6003B) and purchase date when contacting support.