

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [24Six](#) /

› [24Six Solo Gold Kosher MP3 Player Instruction Manual](#)

24Six Solo Gold

24Six Solo Gold Kosher MP3 Player Instruction Manual

Model: Solo Gold | Brand: 24Six

INTRODUCTION

The 24Six Solo Gold is a dedicated Kosher MP3 player designed for offline access to music, shiurim, and stories. It features 64GB of internal storage and operates as a fully closed system, ensuring only approved Jewish content is played through custom filters set via the 24Six.app. This device does not require Wi-Fi for operation, making it ideal for extended offline use, including pre-paid Yeshiva or Camp Modes for up to 12 months.

Key features include:

- **No Wi-Fi Required:** Enjoy fully offline access to music, shiurim, and stories with no internet needed.
- **Auto Sync via Solo Connect Stations:** Refresh content and update playlists by simply being near a sync station.
- **64GB Internal Storage:** Save thousands of songs and shiurim with ample built-in memory.
- **Extended Offline Use:** Use up to 12 months offline with pre-paid Yeshiva or Camp Mode.
- **Secure and Filtered Content:** Only plays approved Jewish content with custom filters set through 24Six.app.

SETUP

1. **Unboxing:** Carefully remove the 24Six Solo Gold player, USB cable, and earphones from the packaging.
2. **Initial Charge:** Connect the player to a power source using the provided USB cable. Allow the device to fully charge before first use. The LCD display will indicate charging status.
3. **Content Loading (Initial):** To load content, connect the player to a computer using the USB cable. The device will appear as a removable storage drive. Drag and drop approved audio files (MP3, WAV, OGG, AAC) into the designated folders on the player.
4. **Auto Sync (Optional):** For automatic content updates and playlist refreshes, place the device near a designated Solo Connect Station. Ensure the device is powered on and within range of the station.
5. **Earphones Connection:** Plug the included earphones into the Aux port on the device for private

listening.



Image: The 24Six Solo Gold MP3 Player device, showing its compact design.

OPERATING INSTRUCTIONS

- Power On/Off:** Press and hold the power button (location may vary, typically on the side or top) until the screen illuminates or turns off.
- Navigation:** Use the touch screen or physical buttons (if present) to navigate through menus. The LCD display provides a clear interface for selecting content.
- Playing Content:** Select your desired music, shiur, or story from the library. Press the play button to begin playback.
- Volume Control:** Adjust the volume using the dedicated volume buttons, usually located on the side of the device.
- Content Filtering:** The 24Six Solo Gold is a closed system designed to play only approved Jewish content. Custom filters are managed through the 24Six.app. No external content can be added without approval.
- Extended Offline Mode:** For pre-paid Yeshiva or Camp Modes, the device can function offline for up to 12 months without needing to connect to a sync station.



Image: The retail packaging for the 24Six Solo Gold MP3 Player.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid abrasive cleaners or solvents.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge regularly.
- **Software Updates:** Periodically check the 24Six.app or connect to a Solo Connect Station for any available software updates to ensure optimal performance and security.

TROUBLESHOOTING

Device not turning on:

Ensure the device is fully charged. Connect it to a power source and wait a few minutes before attempting to power on again.

No sound:

Check the volume level. Ensure earphones are properly plugged into the Aux port. Test with different earphones if possible.

Content not appearing:

Verify that content has been correctly transferred to the device via USB or synced through a Solo Connect Station. Ensure the content format is supported (MP3, WAV, OGG, AAC). Remember, only approved Jewish content is supported.

Device unresponsive:

Perform a soft reset by pressing and holding the power button for approximately 10-15 seconds until the device restarts.

SPECIFICATIONS

Feature	Detail
Product Dimensions	8.1 x 6.4 x 4.6 inches
Item Weight	13 ounces
Manufacturer	24Six
Model Name	Solo Gold
Special Feature	Auto Sync via Solo Connect Stations, Extended Offline Use
Connectivity Technology	Aux
Memory Storage Capacity	64 GB
Color	Gold
Compatible Devices	Headphone
Included Components	USB Cable, Earphones
Display Technology	LCD
Supported Standards	MP3, WAV, OGG, AAC
Date First Available	May 29, 2025

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your 24Six Solo Gold player or contact 24Six customer support directly. Product protection plans are available for purchase separately to extend coverage beyond the standard manufacturer's warranty.

For technical assistance or further inquiries, please visit the official 24Six website or contact their customer service department.

ADDITIONAL RESOURCES

No relevant official product videos from the seller were found for this specific model. Please refer to the manufacturer's website for any available video tutorials or demonstrations.

