

[Manuals.plus](#) /

› [JOYIN](#) /

› JOYIN 6 Ft Flying Grim Reaper Animated Halloween Decoration Instruction Manual

JOYIN 17580

JOYIN 6 Ft Flying Grim Reaper Animated Halloween Decoration

INSTRUCTION MANUAL

Product Overview

The JOYIN 6 Ft Flying Grim Reaper is an animated Halloween decoration designed to create a spooky and immersive atmosphere for outdoor displays. This unique animatronic features a tattered cloak, a skeletal grip on its sickle, and lifelike motion. It is sound-activated, triggering eerie screams, glowing red eyes, and a spinning head when sound is detected. Designed for easy setup and versatile placement, it's an ideal addition to haunted houses, graveyards, lawns, or party yard decor.



Image: The 6-foot tall Flying Grim Reaper animatronic, featuring a dark cloak, skeletal hands holding a scythe, and glowing yellow eyes, positioned in front of a house at dusk.

Setup Instructions

Follow these steps to assemble and prepare your Flying Grim Reaper for display.

1. Battery Installation

The Grim Reaper requires 3 AA batteries (not included) for its sound and light features. Ensure batteries are inserted correctly according to polarity markings.

1. Locate the battery compartment, typically on the back of the unit.
2. Open the compartment cover. A small screwdriver may be required.
3. Insert 3 AA batteries, observing the correct positive (+) and negative (-) orientation.
4. Close the battery compartment cover securely.



Image: Detailed view of the battery compartment, illustrating how to open it from the back and insert three AA batteries.

2. Assembly of Stand and Reaper Body

Assemble the stand and attach the Grim Reaper body and scythe as follows:

1. **Connect pole pieces:** Join the sections of the main support pole together.
2. **Insert base crossbars:** Assemble the crossbar base for stability and insert the pole into the assembled base.
3. **Attach reaper body:** Securely attach the Grim Reaper's body to the top section of the assembled pole.
4. **Clip on the scythe:** Attach the scythe to the Grim Reaper's hand or designated clip point.

EASY TO SET UP

01



Connect pole pieces

02



Insert base crossbars

03



Attach reaper body

04



Clip on the scythe

Image: A visual guide demonstrating the four key steps for assembling the Grim Reaper, including connecting the pole, setting up the base, attaching the main body, and securing the scythe.

Glowing Skeleton Eyes



Classic Reaper Scythe



Realistic Rib Cage



Image: Detailed views showcasing the glowing eyes, the design of the scythe, and the realistic rib cage of the Grim Reaper.

Operating Instructions

The Flying Grim Reaper is designed for sound-activated operation.

- Once batteries are installed and the unit is assembled, place the Grim Reaper in your desired outdoor location.
- The animatronic will activate its eerie screams, glowing red eyes, and spinning head when it detects a sound nearby.
- Ensure the area around the Grim Reaper is clear to allow for its full range of motion and to prevent any obstructions.

BUILT IN LED LIGHTS



Glowing eyes and chilling grin—your Halloween starts here.

Image: A close-up of the Grim Reaper's head, highlighting its built-in LED lights that illuminate the eyes with a chilling yellow glow.

Maintenance and Storage

Proper care will extend the life of your Halloween decoration.

- **Cleaning:** Wipe down the surface with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Outdoor Use:** While designed for outdoor use, it is recommended to bring the decoration indoors during severe weather conditions (heavy rain, strong winds, snow) to prevent damage.
- **Storage:** When not in use, remove batteries to prevent corrosion. Store the Grim Reaper in its original packaging or a dry, cool place away from direct sunlight and extreme temperatures.

Troubleshooting

If your Grim Reaper is not functioning as expected, consider the following:

- **No Power/Activation:**
 - Check if batteries are inserted correctly with the proper polarity.
 - Replace old batteries with fresh ones.
 - Ensure the battery compartment cover is securely closed.
- **Sound Activation Issues:**
 - Ensure there is sufficient ambient sound to trigger the sensor.
 - Test in a quieter environment and make a distinct sound (e.g., clap) near the unit.
- **Movement/Light Issues:**
 - Verify that no parts are obstructed or tangled.
 - Check battery levels, as low power can affect motor and light performance.

Specifications

Feature	Detail
Product Dimensions	5 x 5 x 4 inches (packaged)
Item Weight	6.38 pounds
Manufacturer	JOYIN US CORP
ASIN	B0FBFDLCWD
Item Model Number	17580
Assembly Required	Yes
Batteries Required	Yes (3 AA, not included)
Height (Assembled)	Approximately 6 feet (74-81 inches depending on scythe position)

PRODUCT DIMENSIONS

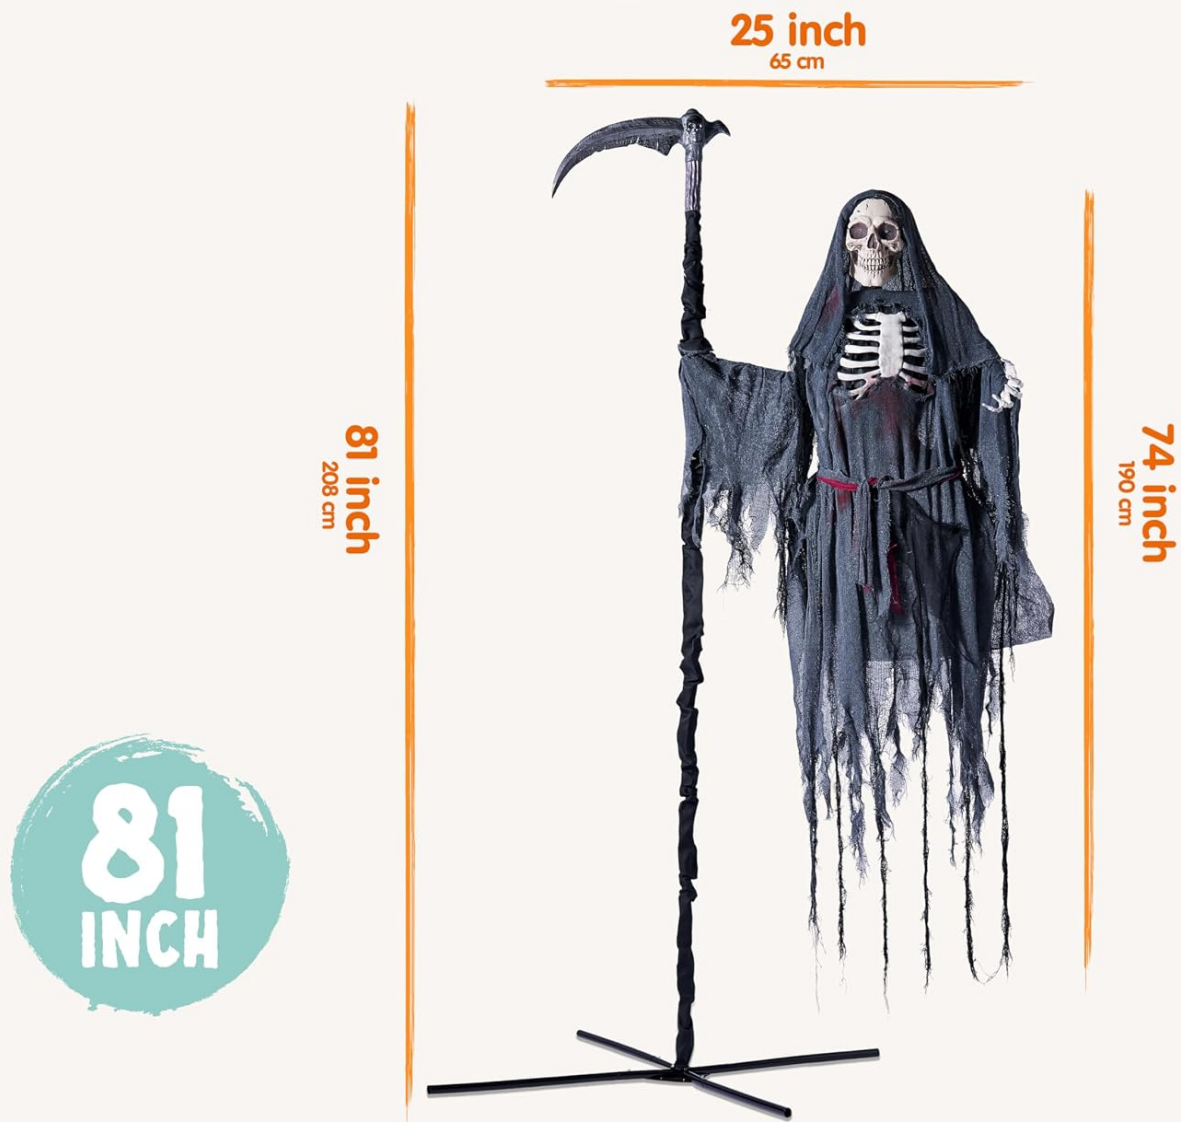


Image: A diagram illustrating the overall dimensions of the assembled Grim Reaper, including its height with and without the scythe.

Warranty and Support

For any questions regarding your JOYIN 6 Ft Flying Grim Reaper, please contact the seller directly through the platform where you purchased the product. Refer to your purchase receipt for specific warranty details, if applicable. The seller for this product is [JoyinDirect](#).

© 2024 JOYIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question