

ELZO YH-F072

ELZO 30000mAh Camping Fan Model YH-F072 User Manual

Portable Rechargeable Fan with LED Light and Power Bank Function

INTRODUCTION

Thank you for purchasing the ELZO 30000mAh Camping Fan, Model YH-F072. This portable and rechargeable fan is designed to provide cooling, illumination, and power bank functionality for various outdoor and indoor activities. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan. Keep this manual for future reference.

SAFETY INSTRUCTIONS

- Do not disassemble, repair, or modify the product.
- Keep the product away from water, fire, and high temperatures.
- Do not insert fingers or foreign objects into the fan grill.
- Use only the provided or a certified 5V/2A (or higher) Type-C charger for charging the fan.
- Store the fan in a cool, dry place when not in use for extended periods.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the package for the following items:

- ELZO 30000mAh Camping Fan (Model YH-F072)
- USB-C Charging Cable
- Remote Control
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your ELZO Camping Fan.



An overhead view of the ELZO camping fan, showing its orange and black design, the fan blades, surrounding LED light strips, control panel with a rotary knob and buttons, and a coiled USB-C charging cable.

1. **Fan Grill:** Protects the fan blades.
2. **LED Light Strips:** Provide illumination (warm and white light).
3. **Control Panel:** Includes a stepless speed adjustment knob, light mode button, timer button, oscillation button, and battery indicator lights.

4. **Foldable Hook:** For hanging the fan.
5. **Swivel Base:** Allows 360° rotation for flexible positioning.
6. **Type-C Input Port:** For charging the fan.
7. **USB Output Port:** For charging external devices.
8. **Remote Control Receiver:** For wireless operation.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the fan. Connect the provided USB-C cable to the fan's Type-C input port and a 5V/2A (or higher) USB power adapter (not included). The battery indicator lights on the control panel will show the charging progress. A full charge typically takes 6-7 hours.
3. **Remote Control Battery:** The remote control requires 1 'A' battery (included). Open the battery compartment on the back of the remote and insert the battery, observing polarity.

OPERATING INSTRUCTIONS

Fan Operation

- **Power On/Off:** Rotate the stepless speed adjustment knob clockwise to turn on the fan. Continue rotating to increase fan speed. Rotate counter-clockwise to decrease speed and turn off.
- **Speed Adjustment:** The fan features stepless speed adjustment. Turn the knob to precisely control the airflow from gentle breeze to strong wind.

Light Operation

- **Turn On/Off:** Press the light button on the control panel or remote control to turn the light on. Press again to cycle through modes or turn off.
- **Light Modes:** The fan offers two light sources: warm light and white light, each with 3 brightness levels. Press the light button repeatedly to cycle through: Warm Light (Low) > Warm Light (Medium) > Warm Light (High) > White Light (Low) > White Light (Medium) > White Light (High) > Off.

Timer Function

- **Set Timer:** Press the timer button on the control panel or remote control to activate the timer. Each press will cycle through 2H (2 hours), 4H (4 hours), 6H (6 hours), 8H (8 hours), and then turn off the timer. The fan will automatically shut off after the selected time.

Oscillation

- **Automatic Oscillation:** Press the oscillation button on the control panel or remote control to activate automatic oscillation. Press once for 45° oscillation, press again for 90° oscillation, and press a third time to turn off oscillation.
- **Manual Swivel:** The fan head can be manually swiveled up to 270° to direct airflow precisely where needed.

Remote Control

The included remote control allows convenient operation from a distance of up to 5 meters. Ensure there are no obstructions between the remote and the fan's receiver.

- **Fan On/Off/Speed:** Use the fan speed buttons on the remote.
- **Light On/Off/Mode:** Use the light button on the remote.
- **Timer:** Use the timer button on the remote.
- **Oscillation:** Use the oscillation button on the remote.

Charging Other Devices (Power Bank Function)

The fan can also serve as a power bank to charge your mobile devices.

- Connect your device's charging cable to the fan's USB output port.
- The fan will automatically begin charging your device.
- The output is 5V/2A.

CHARGING THE FAN

To charge the ELZO Camping Fan:

1. Connect the USB-C charging cable to the fan's Type-C input port.
2. Connect the other end of the cable to a 5V/2A or higher USB power adapter (e.g., a phone charger, not included).
3. The battery indicator lights will illuminate to show the charging status. All lights will be solid when fully charged.
4. The fan supports working while charging.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the fan's exterior. Do not use abrasive cleaners or immerse the fan in water.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place. It is recommended to charge the fan every 3 months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully.
Fan speed is weak.	Low battery level.	Recharge the fan.
Light does not turn on.	Battery is depleted or light mode is off.	Charge the fan. Press the light button to cycle through modes.
Fan is not charging.	Charging cable or adapter is faulty; adapter output is too low.	Ensure cable is securely connected. Try a different USB-C cable or a 5V/2A or higher power adapter.

Problem	Possible Cause	Solution
Remote control not working.	Remote battery depleted or incorrect insertion; too far from fan; obstruction.	Replace remote battery, ensure correct polarity. Move closer to the fan (within 5m). Remove obstructions.

SPECIFICATIONS

Brand	ELZO
Model Name	YH-F072
Battery Capacity	30000mAh (Rechargeable)
Charging Input	5V/2A Type-C
USB Output	5V/2A
Run Time	28-70 hours (depending on wind speed and lighting)
Charging Time	6-7 hours (with 2A+ charger)
Light Settings	Warm light (3 levels), White light (3 levels)
Fan Speed	Stepless adjustment
Timer Settings	2H, 4H, 6H, 8H
Oscillation	45°, 90° automatic
Swivel Head	270° manual adjustment
Remote Control Range	Up to 5 meters
Material	Sturdy and durable ABS
Product Dimensions	5"D x 7"W x 9"H
Item Weight	2 pounds
Remote Control Batteries	1 A battery (included)

WARRANTY AND SUPPORT

ELZO products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact ELZO customer service through the retailer where the product was purchased. Please have your model number (YH-F072) and purchase details ready when contacting support.