

[manuals.plus](#) /› [Keenso](#) /› [Keenso MEMPP303 Stylus Pen User Manual](#)

Keenso MEMPP303

Keenso MEMPP303 Stylus Pen User Manual

Model: MEMPP303 | Brand: Keenso

1. INTRODUCTION

The Keenso MEMPP303 Stylus Pen is designed for precise interaction with compatible devices. It features 4096 levels of pressure sensitivity, allowing for detailed and responsive input. The pen includes two customizable buttons for enhanced control during various tasks such as editing, drawing, and writing.

This manual provides instructions for the setup, operation, and maintenance of your MEMPP303 Stylus Pen.

2. PACKAGE CONTENTS

- 1 x Keenso MEMPP303 Stylus Pen
- 2 x Replacement Pen Tips
- 1 x Instruction Book (this document)



Image: The Keenso MEMPP303 Stylus Pen shown alongside its two replacement pen tips and a tip removal tool.

3. SPECIFICATIONS

Feature	Detail
Stylus Model	ME-MPP303
Material	Aluminum Alloy
Color	Deep Gray
Pressure Sensitivity	4096 Levels
Battery Type	1 x AAAA Battery (Not Included)
Item Weight	1.06 ounces
Package Dimensions	5.91 x 1.97 x 0.79 inches

4. COMPATIBILITY

The MEMPP303 Stylus Pen is compatible with a range of devices, including but not limited to:

- For 17 Aexxx series
- For X2 12 E0xx series
- For X2 12 G0xx series
- For X360 13z Ag0xxx series
- For X360 15 Ar0xxx series
- For X360 15 Bp0xx series
- For X360 15 Bq0xx series

- For X360 15 Cn0xxx series
- For X360 15 Cp0xxx series
- For X360 15 Dr0xxx series
- For X360 15 Ds0xxx series
- For Pavilion X360 11 Ap0xxx series
- For Pavilion X360 11m Ad0xx, 11 Ad0xx series
- For Pavilion X360 14 Dh0xxx series
- For Pavilion X360 14m Ba0xx, 14 Ba0xx series
- For Pavilion X360 14m Cd0xx series
- For Pavilion X360 15 Br0xx series
- For Pavilion X360 15 Cr0xx series
- For Pavilion X360 15 Dq0xxx series
- For Spectre 13 Ak0xxx series

Please verify your device's compatibility before use.

5. SETUP

5.1 Battery Installation

The MEMPP303 Stylus Pen requires one AAAA battery (not included) for operation.

1. Gently twist the top cap of the stylus counter-clockwise to open the battery compartment.
2. Insert one AAAA battery, ensuring the positive (+) and negative (-) terminals are correctly aligned according to the markings inside the compartment.
3. Replace the top cap by twisting it clockwise until securely closed.





Image: Side view of the Keenso MEMPP303 Stylus Pen. The battery compartment is located under the top cap.

5.2 Initial Use

Once the battery is installed, the stylus is ready for direct use. No pairing or additional software installation is typically required for compatible devices.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

Simply touch the pen tip to your compatible device's screen. The 4096 levels of pressure sensitivity allow for varied line thickness and shading, mimicking a traditional pen or pencil. Apply gentle pressure for fine lines and increased pressure for bolder strokes.

6.2 Customizable Buttons

The stylus features two personalized buttons located on the side. The functions of these buttons can typically be customized through your device's operating system or specific application settings. Refer to your device's manual for details on button customization.



Image: A close-up of the two customizable buttons on the side of the stylus.

7. MAINTENANCE

7.1 Cleaning

Wipe the stylus body with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, which may damage the finish.

7.2 Replacing Pen Tips

If the pen tip becomes worn or damaged, it can be replaced using the provided replacement tips.

1. Gently pull the old pen tip straight out from the stylus body. A small tool (often included with replacement tips) may be used for assistance.
2. Insert a new pen tip firmly into the stylus body until it clicks into place.



Image: A close-up view of the stylus pen tip, which can be replaced when worn.

8. TROUBLESHOOTING

8.1 Pen Not Responding

- **Check Battery:** Ensure the AAAA battery is correctly installed and has sufficient charge. Replace the battery if necessary.
- **Compatibility:** Verify that your device is listed as compatible with the MEMPP303 Stylus Pen.
- **Restart Device:** Sometimes, restarting your device can resolve connectivity issues.

8.2 Inconsistent Pressure Sensitivity

- **Check Pen Tip:** Ensure the pen tip is not worn or damaged. Replace it if needed.
- **Clean Screen:** A dirty screen can interfere with pen performance. Clean your device's screen thoroughly.
- **Software/Driver:** Ensure your device's operating system and any relevant drawing/note-taking applications are up to date.

9. WARRANTY AND SUPPORT

Specific warranty information for the Keenso MEMPP303 Stylus Pen is typically provided with your purchase documentation or can be found on the manufacturer's official website. For technical support or further assistance, please refer to the contact information provided by your retailer or the Keenso brand.

© 2025 Keenso. All rights reserved.