

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FRESKO](#) /

› [FRESKO Professional Vacuum Sealer V6 Instruction Manual](#)

FRESKO V6

FRESKO Professional Vacuum Sealer V6 Instruction Manual

Model: V6

1. INTRODUCTION

The FRESKO Professional Vacuum Sealer V6 is designed to extend the freshness of your food by removing air and sealing it in airtight bags. This manual provides essential information for safe and efficient operation of your new appliance.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not immerse the appliance in water or any other liquid.
- Do not operate the appliance with a damaged power cord or plug.
- Keep out of reach of children.
- The sealing bar becomes hot during operation. Avoid direct contact.
- Store the machine with the lid gently closed, never with the lid locked, to avoid deformation of the sealing gaskets.

3. PACKAGE CONTENTS

Your FRESKO Professional Vacuum Sealer V6 starter kit includes:

- 1 x FRESKO Professional Vacuum Sealer V6
- 1 x Roll Bag (8" x 20')
- 1 x Roll Bag (11" x 20')
- 2 x External Vacuum Sealer Accessories
- 1 x Instruction Manual

4. PRODUCT OVERVIEW & FEATURES

The FRESKO V6 features a user-friendly design with multiple functions for versatile food preservation.

Simple Design, Multiple Functions

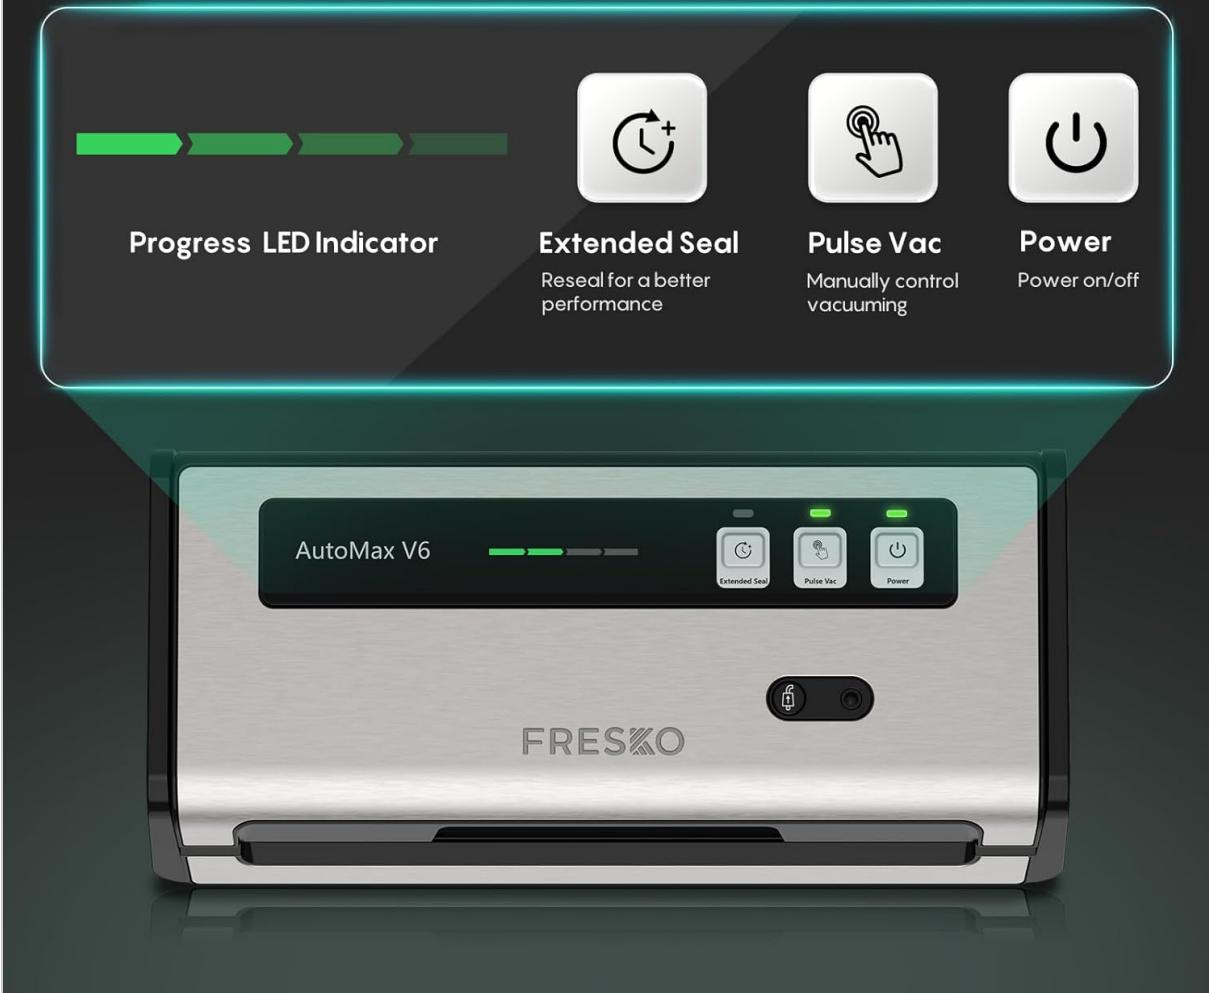


Image 1: Top view of the FRESKO V6 control panel, highlighting the Progress LED Indicator, Extended Seal, Pulse Vac, and Power buttons.

- **Fully Automatic Operation:** Dual-chamber design with intelligent partition detection. The vacuum area (green panel) automatically evacuates and seals; the sealing area (red panel) automatically seals the bag after insertion.
- **Double Seal:** Features double welds up to 0.5 inch wide for a tight and firm seal, preventing air leakage and extending food freshness.
- **Improved Manual Operation Mode:** The "Pulse Vac" button allows precise control over the vacuum process. The "Extended Seal" button prolongs sealing time for wetter foods.
- **Built-in Bag Cutter and Storage:** Conveniently store bag rolls and cut them to your desired size directly on the appliance.
- **Automatic Locking Function:** Easy operation without additional pressure.
- **User-friendly Design:** Includes Rolls Storage (for bags up to 11 inches wide), Built-in Cutter, Deeper Vacuum Chamber (reduces liquid overflow), and Pop-up Bag Support Design (prevents bag opening from folding).
- **Overheating Protection:** Automatically activates protection mode when overheating, pausing operation to prevent damage. Resumes normal standby after 15 minutes of cooling.
- **Energy-Saving Sleep Mode:** Automatically enters sleep mode after 10 minutes of inactivity. Wake by pressing the Power button.

5. SETUP

Before first use, ensure the appliance is clean and dry. Place the vacuum sealer on a flat, stable surface.

5.1 Installing the Bag Roll

1. Open the lid of the vacuum sealer.
2. Place a bag roll into the designated Rolls Storage compartment.
3. Pull the bag material through the slot and under the built-in cutter.
4. Close the lid gently.

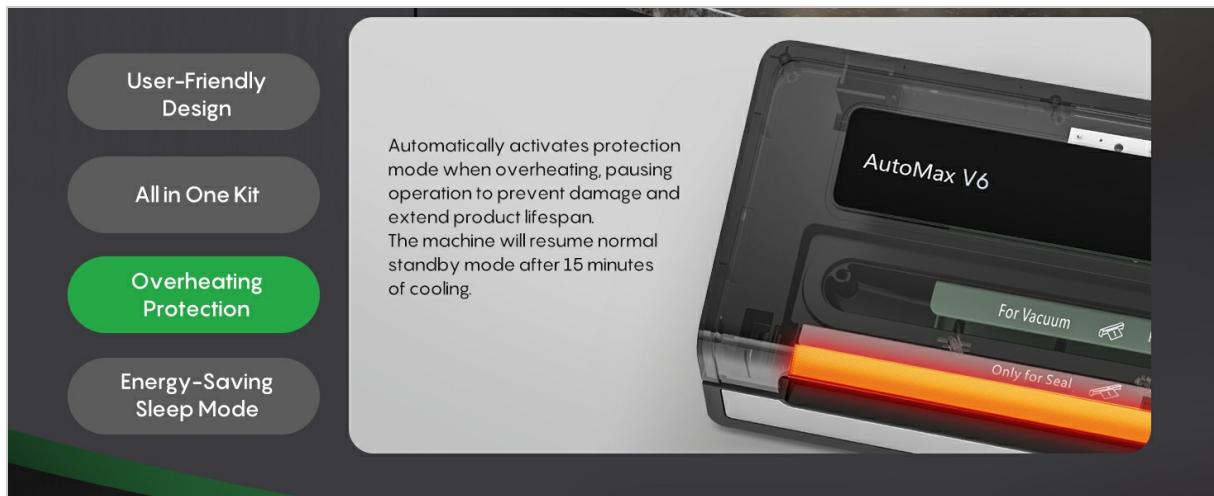


Image 2: Illustration of the bag roll storage, built-in cutter, and pop-up bag support design within the FRESKO V6 vacuum sealer.

6. OPERATING INSTRUCTIONS

The FRESKO V6 offers various modes for different food types and sealing needs.

6.1 Automatic Vacuum & Seal

1. Place the bag opening under the green baffle (vacuum area).
2. Close the lid and press down firmly until it locks.
3. The machine will automatically vacuum and seal the bag.



Image 3: Step-by-step guide showing how to place a bag under the green baffle, close the lid, and initiate automatic vacuum and seal.

6.2 Automatic Seal Only

1. Place the bag opening under the red baffle (sealing area).
2. Close the lid and press down firmly until it locks.
3. The machine will automatically seal the bag without vacuuming.

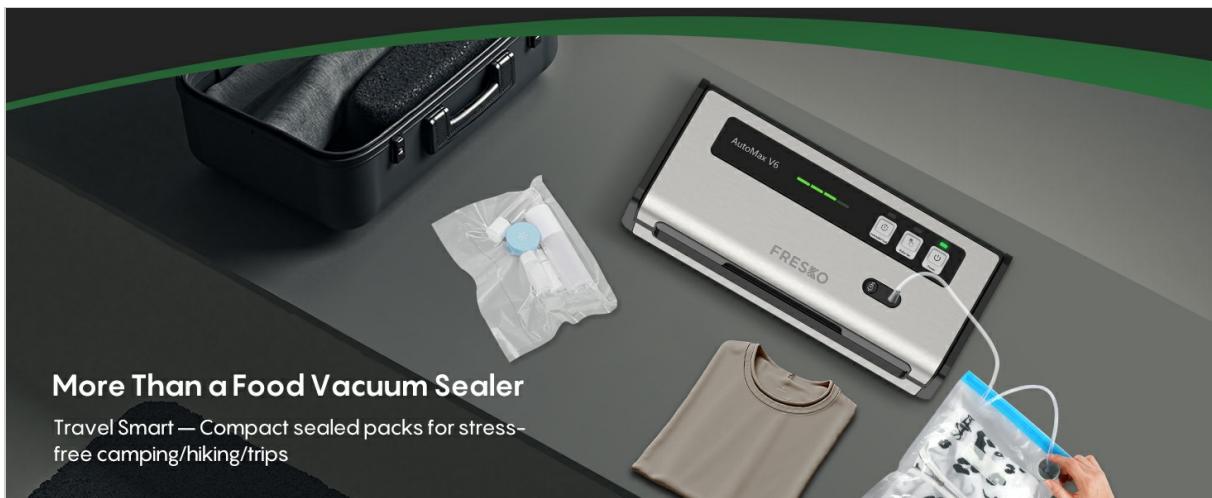


Image 4: Step-by-step guide showing how to place a bag under the red baffle, close the lid, and initiate automatic seal only.

6.3 Pulse Vac & Extended Seal (Manual Mode)

1. Place the bag opening under the green baffle and close the lid.
2. Immediately press and hold the "Pulse Vac" button to vacuum. Release to vacuum & seal automatically.
3. If too much juice is extracted, press the "Extended Seal" button for a better seal.

Note: Use the Pulse function for fragile or soft foods. Keep the bag opening dry when vacuum sealing juicy foods.



Image 5: Step-by-step guide demonstrating the use of Pulse Vac for manual vacuum control and Extended Seal for improved sealing of moist foods.

6.4 External Vacuum

1. Connect the accessory hose with the jar or container.
2. Press the accessory button to start.
3. Suitable for vacuum bowls, red wine plugs, mason jars, or zipper bags.

Ideal for Various Food



Image 6: Step-by-step guide on how to use the external vacuum function with an accessory hose for jars and other containers.

6.5 Ideal for Various Food Types

The FRESKO V6 is designed to handle a wide range of food types:

- **Moist food:** Steak with blood, salmon, etc.
- **Dry food:** Nuts, beans, flour.
- **Fragile food:** Potato chips, biscuits, etc. (Use Pulse Vac for gentle vacuuming).
- **Soft food:** Strawberries, bread, etc. (Use Pulse Vac for gentle vacuuming).
- **Marinated food:** Marinated meat, jam, sauce.



Image 7: Visual representation of various food categories, including moist, dry, fragile, soft, and marinated foods, that can be preserved using the vacuum sealer.

7. MAINTENANCE

Regular cleaning and proper storage will ensure the longevity of your FRESKO V6 vacuum sealer.

- Always unplug the appliance before cleaning.
- Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
- Clean the drip tray regularly to prevent residue buildup.
- Ensure the sealing gaskets are clean and free of food debris for an effective seal.
- Store the machine with the lid gently closed, never with the lid locked, to avoid deformation of the sealing gaskets.

8. TROUBLESHOOTING

If you encounter issues with your vacuum sealer, please refer to the following common solutions:

- **No Vacuum/Poor Seal:** Ensure the bag is placed correctly within the vacuum chamber and the lid is firmly locked. Check that the sealing gaskets are clean and undamaged.
- **Bag Melts:** The sealing time might be too long. For delicate bags or items, use the Pulse Vac function to control vacuum pressure.
- **Liquid Extracted:** For moist foods, use the "Extended Seal" button to prolong sealing time. Ensure the bag opening is dry.
- **Appliance Not Turning On:** Check if the power cord is securely plugged into a working outlet.

9. SPECIFICATIONS

Specification	Detail
Brand	FRESKO
Model Number	V6
Material	Stainless Steel
Product Dimensions	15.35"L x 7.2"W x 4.69"H
Power Source	Corded Electric
Operation Mode	Automatic
Wattage	140 watts
Voltage	120
Item Weight	6.69 pounds

10. WARRANTY & SUPPORT

FRESKO offers a 3-year technical support for this product. For any concerns or assistance, please contact FRESKO customer service.