

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEICKE](#) /

› [LEICKE EP95142 Wireless TV Headphones for Seniors Instruction Manual](#)

LEICKE EP95142

LEICKE EP95142 Wireless TV Headphones for Seniors

Instruction Manual

Model: EP95142 | Brand: LEICKE

1. PRODUCT OVERVIEW

The LEICKE EP95142 Wireless TV Headphones are designed to enhance the TV listening experience, especially for seniors or individuals with hearing difficulties. This device functions as both a personal neck speaker and a family speaker, offering clear, delay-free audio via 2.4GHz wireless technology and Bluetooth 5.3 connectivity. It features multiple input options including HDMI ARC, Optical, and AUX, ensuring broad compatibility with various television sets and audio sources.



Image: The LEICKE EP95142 system in use, providing clear audio for TV viewing.

Key Features:

- Enhanced Audio Clarity:** Specifically designed to make TV dialogues clearer and easier to understand.
- 2.4GHz Wireless Technology:** Ensures stable, delay-free audio transmission.
- Dual Functionality:** Operates as a family speaker or a personal neck speaker.
- Independent Volume Control:** Separate volume adjustments for the speaker and personal headphones.
- Multiple Connectivity Options:** Supports HDMI ARC, Optical, AUX, and Bluetooth 5.3.
- Long Battery Life:** Up to 12 hours of continuous use.

2. PACKAGE CONTENTS

Please check the package for the following items:

- LEICKE EP95142 Wireless Neck Speaker
- Charging Base Station
- Power Cable
- User Manual (this document)
- Required Batteries (2 A batteries)
- *Note: Additional audio cables (HDMI, Optical, AUX) may be included or sold separately depending on the specific package.*

3. PRODUCT DIAGRAM

Familiarize yourself with the components of your LEICKE EP95142 system.

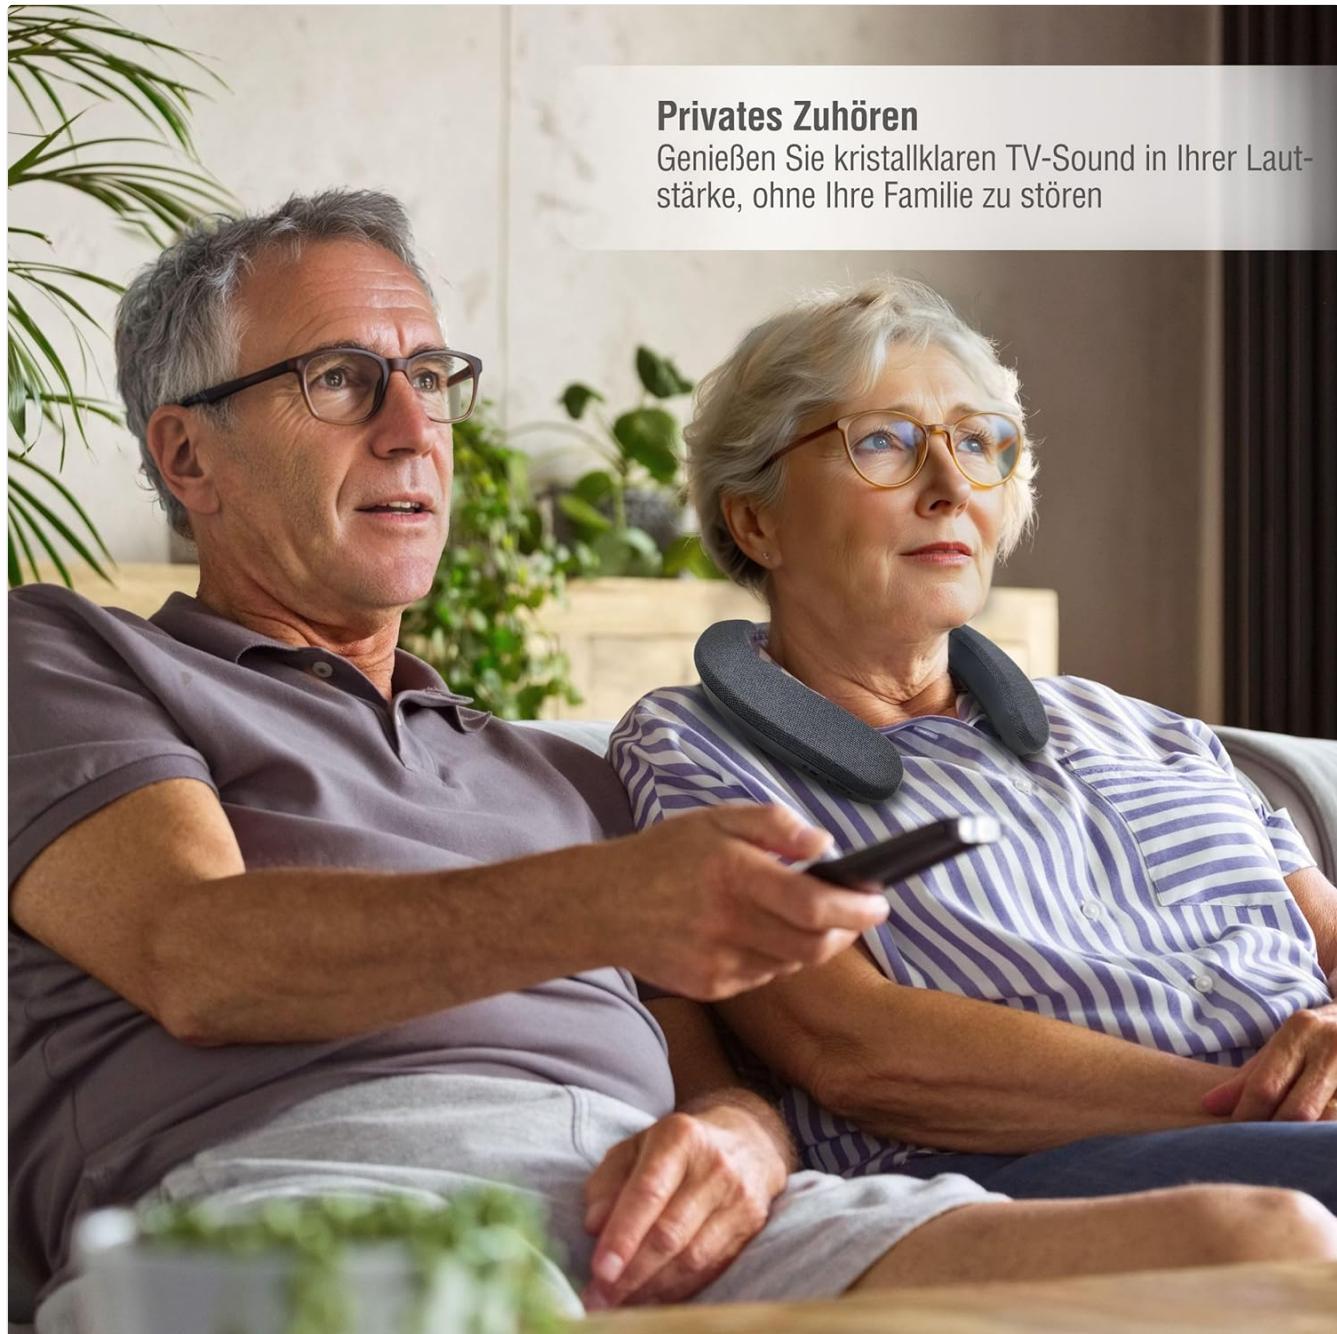


Image: Rear view of the charging base, highlighting the various input ports (HDMI ARC, Optical, AUX IN, DC IN).

1. **Neck Speaker:** Worn around the neck for personal listening.
2. **Charging Base Station:** Docks the neck speaker for charging and serves as the primary audio transmitter.
3. **Volume Control Knob:** Located on the base station (and potentially on the neck speaker for independent

control).

4. **Power Button:** To turn the device on/off.

5. **Input Ports (Rear of Base Station):**

- **HDMI ARC:** For connecting to TVs with HDMI Audio Return Channel.
- **OPTICAL IN:** For connecting to TVs or audio sources via optical cable.
- **AUX IN:** For connecting to devices with a 3.5mm audio jack.
- **DC IN:** Power input for the charging base.

6. **Charging Contacts:** On the base and neck speaker for power transfer.

4. SETUP AND CONNECTION

Follow these steps to set up your LEICKE EP95142 system.

4.1 Powering On the Base Station

1. Connect the provided power cable to the **DC IN** port on the rear of the charging base station.
2. Plug the other end of the power cable into a wall outlet.
3. The base station will power on, indicated by an LED light.

4.2 Connecting to Your TV or Audio Source

Choose one of the following connection methods based on your TV's available ports:

Option A: HDMI ARC Connection (Recommended for modern TVs)

1. Ensure your TV has an HDMI port labeled "HDMI ARC" or "HDMI (eARC)".
2. Connect an HDMI cable (not always included) from the **HDMI ARC** port on the base station to the HDMI ARC port on your TV.
3. On your TV's settings, enable HDMI ARC/CEC function. Refer to your TV's manual for specific instructions.



Image: The base station can connect to different TV models using various audio inputs.

Option B: Optical Connection (Digital Audio)

1. Connect an optical audio cable (not always included) from the **OPTICAL IN** port on the base station to the Optical Digital Audio Out port on your TV.
2. On your TV's audio settings, select "Optical Out" or "Digital Audio Out" as the audio output. You may also need to set the audio format to "PCM" if available.

Option C: AUX Connection (Analog Audio)

1. Connect a 3.5mm audio cable (not always included) from the **AUX IN** port on the base station to the Headphone Out or Audio Out (3.5mm jack) port on your TV or other audio device (e.g., laptop, tablet).
2. If connecting to a TV's headphone jack, ensure the TV's internal speakers are not muted.



Image: The base station can also be connected to a laptop or other devices using the AUX IN port.

Option D: Bluetooth Connection (for personal devices)

1. The neck speaker supports Bluetooth 5.3 for direct connection to compatible devices like smartphones or tablets.
2. To pair, ensure the neck speaker is powered on and in pairing mode (refer to the neck speaker's specific instructions, usually indicated by a flashing LED).
3. On your device, search for "LEICKE EP95142" or similar in the Bluetooth settings and select to pair.

5. OPERATING INSTRUCTIONS

5.1 Using as a Family Speaker

1. Once the base station is connected to your TV and powered on, it will automatically transmit audio.
2. Adjust the main volume using the large knob on the base station.
3. The base station acts as a speaker, providing amplified and clear audio for everyone in the room.

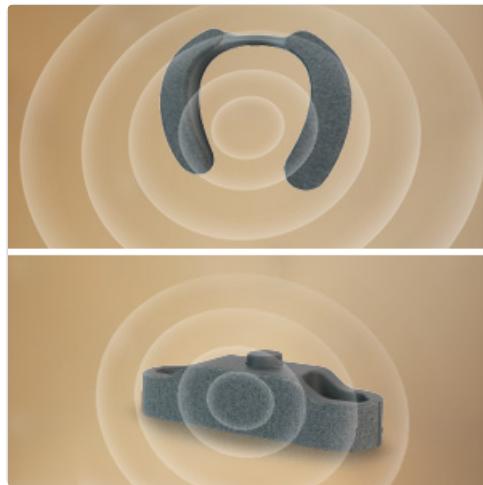


Image: The system can function as both a personal neck speaker and a room-filling speaker from the base.

5.2 Using as a Personal Neck Speaker

1. Remove the neck speaker from the charging base. It will automatically connect wirelessly to the base station.
2. Place the neck speaker comfortably around your neck.
3. Adjust the volume on the neck speaker using its dedicated volume controls (if present) or the main knob on the base station.
4. This allows for personalized listening without disturbing others, as the neck speaker provides audio directly to the user.

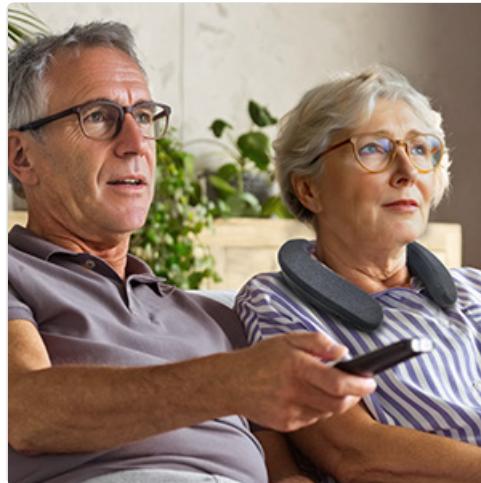


Image: An individual enjoying personalized TV audio with the LEICKE neck speaker.

5.3 Independent Volume Control

The LEICKE EP95142 allows for independent volume adjustment between the base station (family speaker) and the neck speaker (personal listening). This means you can set your preferred volume on the neck speaker without affecting the volume from the base station, or vice-versa.

6. CHARGING

To charge the neck speaker, simply place it onto the charging base station. Ensure the charging contacts align. An indicator light on the base station or neck speaker will show the charging status. A full charge provides up to 12 hours of listening time.



Image: The neck speaker being charged on the base station, indicating 12 hours of battery life.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the device. Do not use liquid cleaners or aerosols.

- **Storage:** When not in use for extended periods, store the device in a cool, dry place.
- **Battery Care:** To prolong battery life, avoid fully discharging the neck speaker frequently. Charge it regularly.
- **Avoid Moisture:** Keep the device away from water and high humidity.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speaker/headphones.	<ul style="list-style-type: none"> • Base station not powered on. • Incorrect audio input selected on TV. • Audio cable not connected properly. • Volume too low. • Neck speaker not paired or out of range. 	<ul style="list-style-type: none"> • Ensure power cable is securely connected and base station is on. • Check TV audio settings and select the correct output (HDMI ARC, Optical, or Headphone/Audio Out). • Verify all audio cables are firmly plugged in. • Increase volume on both the base station and your TV. • Ensure neck speaker is charged and within range of the base station. Re-dock to re-establish connection.
Sound is distorted or intermittent.	<ul style="list-style-type: none"> • Interference from other wireless devices. • Weak signal (too far from base station). • Low battery on neck speaker. 	<ul style="list-style-type: none"> • Move the base station away from other wireless devices (e.g., Wi-Fi routers, cordless phones). • Move closer to the base station. • Charge the neck speaker.
Neck speaker not charging.	<ul style="list-style-type: none"> • Not properly seated on the charging base. • Charging contacts are dirty. • Base station not powered. 	<ul style="list-style-type: none"> • Ensure the neck speaker is correctly placed on the base, aligning the contacts. • Clean the charging contacts on both the speaker and base with a dry cloth. • Verify the base station is powered on and connected to an outlet.

9. SPECIFICATIONS

Feature	Detail
Model Name	TV listening headphones
Item Model Number	EP95142
Brand	LEICKE

Feature	Detail
Connectivity	Bluetooth 5.3, 2.4GHz Wireless
Audio Inputs	HDMI ARC, Optical, AUX IN (3.5mm)
Battery Life	Up to 12 hours
Batteries	2 A batteries (included)
Product Dimensions	13 x 8 x 10 cm
Weight	900 grams
Color	Grey
Material	Plastic
Country of Origin	Germany

10. WARRANTY AND SUPPORT

Warranty Information:

LEICKE products typically come with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official LEICKE website for detailed warranty terms and conditions specific to your region. Keep your proof of purchase for warranty claims.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact LEICKE customer support:

- Website:** Visit the official LEICKE website for support resources, FAQs, and contact forms.
- Email:** Refer to your product packaging or the LEICKE website for the appropriate support email address.
- Phone:** Check the LEICKE website for regional customer service phone numbers.

When contacting support, please have your product model number (EP95142) and proof of purchase ready.