



Manuals.plus /

- › **SIMPLETASTE** /
- › SIMPLETASTE 4-in-1 Electric Milk Frother User Manual (Model B0FBGNPSC)

SIMPLETASTE B0FBGNPSC

SIMPLETASTE 4-in-1 Electric Milk Frother User Manual

Model: B0FBGNPSC

INTRODUCTION

Thank you for choosing the SIMPLETASTE 4-in-1 Electric Milk Frother. This appliance is designed to provide smooth hot milk foam, light cold milk foam, hot milk, or creamy hot chocolate. Please read this manual carefully before use to ensure proper operation and maintenance.



Image: The main unit of the SIMPLETASTE 4-in-1 Electric Milk Frother, showcasing its sleek design.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the base unit in water or other liquids.
- Do not operate any appliance with a damaged cord or plug.
- Keep out of reach of children.
- Use only on a stable, flat surface.
- Ensure the pitcher is correctly placed on the base before operation.
- Do not overfill the pitcher beyond the maximum fill lines.

- Unplug from outlet when not in use and before cleaning.

PRODUCT COMPONENTS

The SIMPLETASTE 4-in-1 Electric Milk Frother includes the following components:

- Main Device (Induction Base)
- Milk Pitcher (Dishwasher Safe)
- Frothing Whisk (1 in use, 1 replacement)
- Lid

SETUP

1. Unpack all components and remove any packaging materials.
2. Wash the milk pitcher and whisks thoroughly with warm, soapy water before first use. Rinse and dry completely.
3. Place the induction base on a stable, flat, heat-resistant surface.
4. Ensure the correct whisk is inserted into the pitcher for your desired function (frothing or heating).
5. Connect the power cord to a suitable electrical outlet.

OPERATING INSTRUCTIONS

The frother offers four programs: hot milk foam, cold milk foam, hot milk, and hot chocolate.

General Operation:

1. Pour milk into the pitcher, observing the minimum and maximum fill lines. For frothing, do not exceed the 'Max Froth' line (typically 250 ml). For heating milk or chocolate, do not exceed the 'Max Heat' line (typically 500 ml).
2. Place the lid on the pitcher.
3. Place the pitcher onto the induction base.
4. Select your desired program by pressing the appropriate button. The indicator light will illuminate.
5. The frother will automatically shut off once the program is complete.
6. Carefully remove the pitcher from the base and pour the contents.

Specific Programs:

- **Hot Milk Foam:** Use the frothing whisk. Fill milk to the 'Max Froth' line. Press the hot foam button.
- **Cold Milk Foam:** Use the frothing whisk. Fill milk to the 'Max Froth' line. Press the cold foam button.
- **Hot Milk:** Use the heating whisk (without the frothing coil). Fill milk to the 'Max Heat' line. Press the hot milk button.
- **Hot Chocolate:** Use the heating whisk. Add milk and chocolate ingredients. Fill to the 'Max Heat' line. Press the hot chocolate button.

Note: The induction technology ensures even heating and prevents burning. A spare whisk is included for convenience.



09:01



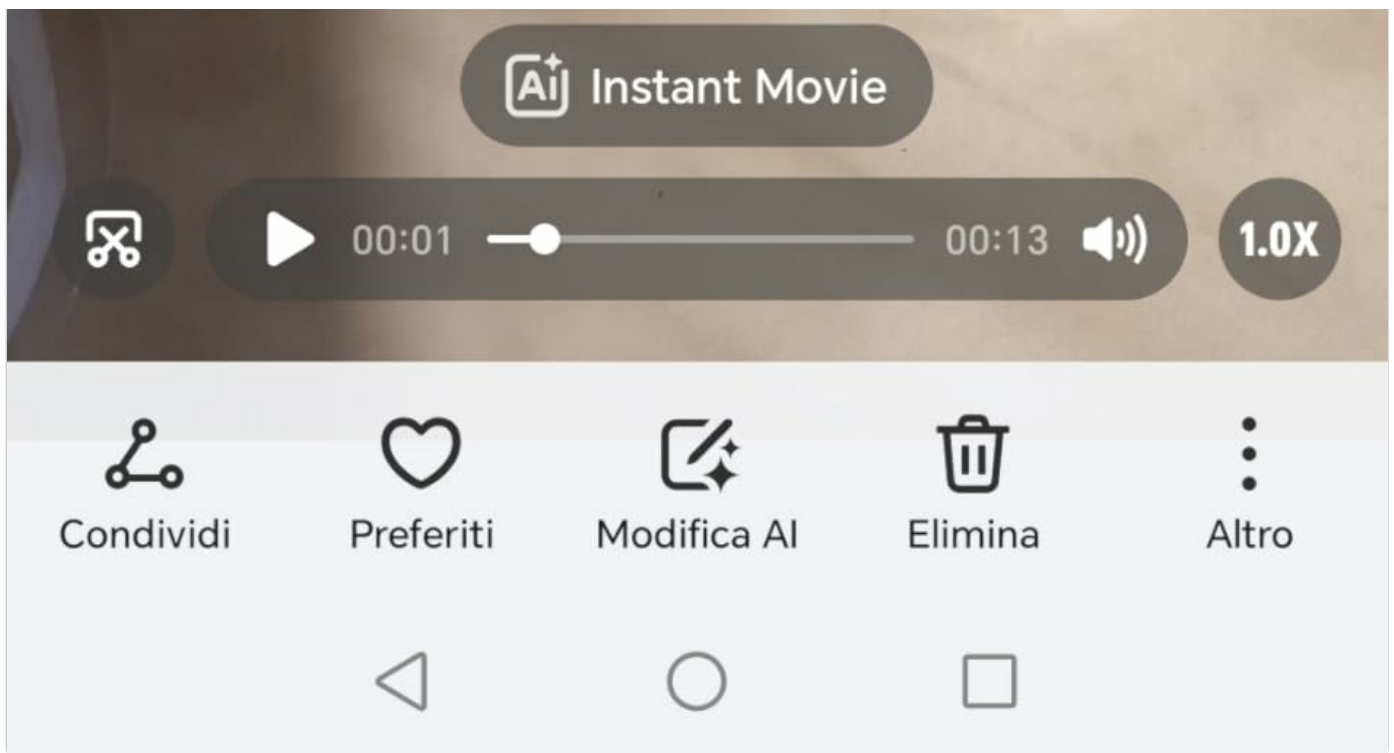


Image: A close-up of the milk frother producing dense, creamy foam, demonstrating its functionality.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your frother.

1. Always unplug the appliance before cleaning.
2. **Milk Pitcher:** The main pitcher is dishwasher safe. Alternatively, wash by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
3. **Whisky:** Remove the whisk from the pitcher and wash with warm, soapy water.
4. **Induction Base:** Wipe the exterior of the induction base with a soft, damp cloth. Do not immerse the base in water or any other liquid.
5. Ensure all parts are completely dry before storing or next use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not start.	Not plugged in; pitcher not correctly placed; power outage.	Check power connection; ensure pitcher is seated properly on the base; check power supply.
Milk not frothing or heating properly.	Incorrect whisk used; milk level too low/high; type of milk.	Ensure correct whisk is installed; check milk levels against markings; some milk types (e.g., skim milk) froth better than others.
Burnt smell or residue.	Pitcher not cleaned properly; milk overfilled.	Clean pitcher thoroughly after each use; do not exceed maximum fill lines.
Appliance stops unexpectedly.	Automatic shut-off activated; overheat protection.	This is normal operation. If it stops prematurely, allow the unit to cool down before restarting.

SPECIFICATIONS

- **Model:** B0FBGNPSC
- **Brand:** SIMPLETASTE
- **Product Dimensions:** 11.8 x 11.8 x 19.5 cm
- **Item Weight:** 880 g (0.88 Kilograms)
- **Capacity:** 500 Milliliters (Max Heat), 250 Milliliters (Max Froth)
- **Power/Wattage:** 600 watts
- **Material:** Stainless Steel
- **Special Features:** Auto Shut-Off, Ergonomic Handle, Indicator Light, Overheat Protection, Variable Froth Setting
- **Power Source:** Corded Electric

WARRANTY AND SUPPORT

SIMPLETASTE offers a 90-day money-back guarantee and a 2-year manufacturer's warranty for this product. For warranty claims, technical support, or any questions regarding your frother, please contact SIMPLETASTE customer service.

Please refer to the official SIMPLETASTE website or your purchase documentation for contact details.

You can visit the SIMPLETASTE Store on Amazon for more information.

