

Acer OHR121

Acer OHR121 True Wireless Bluetooth Earbuds User Manual

Model: OHR121

1. INTRODUCTION

The Acer OHR121 True Wireless Bluetooth Earbuds are designed to provide a high-quality audio experience with convenience and comfort. Featuring Bluetooth 5.0 connectivity, 13mm speaker drivers, and IPX4 water resistance, these earbuds are suitable for various activities, from listening to music to making calls on the go.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Acer OHR121 True Wireless Earbuds
- Wireless Charging Case
- User Manual
- Ear Tips (various sizes)
- USB Type-C Charging Cable (not explicitly listed but standard for Type-C charging)

3. PRODUCT OVERVIEW

The Acer OHR121 earbuds offer a sleek, in-ear design for a secure and comfortable fit. The compact charging case provides portability and extends battery life.



Image: Acer OHR121 True Wireless Earbuds and Charging Case. This image shows the black earbuds placed inside their matching black charging case, illustrating their compact design.

4. SETUP

4.1 Charging the Earbuds and Case

1. Place the earbuds into the charging case, ensuring they are correctly seated.
2. Connect the USB Type-C charging cable to the charging port on the case and plug the other end into a compatible USB power source.
3. The indicator lights on the case will show the charging status. Once fully charged, the lights will indicate completion or turn off.

It is recommended to fully charge the earbuds and case before first use.

4.2 Pairing with a Bluetooth Device

1. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on the earbuds.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for available Bluetooth devices and select "Acer OHR121" from the list.
4. Once connected, the earbud indicator lights will stop flashing or change to a solid color, and you will hear an audible confirmation.
5. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

5. OPERATING INSTRUCTIONS

The Acer OHR121 earbuds feature touch controls for easy management of audio and calls.

5.1 Music Control

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.

5.2 Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

5.3 Voice Assistant

- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Acer OHR121 earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are IPX4 water-resistant, meaning they can withstand splashes and sweat. Do not submerge them in water or expose them to heavy rain. Ensure they are dry before placing them back in the charging case.
- **Storage:** Store the earbuds in their charging case when not in use to protect them from dust and damage. Keep them in a cool, dry place away from extreme temperatures.
- **Charging:** Use the provided USB Type-C cable for charging. Avoid using damaged cables or chargers.

7. TROUBLESHOOTING

If you encounter issues with your Acer OHR121 earbuds, try the following solutions:

Problem	Solution
Earbuds do not turn on.	Ensure the earbuds and charging case are fully charged. Place earbuds in the case and close it, then open again.
Earbuds do not pair with device.	Make sure Bluetooth is enabled on your device. Turn off and on your device's Bluetooth. Forget "Acer OHR121" from your device's Bluetooth list and try pairing again. Ensure earbuds are in pairing mode (flashing LED).
Only one earbud is working.	Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid again. This often resets the connection between the two earbuds. Ensure both earbuds are charged.
Low sound quality or no sound.	Check the volume level on both your device and the earbuds. Ensure the earbuds are clean and free of debris. Try different ear tip sizes for a better seal.
Charging issues.	Ensure the charging cable is securely connected. Try a different USB port or power adapter. Clean the charging contacts on the earbuds and inside the case.

8. SPECIFICATIONS

Feature	Specification
Model Name	OHR121
Brand	Acer
Color	Black
Form Factor	In-ear
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.0
Bluetooth Range	10 meters
Driver Type	Dynamic Driver
Driver Size	13 mm

Feature	Specification
Frequency Response	20 Hz - 20,000 Hz
Impedance	32 Ohm
Sensitivity	3 dB
Noise Control	Passive Noise Cancellation
Water Resistance Rating	IPX4 (Water Resistant)
Control Type	Touch Control
Compatible Devices	Smartphones, Tablets, Laptops, Bluetooth-enabled devices
Material	Plastic

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Acer OHR121 True Wireless Bluetooth Earbuds come with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

9.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please contact Acer customer support through their official website or the contact information provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I purchased new Acer OHR121 earbuds in the UAE and brought them to India, but they will not connect to my phone. How do I pair them for the first time?

To connect your Acer OHR121 earbuds for the first time, please follow these steps: Charge First: It is highly recommended to fully charge the earbuds and the case before the first use. Place the earbuds...

[Read full answer](#)