

[Manuals.plus](#) /

> [TURNMEON](#) /

> TURNMEON 8.5 Ft Hanging Christmas Inflatable: Reindeer Pulling Santa Claus on Sleigh Instruction Manual

TURNMEON RH-120-1000U4-1

TURNMEON 8.5 Ft Hanging Christmas Inflatable: Reindeer Pulling Santa Claus on Sleigh Instruction Manual

1. INTRODUCTION

Thank you for choosing the TURNMEON 8.5 Ft Hanging Christmas Inflatable. This product is designed to add a festive and unique touch to your outdoor holiday decorations. Featuring a reindeer appearing to pull Santa Claus on a sleigh, this inflatable includes built-in LED lights for nighttime visibility. Please read this manual thoroughly before setup and operation to ensure safe and proper use.



Image 1.1: The 8.5 Ft Hanging Christmas Inflatable installed on a house porch.

2. PACKAGE CONTENTS


Verify that all components listed below are included in your package:

- 1 x 8.5 Ft Christmas Inflatable Decoration (Reindeer Pulling Santa Claus on Sleigh)
- 2 x Plastic Ground Stakes
- 2 x Ropes (approximately 10.5 Ft each)
- 1 x Sandbag
- 5 x Built-in LED Lights (pre-installed)
- 1 x Built-in Adapter (power supply)
- 1 x Built-in Fan (pre-installed)
- 1 x Instruction Manual (this document)

Product Size & Details



Zippers

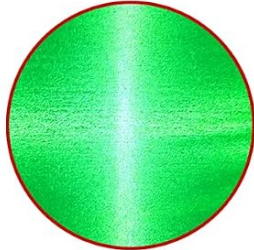

5 LEDs



Powerful Fan



8.5 FT



6FT

Package Includes



8.5 FT Inflatable Decoration with Power Adaptor *1



Plastic Ground Stakes *2



10.5 Ft Ropes *2



Sand Bags *1

Image 2.1: Product components and included accessories.

3. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Electrical Safety:** Ensure the power outlet is suitable for outdoor use and protected from moisture. Do not operate the inflatable with a damaged cord or plug.
- **Heat Sources:** Keep the inflatable away from heat sources, open flames, and combustible materials.
- **Anchoring:** Always anchor the inflatable securely, especially in windy conditions, to prevent it from blowing away or causing damage.
- **Placement:** Do not place the inflatable where it could obstruct pathways, doors, or windows. Ensure it is clear of power lines or other electrical hazards.
- **Children and Pets:** Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement or injury.
- **Weather Conditions:** While designed for outdoor use, extreme weather conditions (e.g., severe

storms, heavy snow, strong winds) may require temporary deflation and storage to prevent damage.

4. SETUP AND INSTALLATION

Follow these steps for proper setup and installation of your inflatable decoration:

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Positioning:** Choose a suitable location for hanging the inflatable, such as a roof, eaves, or balcony. Ensure there is enough clear space for the 8.5 Ft inflatable to hang freely without obstruction.
3. **Secure Sandbag:** Locate the internal sandbag pocket (if applicable) and fill it with sand to provide additional weight and stability. Close the zipper securely.
4. **Attach Ropes:** Thread the provided ropes through the designated loops on the inflatable. These ropes will be used to secure the inflatable to your chosen hanging point.
5. **Hang Inflatable:** Carefully lift and hang the inflatable from your desired location. Secure the ropes firmly to a stable structure, such as a sturdy railing or roof anchor points.
6. **Ground Stakes (if applicable):** If any part of the inflatable touches the ground or requires additional stability, use the plastic ground stakes to secure it. Attach the stakes to the inflatable's base or tether points using additional ropes if necessary.
7. **Connect Power:** Plug the built-in adapter into a suitable outdoor-rated electrical outlet. The built-in fan will begin to inflate the decoration automatically.
8. **Adjust:** Once fully inflated, adjust the ropes and positioning to ensure the inflatable hangs correctly and is stable.

Quick Inflation & Easy Installation



Quick Inflation & Installation, Convenient Christmas Outdoor Decoration

Image 4.1: Quick inflation and installation steps.

Your browser does not support the video tag.

Video 4.1: Demonstration of the Christmas Hanging Inflatable Decoration.

5. OPERATING INSTRUCTIONS

Operating your TURNMEON inflatable is straightforward:

- **Inflation:** Once plugged into a power source, the built-in fan will automatically inflate the decoration. Ensure the fan intake is clear of obstructions.
- **Lighting:** The 5 built-in LED lights will illuminate automatically when the unit is powered on, providing a steady cool white glow.
- **Deflation:** To deflate the inflatable, simply unplug it from the power source. For quicker deflation and storage, locate and open the zipper on the inflatable.



Image 5.1: The inflatable can be used in various indoor and outdoor settings.

6. MAINTENANCE AND STORAGE

Proper care will extend the life of your inflatable decoration:

- **Cleaning:** If the inflatable becomes dirty, wipe it clean with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the inflatable is completely dry before folding and storing to prevent mold or mildew. It dries quickly after wet weather.
- **Deflation:** Before storage, unplug the unit and open the zipper to allow for complete deflation.
- **Folding:** Fold the inflatable neatly into a compact size.
- **Storage:** Store the inflatable in a cool, dry place, away from direct sunlight and pests, preferably in its original packaging or a protective bag.
- **Weather Resistance:** The product is crafted from premium waterproof polyester, designed to resist rain, snow, and wind without tearing or fading under normal conditions.

7. TROUBLESHOOTING

If you encounter issues with your inflatable, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Inflatable does not inflate	Not plugged in; power outage; fan obstructed; zipper open.	Check power connection; ensure outlet is working; clear fan intake; close all zippers.
Lights are not working	Power issue; damaged LED.	Ensure inflatable is powered on; check for visible damage to lights.
Inflatable is unstable or falls down	Insufficient anchoring; strong winds.	Re-secure ropes and stakes; add more weight (sandbag); consider temporary deflation in severe weather.
Slow inflation	Fan partially obstructed; small opening in fabric.	Clear fan intake; check for small tears and repair if possible.

8. SPECIFICATIONS

- **Brand:** TURNMEON
- **Model Number:** RH-120-1000U4-1
- **Dimensions (Inflated):** Approximately 8.5 Ft (Length)
- **Material:** Waterproof Polyester
- **Light Quantity:** 5 Built-in LEDs
- **Light Color:** Cool White
- **Light Mode:** Steady On
- **Power Supply:** Plug-in (Built-in Adapter)
- **Fan:** Built-in Powerful Fan
- **Item Weight:** 2.54 pounds
- **Color:** Multicolor

9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your TURNMEON 8.5 Ft Hanging Christmas Inflatable, please refer to the product packaging or contact the seller directly through your purchase platform. Keep your proof of purchase for any warranty claims.