

[Manuals.plus](#) /

> [AGARO](#) /

> AGARO Imperial 30L Digital OTG User Manual

AGARO 34367

AGARO Imperial 30L Digital OTG User Manual

Model: 34367

1. INTRODUCTION

Thank you for purchasing the AGARO Imperial 30L Digital OTG. This appliance is designed to provide versatile cooking options including baking, grilling, toasting, and rotisserie. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any other materials not specifically designed for oven use.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place ceramic, glass, or plastic utensils inside the oven. Only use metal and steel utensils.

3. PRODUCT OVERVIEW

3.1 Components and Accessories

The AGARO Imperial 30L Digital OTG comes with the following components and accessories:

- Bake Pan
- Tray Handle
- Barbeque Grill Rack
- Drip Tray
- Rotisserie Rod
- Rotisserie Handle
- 4 Skewers (as indicated in some images)

Accessories Included



Bake Pan



Tray Handle



Barbeque Grill Rack



Drip Tray



Rotisserie Rod



Rotisserie Handle



4 Skewers



Utensils Recommended

Ceramic, Glass & Plastic Utensils



Metal & Steel Utensils

Figure 3.1: Included Accessories for the AGARO Imperial 30L Digital OTG. This image shows the various tools and racks provided to facilitate different cooking methods.



Figure 3.2: A detailed view of the accessories that come with the AGARO Imperial OTG, including the bake pan, various handles, and racks.

3.2 Control Panel and Display

The appliance features a backlit LCD and intuitive button/knob controls for easy operation.

- **Backlit Digital Display:** Shows cooking time, temperature, and selected preset mode.
- **Menu Button:** Cycles through 9 preset menu functions and 5 heating functions.
- **Convection Button:** Activates or deactivates the convection heating function for even and fast cooking.
- **Start/Stop Button:** Initiates or pauses the cooking process.
- **Adjustable Temperature Knob:** Allows setting temperature from 100-250°C.
- **Select Timer Knob:** Allows setting cooking time from 0 to 60 minutes.

Advanced Knob & Button Functions



Backlit Digital Display



Menu Button

9 Preset Menu with
5 Heating Functions



Convection Button



Start/Stop Button



Adjustable Temp
100-250°C



Select Timer
0 to 60min

Figure 3.3: Advanced Knob & Button Functions. This image highlights the digital display and control knobs/buttons for setting cooking modes, temperature, and time.



Figure 3.4: Advanced Button & Knob Functions. This image provides a clear visual guide to the various controls and their purposes on the OTG.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any packing materials, stickers, or labels.
2. **Placement:** Place the oven on a stable, heat-resistant, and flat surface. Ensure there is adequate ventilation around the appliance (at least 10 cm clearance on all sides). Do not place it near flammable materials.
3. **Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash all accessories (bake pan, grill rack, etc.) with warm soapy water, rinse, and dry thoroughly.
4. **Initial Burn-off:** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at 200°C (400°F) on the "Bake" setting. A slight odor or smoke may be present during this initial use; this is normal. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The AGARO Imperial OTG offers various cooking functions to suit your needs.

5.1 General Operation

1. Place food on the appropriate accessory (bake pan, grill rack) and insert into the oven.
2. Close the oven door securely.
3. Turn the **Menu Button** to select the desired cooking function (e.g., Toast, Bake, Grill, Rotisserie).
4. Adjust the temperature using the **Adjustable Temperature Knob**.
5. Set the cooking time using the **Select Timer Knob**.

6. Press the **Start/Stop Button** to begin cooking.
7. The oven will automatically turn off when the timer expires.

5.2 Preset Cooking Modes

The OTG features 9 preset menu functions for common dishes:

- Toast
- Bagel
- Pizza
- Bake
- Broil
- Cookies
- Roast
- Warm
- Defrost

To use a preset mode, simply turn the Menu Button until the desired preset appears on the display. The oven will suggest a default temperature and time, which can be adjusted manually if needed.

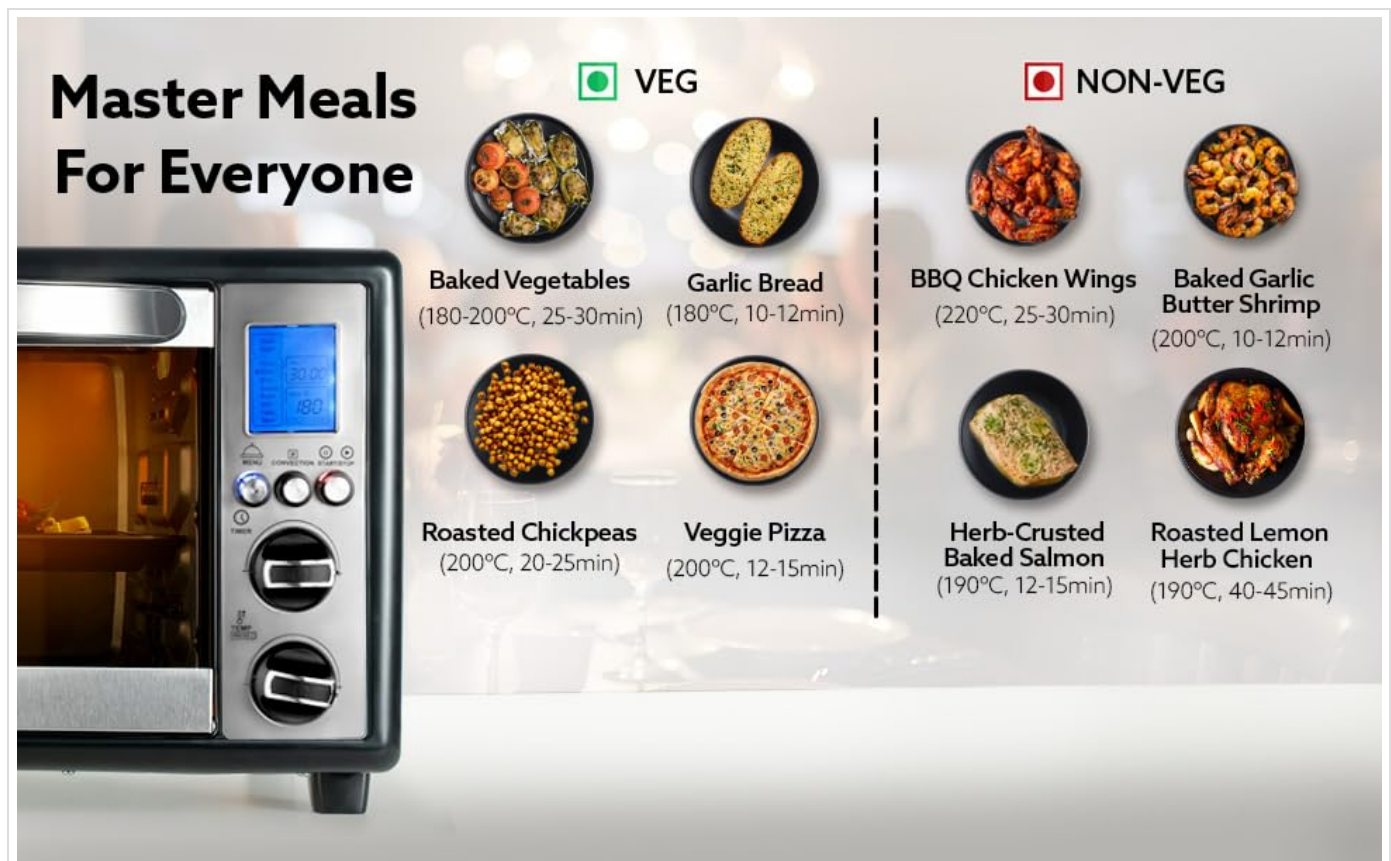


Figure 5.1: Master Meals For Everyone. This image provides examples of dishes like Baked Vegetables, Garlic Bread, BBQ Chicken Wings, and Roasted Lemon Herb Chicken, with recommended cooking parameters.

Meals For Everyone

VEG



Baked Vegetables



Garlic Bread



Roasted Chickpeas



Veggie Pizza



NON-VEG



BBQ Chicken Wings



Herb-Crusted Baked Salmon



Baked Garlic Butter Shrimp



Roasted Lemon Herb Chicken



Figure 5.2: Meals For Everyone. This image illustrates the versatility of the OTG for preparing both vegetarian and non-vegetarian dishes, including Baked Vegetables, Garlic Bread, BBQ Chicken Wings, and Roasted Lemon Herb Chicken.

5.3 Convection Function

The convection heating function circulates hot air inside the oven, ensuring more even and faster cooking. This is ideal for baking and roasting.

- To activate, press the **Convection Button**. The convection fan icon will appear on the display.
- To deactivate, press the **Convection Button** again.

5-in-1 Kitchen Wonder



Figure 5.3: Even Cooking Every Time. This image demonstrates the oven's ability to cook food uniformly, a benefit of its convection function.

5.4 Motorized Rotisserie

The motorized rotisserie is perfect for spit-roasting meat or vegetables, ensuring even browning and juicy results.

1. Secure the food (e.g., whole chicken) onto the Rotisserie Rod using the forks.
2. Insert the Rotisserie Rod into the designated slots inside the oven.
3. Select the "Roast" or "Rotisserie" function using the **Menu Button**.
4. Adjust temperature and time as needed.
5. Press **Start/Stop Button**. The rotisserie will begin to rotate.
6. Use the Rotisserie Handle to safely remove the hot rod and food after cooking.

6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your AGARO Imperial OTG.

1. **Always unplug the oven** from the power outlet and allow it to cool completely before cleaning.
2. **Interior Cleaning:** Wipe the interior surfaces with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Do not use steel wool or abrasive cleaners as they may damage the non-stick coating.
3. **Exterior Cleaning:** Wipe the exterior with a damp cloth. Do not immerse the oven in water.
4. **Accessories:** Wash the bake pan, grill rack, drip tray, rotisserie rod, and forks in warm soapy water. Rinse thoroughly and dry completely before storing or re-using. These accessories are generally dishwasher safe, but hand washing is recommended for longevity.
5. **Crumb Tray:** The drip tray (which also functions as a crumb tray) should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.

7. TROUBLESHOOTING

If you encounter issues with your AGARO Imperial OTG, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is securely in a working outlet. Check circuit breaker.
Food not cooking evenly.	Improper rack position; convection fan off; uneven food placement.	Adjust rack position. Ensure convection function is on for even cooking. Arrange food uniformly.
Excessive smoke during cooking.	Food residue or grease buildup; high fat content food.	Clean the interior and drip tray thoroughly. Use the drip tray for fatty foods.
Rotisserie not rotating.	Rotisserie rod not properly seated; food too heavy/unbalanced.	Ensure rod is correctly inserted into motor drive and support. Balance food on the rod.
Digital display not working.	Power issue; internal malfunction.	Unplug and re-plug the unit. If issue persists, contact customer support.

If the problem persists after trying these solutions, please contact AGARO customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	AGARO
Model Name	Imperial
Model Number	34367
Capacity	30 Litres
Power	1500 Watts
Control Type	Button Control
Product Dimensions	61D x 39.5W x 29H Centimeters

Feature	Detail
Item Weight	8.5 kg (8500 Grams)
Color	Silver
Included Components	Bake Pan, Tray Handle, Barbeque Grill Rack, Drip Tray, Rotisserie Rod & Handle
Country of Origin	India

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official AGARO website. Ensure you retain your purchase receipt for warranty claims.
Manufacturer: Universal Corporation Limited, 4/1 Middleton Street, Sikkim Commerce House, Kolkata- 71
For service inquiries, please contact an authorized AGARO service center.

© 2025 AGARO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FBLZ3ZX1>

More documents and user manuals: <https://manuals.plus/>