

[manuals.plus](#) /

› [DOMO](#) /

› [DOMO DO9277C 3-in-1 Snack Maker Instruction Manual](#)

DOMO DO9277C

DOMO DO9277C 3-in-1 Snack Maker Instruction Manual

Model: DO9277C

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use can lead to injury or damage to the appliance.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- **First Use:** A small amount of smoke may occur during the first use. This is normal and will dissipate quickly.
- Always install both plates. Never operate the appliance with only one plate.
- Avoid using metal utensils on the non-stick coating. Prefer wooden or silicone spatulas.

- Before changing plates, always switch off the device and allow it to cool completely.

2. PRODUCT OVERVIEW

The DOMO DO9277C is a versatile 3-in-1 snack maker designed for preparing sandwiches, waffles, and grilled items. It features interchangeable plates and an adjustable thermostat for optimal cooking results.

2.1 Components

- Main appliance unit with Cool-Touch housing
- Interchangeable plate sets:
 - Sandwich plates (for croques/sandwiches)
 - Waffle plates
 - Grill plates (for panini/grilled items)
- Adjustable thermostat knob
- Power indicator light (red)
- Ready indicator light (green)
- Wood-effect handle
- Cable winding storage



Image: The DOMO DO9277C 3-in-1 Snack Maker in white with a wood-effect handle, shown with waffle plates installed, alongside freshly made waffles and strawberries.

3. SETUP AND FIRST USE

3.1 Unpacking

Carefully remove the appliance and all accessories from the packaging. Dispose of packaging materials responsibly.

3.2 Cleaning Before First Use

Before using for the first time, wipe the exterior of the appliance with a damp cloth. Wash the interchangeable plates with warm soapy water, rinse thoroughly, and dry completely. The plates are also dishwasher safe.

3.3 Installing Plates

1. Ensure the appliance is unplugged and cool.
2. Select the desired plate set (sandwich, waffle, or grill).
3. Align the plates with the slots on the upper and lower heating elements.
4. Gently press down until the plates click securely into place. Ensure both upper and lower plates are correctly installed.



Image: The DOMO DO9277C 3-in-1 Snack Maker open, showing the sandwich plates installed and two grilled sandwiches ready for serving.

4. OPERATING INSTRUCTIONS

4.1 Preheating

1. Ensure the correct plates are installed and the appliance is closed.
2. Plug the appliance into a suitable wall outlet. The red "POWER" indicator light will illuminate.
3. Turn the thermostat knob to your desired temperature setting. For most items, a medium to high setting is recommended.
4. Allow the appliance to preheat. The green "READY" indicator light will illuminate when the desired temperature is reached. This may take a few minutes.

4.2 Cooking

1. Once the "READY" light is on, carefully open the appliance using the handle.
2. Place your food (e.g., sandwich, waffle batter, panini) onto the lower plate. Do not overfill.

3. Close the lid. The "READY" light may turn off as the appliance heats the food. It will cycle on and off during cooking to maintain the temperature.
4. Cook for the recommended time or until desired browning is achieved. Cooking times vary depending on the food and desired crispness.
5. Carefully open the lid and remove the cooked food using a heat-resistant wooden or silicone spatula. Avoid metal utensils to protect the non-stick coating.
6. Unplug the appliance from the wall outlet after use.



Image: The DOMO DO9277C 3-in-1 Snack Maker open, showing the grill plates installed with a panini placed on the lower plate for grilling.



Image: The DOMO DO9277C 3-in-1 Snack Maker open, displaying the waffle plates with two perfectly golden-brown waffles.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

5.1 General Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads.
3. For stubborn stains on the exterior, a mild detergent can be used on a damp cloth, then wipe clean with a fresh damp cloth.

5.2 Cleaning the Plates

1. Once the appliance is cool, remove the plates by pressing the release buttons (if applicable, or gently lifting after ensuring they are detached).
2. Wash the plates in warm soapy water using a soft sponge or cloth. The PFAS-free ceramic non-stick

coating makes cleaning easy.

3. Rinse thoroughly and dry completely before storing or re-installing.
4. The plates are also dishwasher safe for convenient cleaning.



Image: The interchangeable plates of the DOMO DO9277C 3-in-1 Snack Maker stacked neatly in a dishwasher rack, demonstrating their dishwasher-safe feature.

5.3 Storage

After cleaning and ensuring the appliance is completely dry, store it in a cool, dry place. Use the practical cable winding feature to neatly store the power cord.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|--|--|
| Appliance does not turn on. | Not plugged in; power outlet not working. | Ensure the appliance is securely plugged into a functional power outlet. |
| Food not cooking evenly or taking too long. | Temperature setting too low; appliance not preheated; plates not properly installed. | Increase the temperature setting. Allow the appliance to fully preheat until the green "READY" light illuminates. Check that both plates are securely installed. |
| Smoke or odor during first use. | Normal residue from manufacturing. | This is normal for the first use and will dissipate quickly. Ensure good ventilation. |

| Problem | Possible Cause | Solution |
|------------------------|--|--|
| Food sticks to plates. | Plates not properly cleaned; insufficient oil/butter (if desired); food residue buildup. | Ensure plates are clean before use. Lightly grease plates if necessary (though non-stick coating reduces this need). Clean plates thoroughly after each use. |

7. SPECIFICATIONS

| | |
|--------------------------------|--|
| Brand: | DOMO |
| Model: | DO9277C |
| Color: | White |
| Power: | 1100 Watts |
| Dimensions (L x W x H): | 21.5 x 27.2 x 14.5 cm |
| Weight: | 2.92 kg |
| Material: | Plastic and Metal |
| Special Features: | Modern design with wood-effect handle, Dishwasher safe (plates), PFAS-free non-stick ceramic coating, Removable plates, Adjustable thermostat. |
| Included Components: | Croque plates, Grill plates, Waffle plates |

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official DOMO website. Keep your proof of purchase for warranty claims.

Manufacturer: DOMO

Website: www.domo-elektro.be (Example, actual website may vary by region)