

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Daewoo](#) /

› Daewoo 1.4L Ice Cream Maker DICM-140M User Manual

Daewoo DICM-140M

Daewoo 1.4L Ice Cream Maker DICM-140M User Manual

Model: DICM-140M

1. PRODUCT OVERVIEW

The Daewoo 1.4L Ice Cream Maker is designed for preparing creamy desserts at home. This appliance allows you to create homemade ice cream, sorbet, or frozen yogurt by simply adding your preferred ingredients and pressing a button. Enjoy delicious results in approximately 15 to 25 minutes without the need for additional ice.



Image 1.1: Daewoo Ice Cream Maker in a kitchen setting with prepared desserts.

Key Features:

- **1.4 Liter Capacity:** Prepare generous portions for family and guests.
- **Double Fast-Freezing Bowl:** Ensures efficient and quick freezing of ingredients.
- **Automatic Mixer:** Churns ingredients thoroughly without manual effort.
- **Ingredient Opening:** A special deposit allows for adding nuts, candies, or other toppings during the mixing process.
- **Non-Slip Base:** Provides stability during operation.
- **On/Off Button:** Simple and intuitive control.
- **Integrated Thermostat:** Enhances safety during use.
- **Compact Design:** Easily fits into various kitchen spaces.
- **Easy to Clean:** Designed for straightforward maintenance.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- This appliance is for **residential use only**. Do not use outdoors or for commercial purposes.
- Keep hands and utensils out of the freezer bowl during operation to prevent injury and damage to the unit.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Ensure the voltage rating on the appliance matches your local power supply (127V~60Hz).
- Place the appliance on a stable, flat, non-slip surface during operation. The integrated non-slip base helps maintain stability.
- Do not use abrasive cleaners or scouring pads on the appliance.

3. COMPONENTS

Your Daewoo Ice Cream Maker package includes the following components:

- 1 x Ice Cream Maker Unit (Motor Base, Lid, Mixing Paddle, Freezer Bowl)
- 1 x User Manual



Image 3.1: Front view of the assembled Daewoo Ice Cream Maker.



Longitud de cable:
116 cm



Image 3.2: The mixing paddle component with its dimensions.

4. SETUP

4.1 Before First Use:

1. Unpack all components and remove any packaging materials.
2. Wash the freezer bowl, mixing paddle, and lid in warm, soapy water. Rinse thoroughly and dry completely. The motor base should be wiped clean with a damp cloth.
3. Place the freezer bowl in the freezer for at least 8-12 hours, or until completely frozen. The bowl must be thoroughly frozen for proper ice cream consistency. Ensure your freezer has enough space for the bowl.

4.2 Assembly:

1. Place the frozen freezer bowl into the motor base.
2. Insert the mixing paddle into the center of the freezer bowl, ensuring it sits correctly.

3. Place the lid onto the motor base, aligning it properly and twisting to secure if necessary.
4. Ensure the appliance is placed on a clean, dry, and stable surface.



La mezcladora automática se encarga de mezclar todo sin necesidad de agregar hielo

Práctico depósito de ingredientes para frutos secos y caramelos en trozos.

Image 4.1: Top view showing the assembled lid and mixing paddle.

5. OPERATING INSTRUCTIONS

5.1 Preparing Your Ingredients:

- Prepare your ice cream mixture according to your recipe. For best results, ensure all ingredients are chilled in the refrigerator before adding them to the freezer bowl.
- Do not fill the freezer bowl more than two-thirds full, as the mixture will expand during churning.

5.2 Making Ice Cream:

1. Ensure the freezer bowl is completely frozen and the unit is assembled as described in Section 4.2.
2. Plug the appliance into a suitable electrical outlet.

3. Press the **On/Off button** to start the mixing paddle.
4. Immediately pour your chilled ice cream mixture through the ingredient opening in the lid.
5. Allow the machine to churn for 15 to 25 minutes, or until the desired consistency is reached. The churning time may vary depending on the recipe and room temperature.
6. During the last 5 minutes of churning, you can add solid ingredients like nuts, chocolate chips, or fruit pieces through the ingredient opening.
7. Once the ice cream reaches the desired consistency, press the **On/Off button** to stop the machine and unplug it.
8. Remove the lid and mixing paddle. Use a plastic or wooden spatula to scoop the ice cream into a separate container. Avoid using metal utensils, as they can damage the freezer bowl.
9. For firmer ice cream, transfer it to an airtight container and place it in the freezer for an additional 2-4 hours.



Image 5.1: Key features and operational details, including preparation time.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your ice cream maker.

1. Always unplug the appliance before cleaning.
2. Disassemble the unit: remove the lid, mixing paddle, and freezer bowl from the motor base.
3. Wash the lid, mixing paddle, and freezer bowl by hand in warm, soapy water. Rinse thoroughly and dry completely with a soft cloth. **Do not wash these parts in a dishwasher.**
4. Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. Ensure all parts are completely dry before reassembling or storing the appliance.
6. Store the ice cream maker in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your ice cream maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ice cream is too soft or doesn't freeze.	◦ Freezer bowl not sufficiently frozen. ◦ Ingredients were not pre-chilled. ◦ Mixture volume too large. ◦ Room temperature too high.	◦ Ensure freezer bowl is frozen for at least 8-12 hours. ◦ Chill all ingredients in the refrigerator for at least 2 hours before use. ◦ Do not exceed the maximum fill line (approx. 2/3 full). ◦ Operate in a cooler environment if possible.
Mixing paddle stops during operation.	◦ Mixture is too thick. ◦ Too many solid ingredients added.	◦ Ensure mixture is liquid enough to churn. ◦ Add solid ingredients only during the last 5 minutes of churning.
Appliance does not turn on.	◦ Not properly plugged in. ◦ Power outage.	◦ Check power cord connection. ◦ Verify power supply to the outlet.

8. SPECIFICATIONS

Feature	Detail
Brand	Daewoo
Model Name/Number	DICM-140M
Color	White
Capacity	1.4 Liters
Special Feature	Non-slip base
Material	Plastic
Included Components	1 Ice Cream Maker, 1 User Manual
Recommended Use	Residential
Manufacturer	DAEWOO
Country of Origin	Mexico
Item Dimensions (L x W x H)	20 x 20 x 23 centimeters

Feature	Detail
Product Weight	3 Kilograms
Product Care Instructions	Hand wash
Power	15 W
Voltage/Frequency	127V~60Hz



Image 8.1: Appliance dimensions.

9. WARRANTY AND SUPPORT

This product is subject to a **30-day free return policy** from the date of purchase. For specific warranty information, claims, or technical support, please contact Daewoo customer service directly or visit their official website. You can find more information and contact details on the official Daewoo store page: [Daewoo Store](#).

Additional protection plans may be available for purchase separately.

© 2026 Daewoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FBQVDDJZ>

More documents and user manuals: <https://manuals.plus/>