

[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Twin XL Over Queen Bunk Bed Instruction Manual

Bellemave Twin XL Over Queen Bunk Bed

Bellemave Twin XL Over Queen Bunk Bed Instruction Manual

Model: Twin XL Over Queen Bunk Bed

Brand: Bellemave

PRODUCT OVERVIEW

This Bellemave Twin XL Over Queen Bunk Bed is designed to provide a sturdy and space-efficient sleeping solution. It features a durable metal frame, a Twin XL size upper bunk, and a Queen size lower bunk, making it suitable for adults. The design incorporates two ladders and full-length guardrails for enhanced safety and accessibility.



Image: The Bellemave Twin XL Over Queen Bunk Bed, black metal frame, with mattresses and bedding, in a bedroom setting.

SAFETY INFORMATION

Your safety is paramount. Please read and understand all safety warnings and instructions before assembly and use.

- **Weight Capacity:** The upper bed has a weight capacity of 300 LBS. The bottom bed has a weight capacity of 600 LBS. Do not exceed these limits.
- **Guardrails:** The upper bunk is equipped with heightened guardrails (12.4" H) to prevent accidental falls. Ensure they are properly installed and secured.
- **Ladders:** Two side ladders are provided for safe climbing to the upper bunk. Always use the ladders when accessing or exiting the upper bunk.
- **Clearance:** The design allows for a 40" height between the upper and lower beds, reducing the risk of bumping heads.
- **Assembly:** This bunk bed is designed for adult assembly. Ensure all parts are correctly aligned and tightened before use.
- **Conversion:** This Twin XL over Queen bunk bed cannot be converted into two single beds.



Safety Design 1

Avoid bumping
your head when
wake up



Safety Design 2

12.4" H Guardrails to
prevent accidental falls



Image: Diagram illustrating the 40-inch clearance between bunks and the 12.4-inch height of the guardrails for safety.

COMPONENTS AND SPECIFICATIONS

The Bellemave Twin XL Over Queen Bunk Bed includes the following components and features:

- **Material:** Heavy-duty metal for rust-proof and durable use.
- **Finish:** Powder Coated Black.
- **Support:** Metal slats support, no box spring needed. Noise-reducing rubber stoppers fix slats firmly.
- **Included Components:** Ladder, Guardrails, Slats.
- **Underbed Clearance:** 9.4 inches, providing convenient storage space.

Product Dimensions:

Feature	Measurement
Overall Dimensions (L x W x H)	82.7"L x 63"W x 65"H

Upper Bed Size	Twin XL
Lower Bed Size	Queen
Item Weight	56 Pounds

Einheit: Inch

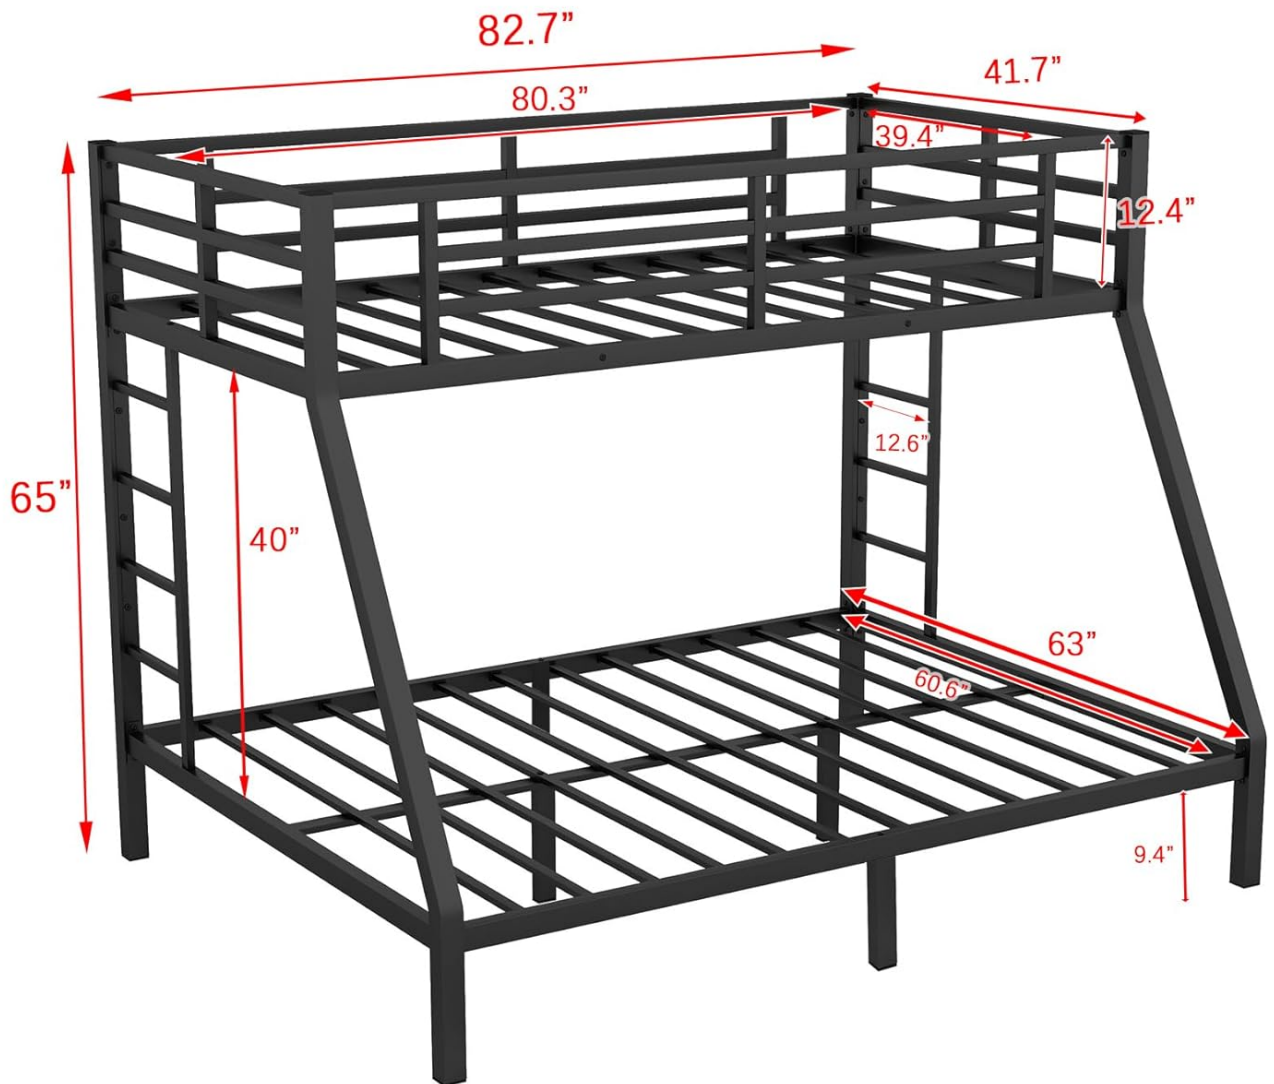


Image: Technical drawing showing the precise dimensions of the bunk bed, including length, width, and height.

SETUP AND ASSEMBLY

Assembly of the Bellemave Twin XL Over Queen Bunk Bed is designed to be straightforward with two people. The product comes in two boxes and includes detailed instructions and numbered parts to guide you through each step.

Assembly Steps:

1. Unpack all components and verify against the parts list in your manual.
2. Begin by assembling the base frame for the lower Queen bed, ensuring all connections are secure.
3. Attach the vertical support structures and ladders to the base.
4. Assemble the upper Twin XL bed frame and carefully lift it into position, securing it to the main structure.

5. Install all metal slats for both the upper and lower bunks, ensuring they are properly seated and secured with the noise-reducing rubber stoppers.
6. Attach the full-length guardrails to the upper bunk.
7. Double-check all screws and connections to ensure the bed is stable and safe for use.

For a visual guide, please refer to the official installation video:

Your browser does not support the video tag.

Video: A detailed installation guide for the Twin XL over Queen Bunk Bed, demonstrating step-by-step assembly.

OPERATING INSTRUCTIONS

Using your Bellemave bunk bed is simple and intuitive:

- **Accessing Upper Bunk:** Use the integrated ladders on either side to safely climb to the Twin XL upper bunk.
- **Lower Bunk Use:** The Queen size lower bunk provides ample space for comfortable sleeping.
- **Space Utilization:** The 9.4" underbed clearance can be used for convenient storage of items like trunks, toys, shoes, or books.



Built-in Ladders

There are ladders on both sides that allow you to climb up to the upper bunk.

Underneath Storage

9.4" Underbed clearance provide extra storage space to your bedroom.



Image: Visual representation of the built-in ladders for easy access and the spacious underbed storage area.

MAINTENANCE

To ensure the longevity and safety of your Bellemave bunk bed, follow these maintenance guidelines:

- **Regular Cleaning:** Wipe down the metal frame with a soft, damp cloth. Avoid abrasive cleaners that may damage the powder-coated finish.
- **Check Connections:** Periodically inspect all screws and bolts to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent wobbling.
- **Slats Inspection:** Ensure all metal slats are securely in place and the noise-reducing rubber stoppers are intact.
- **Avoid Overloading:** Adhere strictly to the stated weight capacities for both the upper and lower bunks.

TROUBLESHOOTING

If you encounter any issues with your bunk bed, consider the following common solutions:

- **Wobbling or Creaking:** This is often caused by loose connections. Re-tighten all screws and bolts on the frame. Ensure the noise-reducing rubber stoppers are correctly positioned on the slats.
- **Difficulty Assembling:** Refer to the detailed instructions and numbered parts provided. Ensure you have all components as listed. If parts are missing or damaged, contact customer support.
- **Damaged Parts:** If any part arrives damaged, do not proceed with assembly. Contact customer support for replacement parts.

WARRANTY AND SUPPORT

For any product-related inquiries, missing parts, or support, please contact Bellemave customer service.

Email: service@bellemave.com

Please provide your model number and purchase details when contacting support to ensure a swift resolution.