

TaskStar TK-BL5002

TaskStar Cordless Rotary Leaf Blower BL200 Instruction Manual

1. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety

- Always wear eye protection when operating the leaf blower.
- Keep children and bystanders away while operating the tool.
- Do not operate the tool in wet conditions or in the rain.
- Ensure the work area is clear of obstacles and debris that could be thrown.
- Do not point the blower nozzle at people or animals.

Battery Safety

- Use only the specified charger for the battery pack.
- Do not charge the battery in damp or wet locations.
- Store the battery pack away from metal objects that could short the terminals.
- Do not incinerate the battery pack, even if it is severely damaged.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Cordless Leaf Blower Body
- 1 x Extension Tube
- 2 x 4.0Ah Battery
- 1 x Charger
- 1 x User Manual



1 Cordless Leaf Blower Body 2 Battery Pack 3 Charger 4 User Manual

PRACTICAL AND GIFTABLE

Image: The TaskStar Cordless Rotary Leaf Blower components laid out, showing the main blower unit, detachable extension tube, two 21V 4000mAh Li-ion batteries, a battery charger, and the user manual.

3. PRODUCT FEATURES

- **Powerful Airflow:** Delivers up to 550 CFM of airflow and wind speeds of 150 MPH for efficient cleanup of leaves, grass clippings, dust, and sawdust.



Image: A person operating the leaf blower, effectively moving a large volume of leaves across a grassy area, highlighting the powerful airflow.

- **Versatile 180-Degree Swivel Head:** Allows effortless switching between ground-level and above-ground cleaning tasks, reducing strain.

2 CLEANING MODES



Ground-level Areas



Above-ground Surfaces

Image: The leaf blower is shown in two modes: one for blowing leaves on the ground and another with its head swiveled upwards for cleaning debris off a car.

- **Dual 4.0Ah Batteries:** Includes two 4.0Ah batteries for extended runtime, up to 90 minutes on low speed and over 24 minutes on high speed.

LONG-LASTING BATTERY

2 x 4000mAh



Image: The leaf blower is shown alongside its two 4.0Ah batteries, with text indicating the long-lasting power and runtime for both minimum and maximum flow settings.

- **Lightweight Design:** Weighs only 3.7 lbs, making it easy to maneuver and comfortable for prolonged use.

LIGHTWEIGHT
AT ONLY **3.7** LBS!



Image: A person holding the lightweight leaf blower, emphasizing its ease of handling.

- **5-Speed Adjustable Settings:** Provides precise control over airflow for various tasks, from gentle dust clearing to powerful leaf blowing.

5 SPEED SELECTIONS



Speed 1

Computer Dust
Removal



Speed 2

Gather Dry Leaves



Speed 3-4

Gather Fresh Leaves
& Small Debris



Speed 5

Clean Wet Leaves
/ Car Drying



Image: A detailed view of the leaf blower's control panel, illustrating the 5-speed settings and their recommended uses.

- **Simple One-Touch Start:** Ensures easy and quick operation without complicated setup.
- **Cordless, Quiet, and Low Maintenance:** Offers freedom of movement, quieter operation than gas models, and minimal maintenance.
- **4 Adjustable Configurations:** Features an extension tube and two work modes for adaptable cleaning.

4. SETUP

Attaching the Extension Tube

1. Align the grooves on the extension tube with the corresponding slots on the blower body.
2. Push the tube firmly onto the blower body until it clicks into place.
3. To detach, press the release button and pull the tube off.

Installing/Removing the Battery

1. To install, slide the fully charged battery pack into the battery slot on the blower handle until it locks securely.
2. To remove, press the battery release button and slide the battery pack out.

5. OPERATING INSTRUCTIONS

Powering On/Off

- To power on, press the main power button located on the handle. The battery level indicator will light up.
- To power off, release the main power button.

Adjusting Speed

- Use the 5-speed adjustable switch on the handle to select your desired airflow intensity.
- Slide the switch forward to increase speed (1-5) and backward to decrease speed.

Using the Swivel Head

- Press the 'PUSH' button near the blower head to unlock the swivel mechanism.
- Rotate the blower head 180 degrees to switch between ground-level and above-ground cleaning orientations.
- Release the 'PUSH' button to lock the head in the desired position.

Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the TaskStar Blower in action, clearing leaves and debris from a driveway and patio, showcasing its effectiveness for various outdoor cleaning tasks.

6. MAINTENANCE

Cleaning the Blower

- Ensure the blower is turned off and the battery is removed before cleaning.
- Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Clear any debris from the air intake and exhaust vents to maintain optimal performance.

Battery Charging and Storage

- Charge batteries fully before storage and every 3-6 months if not in regular use.
- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Blower Not Turning On

- Check if the battery is properly inserted and fully charged.
- Ensure the power button is pressed firmly.

Reduced Airflow/Power

- Verify the battery is fully charged.
- Check for any obstructions in the air intake or nozzle.
- Ensure the speed setting is appropriate for the task.

Battery Not Charging

- Ensure the charger is properly plugged into a working outlet.
- Check if the battery is correctly seated in the charger.
- Verify that the charger indicator light is functioning as expected (e.g., red for charging, green for charged).

8. SPECIFICATIONS

Feature	Specification
Brand	TaskStar
Model Name	Cordless Rotary Leaf Blower
Item Model Number	TK-BL5002
Color	Greyish-green
Power Source	Battery Powered
Voltage	21 Volts
Batteries	2 Lithium Ion batteries (4.0Ah each)
Airflow (CFM)	Up to 550 CFM
Maximum Speed	150 Miles per Hour
Form Factor	Handheld
Item Weight	6.63 pounds (3.01 Kilograms)
Product Dimensions	16.5"L x 7.8"W x 7.2"H
Special Feature	180° swivel head, 550 CFM, Adjustable Speed, Lightweight, Rechargeable

9. WARRANTY AND SUPPORT

Warranty Information

The TaskStar Cordless Rotary Leaf Blower BL200 comes with a**3-Year Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact TaskStar customer support. Refer to the contact information provided on the product packaging or the official TaskStar website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question