

## Fanttik G9 Nano, C8 Nano

# Fanttik G9 Nano Electric Spin Scrubber & C8 Nano Cordless Electric Scissors User Manual

Model: G9 Nano, C8 Nano

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your Fanttik G9 Nano Electric Spin Scrubber and Fanttik C8 Nano Cordless Electric Scissors. Please read this manual thoroughly before operating either device and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

- Always keep both devices away from children and pets.
- Do not immerse the main body of either device in water.
- Use only the charging cable provided or a certified Type-C cable with appropriate voltage (5V/2A).
- Avoid operating the devices in wet conditions or near flammable liquids/gases.
- For the C8 Nano, always engage the blade guard when not in use and exercise extreme caution when handling or replacing the blade.
- Do not attempt to disassemble or repair the devices yourself. Contact customer support for assistance.
- Store devices in a cool, dry place when not in use.

## FANTTIK G9 NANO ELECTRIC SPIN SCRUBBER

---

### 1. Package Contents

Verify that all items are present in your package:

- Fanttik G9 Nano Electric Spin Scrubber
- Type-C Charging Cable
- User Manual

- Storage Bag
- Brush Head Storage Stand
- 8 Replaceable Brush Heads (various types)



This image displays the Fantik G9 Nano Electric Spin Scrubber, its Type-C charging cable, user manual, storage bag, and a selection of eight interchangeable brush heads with a storage stand.

## 2. Product Overview

The G9 Nano is a compact electric spin scrubber designed for efficient cleaning. It features a high-performance motor providing up to 250 RPM for effective stain removal.

### 3. Charging the G9 Nano

1. Connect the Type-C charging cable to the charging port on the scrubber.
2. Plug the other end of the cable into a compatible USB power adapter (not included).
3. The LED energy bar on the device will indicate the charging status. A full charge provides up to 60 minutes of continuous use.



The Fanttik G9 Nano Electric Spin Scrubber is shown charging using its Type-C cable. An LED indicator displays the battery level and charging status, indicating a full charge provides up to 155 minutes of runtime.

### 4. Attaching and Changing Brush Heads

The G9 Nano comes with 8 interchangeable brush heads for various cleaning tasks.


- To attach: Align the desired brush head with the rotating shaft and push firmly until it clicks into place.
- To detach: Pull the brush head straight off the shaft.

## 6 BRUSH HEADS TARGET EVERYWHERE

01 Flat Brush



02 Small Flat Brush

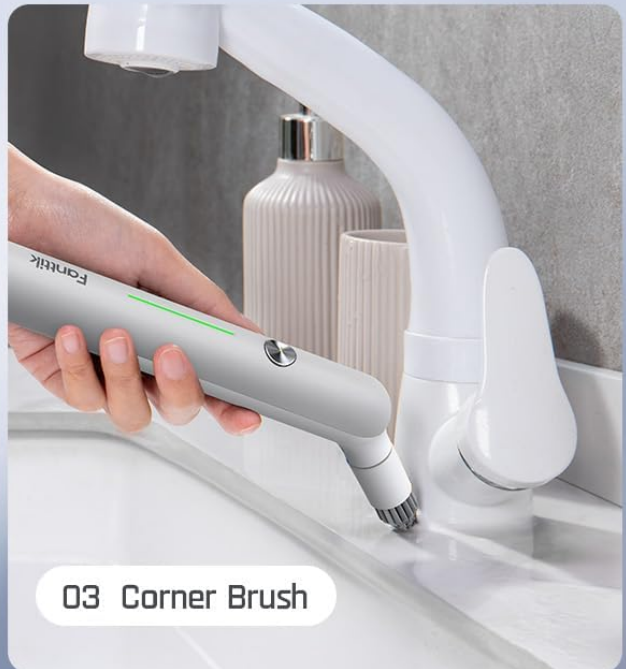

03 Corner Brush

This image highlights the versatility of the Fanttik G9 Nano Electric Spin Scrubber, showcasing the Flat Brush for large surfaces, the Small Flat Brush for edges, and the Corner Brush for intricate areas like faucets and tile crevices.

### 5. Operating the G9 Nano

1. Ensure a brush head is securely attached.

2. Press the power button to turn on the scrubber.
3. Apply the rotating brush head to the surface you wish to clean. Use appropriate cleaning solutions if necessary.
4. Guide the scrubber gently over the surface. Do not apply excessive pressure.
5. Press the power button again to turn off the device.

# ROTARY CLEANING



Removes

# 300%

More Stains  
Than a regular oscillating cleaner



The Fanttik G9 Nano Electric Spin Scrubber utilizes a powerful rotary motion for efficient cleaning. The image illustrates its ability to clean both flat surfaces and tight corners with its rotating brush head.

## 6. Maintenance and Care

- After each use, remove the brush head and rinse it thoroughly under running water.

- Wipe the main body of the scrubber with a damp cloth. Do not rinse the main body directly under water.
- Allow all parts to dry completely before storing.
- Store brush heads on the provided stand to maintain their shape.

## 7. Specifications (G9 Nano)

- Rotation Speed: Up to 250 RPM
- Battery Life: Up to 60 minutes (continuous use)
- Charging: Type-C
- Brush Heads: 8 replaceable types
- Material: Nylon, Plastic
- Surface Recommendation: Ceramic, Metal, Plastic, Tile, Vinyl, Wood

## FANTTIK C8 NANO CORDLESS ELECTRIC SCISSORS

---

### 1. Package Contents

Verify that all items are present in your package:

- Fanttik C8 Nano Cordless Electric Scissors
- Blade (pre-installed or spare)
- Type-C Charging Cable
- Blade Replacement Key
- User Manual
- Storage Bag



This image details the contents of the Fanttik C8 Nano Cordless Electric Scissors package, including the scissors unit, spare blade, charging cable, blade replacement key, user manual, and a storage bag.

### 2. Product Overview

The C8 Nano is a cordless electric scissor designed for cutting various materials with ease. It features a high-magnet motor, LED display, and three-speed adjustment.

### 3. Charging the C8 Nano

1. Connect the Type-C charging cable to the charging port on the scissors.

2. Plug the other end of the cable into a compatible USB power adapter (5V/2A recommended).
3. The LED display will show the battery level and charging status. A full charge takes approximately 1 hour and provides up to 40 minutes of continuous runtime.



The Fanttik C8 Nano Cordless Electric Scissors are equipped with fast charging capabilities via a Type-C port, allowing the device to be fully charged in approximately 1 hour (using a 5V/2A power source).

#### 4. Blade Replacement (EasySwap)

The C8 Nano features an EasySwap blade system for quick and safe blade changes.

1. Ensure the device is turned off and disconnected from charging.
2. Locate the blade release mechanism.
3. Using the provided blade replacement key, follow the instructions to unlock and remove the old blade.
4. Insert the new blade, ensuring it is securely seated and locked into place.

# EASYSWAP™

## 1 OURS

### ONE STEP TO DISASSEMBLE



## 1 OTHERS

### TWO STEPS TO DISASSEMBLE

The EasySwap blade change system of the Fanttik C8 Nano Cordless Electric Scissors is shown, highlighting its simple one-step process for blade replacement, contrasting with more complex methods.

## 5. Operating the C8 Nano

- 1. Adjust Mode:** Rotate the mode selection knob to choose your desired speed setting: ECO (150 RPM), REG (200 RPM), or MAX (230 RPM). The LED display will show the selected mode and battery level.
- 2. Activate:** Press and hold the safety lock-off button, then press the on/off switch to start cutting. Release the on/off switch to stop.
- 3. Cutting:** Guide the scissors along the material. For optimal cutting, a slight left tilt may be beneficial. The integrated LED light illuminates the cutting path.



This image illustrates the two primary steps for operating the Fanttik C8 Nano Cordless Electric Scissors: first, adjust the mode selection knob to your desired speed, then press and hold the lock-off button before engaging the on/off switch.

# LED DISPLAY



A detailed view of the Fanttik C8 Nano's LED display, which provides real-time information on battery level and the selected cutting speed: ECO (150 RPM), REG (200 RPM), and MAX (230 RPM).

## LED LIGHT

Cut safely and accurately  
even in dark environments



The Fanttik C8 Nano Cordless Electric Scissors feature an integrated LED light, shown here illuminating the cutting area, which enhances visibility and accuracy, especially in low-light conditions.

### 6. Cutting Guidelines

The C8 Nano can cut materials up to 1/4 inch thick. Adjust the speed setting according to the material's density:

- **ECO Mode:** Suitable for thin cardboard, craft paper.
- **REG Mode:** Ideal for blister packaging, rope.
- **MAX Mode:** For tougher materials like carpet, leather.

# THREE-SPEED ADJUSTMENT

## ECO MODE



## MAX MODE



## REG MODE



This image illustrates the three-speed adjustment feature of the Fanttik C8 Nano Cordless Electric Scissors: ECO mode for thin cardboard, REG mode for blister packaging, and MAX mode for tougher materials like leather.



This image showcases the versatility of the Fanttik C8 Nano Cordless Electric Scissors, demonstrating its ability to cut a wide range of materials including thin cardboard, rope, carpet, leather, blister packaging, and craft paper.

## 7. Maintenance and Care

- After each use, ensure the device is off and clean any debris from the blade area using a soft brush or cloth.
- Regularly check the blade for sharpness and replace it when dull to maintain cutting performance.
- Wipe the body of the scissors with a dry or slightly damp cloth. Do not use harsh chemicals.
- Store the scissors with the blade guard engaged in the provided storage bag.

## 8. Specifications (C8 Nano)

- Cutting Speed: 3-speed adjustment (ECO: 150 RPM, REG: 200 RPM, MAX: 230 RPM)
- Max Cutting Thickness: 1/4 inch
- Battery Life: Up to 40 minutes (continuous use)
- Charging: Type-C (approx. 1 hour for full charge)
- Features: LED Display, LED Light, EasySwap Blade System, Blade Guard

## TROUBLESHOOTING

---

### G9 Nano Electric Spin Scrubber

- **Device not turning on:** Ensure the battery is charged. Connect to the charger and check the LED indicator.
- **Weak rotation:** The battery may be low, or the brush head might be clogged. Clean the brush head and recharge the device.
- **Brush head detaches easily:** Ensure the brush head is firmly pushed onto the shaft until it clicks.

### C8 Nano Cordless Electric Scissors

- **Scissors not cutting:** Check if the blade is dull and needs replacement. Ensure the safety lock-off button is pressed before engaging the power switch.
- **Reduced cutting power:** The battery may be low. Recharge the device.
- **Blade not rotating:** Ensure no material is jammed in the blade mechanism. Turn off, clear obstruction, then restart.

## WARRANTY AND SUPPORT INFORMATION

---

Fanttik products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the official Fanttik website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

**Website:** [www.fanttik.com](http://www.fanttik.com)

**Email:** [support@fanttik.com](mailto:support@fanttik.com)