

[manuals.plus](#) /› [DOOGEE](#) /› [DOOGEE Blade 10 Smartphone User Manual](#)

DOOGEE Blade 10

DOOGEE Blade 10 Smartphone User Manual

Model: Blade 10

1. INTRODUCTION

Welcome to the DOOGEE Blade 10 User Manual. This guide provides essential information to help you get started with your new smartphone, understand its features, and ensure optimal performance. Please read this manual carefully before using your device.

2. PRODUCT OVERVIEW

The DOOGEE Blade 10 is a sleek and durable smartphone designed for everyday use. It features an ultra-thin 10.7mm profile and a smudge-proof back cover. Key highlights include:

- **Operating System:** Latest Android 14 for enhanced security and accessibility.
- **Performance:** 9GB RAM (expanded from 4GB) for smooth multitasking.
- **Storage:** 128GB internal storage, expandable up to 2TB with a TF card.
- **Display:** 6.56-inch HD+ display with a 90Hz refresh rate for vibrant visuals and smooth scrolling.
- **Camera:** 16MP AI rear camera and 8MP front camera with various modes (panoramic, beautiful, HDR).
- **Battery:** Powerful 5150mAh battery offering extended usage times.
- **Connectivity:** Supports OTG technology for direct connection with other USB devices.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your DOOGEE Blade 10 using the provided charger and USB cable. Connect the USB cable to the phone's charging port and the adapter to a power outlet. The battery indicator will show charging progress.

3.2 Inserting SIM and TF Card

To insert your SIM card(s) and/or TF (microSD) card:

1. Locate the SIM tray on the side of your phone.
2. Use the SIM ejector tool to open the tray.

3. Place your SIM card(s) and/or TF card into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the phone until it clicks into place.

3.3 Powering On/Off

- **To Power On:** Press and hold the Power button until the DOOGEE logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

4. OPERATING YOUR DEVICE

4.1 Navigation and User Interface

Your DOOGEE Blade 10 runs on Android 14, offering an intuitive user interface. Use gestures like swiping, tapping, and pinching to navigate. The 90Hz display ensures a smooth and responsive experience.

4.2 Making Calls and Sending Messages

- **Calls:** Open the Phone app, enter the number, and tap the call icon.
- **Messages:** Open the Messages app, tap to start a new conversation, enter the recipient and your message.

4.3 Camera Usage

The 16MP AI rear camera and 8MP front camera allow you to capture high-quality photos and videos.

1. Open the Camera app.
2. Select your desired mode (e.g., Photo, Video, Panoramic, HDR).
3. Tap the shutter button to take a picture or start/stop recording a video.
4. Use the on-screen controls to switch between front and rear cameras, adjust zoom, or apply filters.

4.4 OTG Functionality

Your device supports OTG (On-The-Go) technology. This allows you to connect USB devices such as flash drives, keyboards, or mice directly to your phone using an OTG adapter (sold separately). Once connected, your phone will recognize the device, and you can access its content or use its functionality.

5. MAINTENANCE

5.1 Cleaning Your Device

To maintain the appearance and functionality of your phone:

- Wipe the screen and body with a soft, lint-free cloth.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- Avoid using harsh chemicals or abrasive materials, as they can damage the screen and finish.
- The smudge-proof back cover helps keep the device clean in various environments.

5.2 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for available updates.

5.3 Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely before recharging frequently.
- Use the original charger and cable.

6. TROUBLESHOOTING

If you encounter issues with your DOOGEE Blade 10, try the following common troubleshooting steps:

- **Device not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Apps crashing or freezing:** Close the problematic app and reopen it. If the issue persists, restart your phone. Check for app updates in the Google Play Store.
- **Poor network signal:** Check your SIM card insertion. Move to an area with better network coverage. Restart your phone.
- **Battery draining quickly:** Reduce screen brightness, close unused apps, disable Wi-Fi/Bluetooth when not in use, and check battery usage in Settings to identify power-hungry apps.
- **Storage full:** Delete unnecessary files, clear app caches, or move files to a TF card.
- **Touchscreen unresponsive:** Restart your phone. If the issue continues, contact support.

7. SPECIFICATIONS

Feature	Specification
Model	DOOGEE Blade 10
Operating System	Android 14
Dimensions	10.7mm Ultra-Thin Body
Weight	240 grams
RAM	9GB (4GB + 5GB expansion)
Internal Storage	128GB
Expandable Storage	Up to 2TB (TF card)
Display	6.56-inch HD+ (90Hz refresh rate)
Rear Camera	16MP AI Main Camera
Front Camera	8MP
Battery Capacity	5150mAh
Connectivity	OTG, Wireless
First Available	September 3, 2024

8. WARRANTY AND SUPPORT

Your DOOGEE Blade 10 smartphone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, service, or further inquiries, please visit the official DOOGEE website or contact their customer service channels. Keep

your proof of purchase for warranty claims.