

OLIXIS CAB-7BC-V2-BK

# OLIXIS 7-Drawer Fabric Dresser Instruction Manual

Model: CAB-7BC-V2-BK

## SETUP INSTRUCTIONS

### Unpacking

Carefully remove all components from the packaging. Inspect all parts for any damage. Keep packaging materials until assembly is complete to ensure no small parts are discarded.

### Parts List

Ensure all parts listed below are present before beginning assembly. Refer to the included manual for detailed part identification.

| Part                   | Description                                                   | Quantity |
|------------------------|---------------------------------------------------------------|----------|
| Metal Frame Components | Left Frame, Right Frame, Middle Frame, Top Frames, Cross Bars | Various  |
| Top Board              | Wooden top surface                                            | 1        |
| Drawers                | Fabric drawers (small and large)                              | 7        |
| Hardware               | Screws, Allen wrench, adjustable feet, anti-tipping kit       | Various  |

### Assembly Instructions

Follow these steps to assemble your OLIIXIS dresser. It is recommended to have a second person for easier assembly, though it can be completed by one individual in approximately 20 minutes.

Your browser does not support the video tag.

Official assembly video for the 7-drawer dresser. This video provides a visual guide to each step of the assembly process, from attaching the frame components to installing the drawer slides and top board.

- 1. Assemble the Metal Frame:** Begin by connecting the left and right frames to the bottom crossbars and top frames using the provided screws and Allen wrench. Ensure the square holes on the frames are consistent with the

illustration in the detailed manual. Tighten screws to 50% initially.

2. **Install Middle Frame and Crossbars:** Attach the middle frame and additional crossbars to create the internal structure for the drawers. Again, tighten screws to 50%.
3. **Attach Top Board:** Secure the wooden top board to the assembled metal frame.
4. **Install Drawer Slides:** Attach the left and right drawer slides to the appropriate frames.
5. **Final Tightening:** Once all frame components and drawer slides are in place, fully tighten all screws to ensure stability.
6. **Assemble Fabric Drawers:** Unfold each fabric drawer and insert the bottom panel to create a sturdy box. Attach the plastic handles to the front of each drawer.
7. **Insert Drawers:** Place the assembled fabric drawers into their respective compartments in the dresser frame.
8. **Adjust Feet:** Adjust the leveling feet at the bottom of the dresser to ensure it stands stable and level on any surface.

## Anti-Tipping Device Installation

To prevent accidental tipping and ensure safety, especially in households with children or pets, it is highly recommended to install the included anti-tipping device. This device secures the dresser to the wall.

1. **Mark Drill Points:** Position the dresser in its desired location. Mark the wall through the pre-drilled holes on the back of the dresser's frame.
2. **Drill Holes:** Using an electric drill, create holes at the marked points on the wall.
3. **Insert Expansion Tubes:** Gently tap the expansion tubes into the drilled holes until they are flush with the wall surface.
4. **Secure Dresser:** Align the dresser with the wall holes and secure it using the provided screws, fastening them into the expansion tubes.



**After**

**7 drawer dresser**  
help you keep all the clutter under control

**Being annoyed**  
when seeing your home in a mess?



**Before**

The dresser features a sturdy metal frame with an anti-tilt device for wall mounting and adjustable feet for stability on uneven surfaces.

## OPERATING YOUR DRESSER

### Drawer Usage

The OLIXIS dresser features seven fabric drawers designed for organizing various items. The drawers are made from high-quality, breathable, and non-woven synthetic fiber, ensuring durability and ease of cleaning. Each drawer is equipped

with an easy-pull handle for smooth opening and closing.

- **Small Drawers (3):** Ideal for smaller items such as socks, underwear, accessories, or light clothing.
- **Large Drawers (4):** Perfect for bulkier items like sweaters, jeans, blankets, or linens.



The dresser offers varied drawer sizes to accommodate different types of clothing and accessories, maximizing storage efficiency.

## Top Surface Usage

The sturdy wooden top of the dresser provides a stable surface for various uses. It can hold up to 66 lbs (30 kg), making it suitable for:

- Displaying decorative items, lamps, or plants.
- Serving as a TV stand for smaller televisions.
- Keeping frequently used items within easy reach.



The wooden top provides a functional surface for decor or frequently accessed items.

## CARE AND MAINTENANCE

### Cleaning

To clean the fabric drawers, simply wipe them with a piece of damp cloth. Allow them to air-dry completely before reinserting them into the frame. The wooden top can be wiped with a soft, damp cloth and mild cleaner if necessary.

### General Care

- Avoid placing excessively heavy items on the drawers or the top surface to prevent damage or deformation. The maximum load capacity for the top is 66 lbs.
- Keep the dresser away from direct sunlight and excessive moisture to preserve the material quality and color.
- Periodically check and tighten all screws to ensure the dresser remains stable and secure.

# TROUBLESHOOTING

If you encounter any issues with your OLIXIS dresser, please refer to the following common solutions:

| Problem                        | Possible Cause                                                    | Solution                                                                                                                                     |
|--------------------------------|-------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Dresser is wobbly or unstable. | Uneven floor surface; loose screws.                               | Adjust the leveling feet at the bottom of the dresser. Check and tighten all assembly screws.                                                |
| Drawers do not slide smoothly. | Drawer not properly inserted; obstruction in the slide mechanism. | Ensure drawers are fully unfolded and the bottom panel is correctly inserted. Remove and reinsert the drawer, checking for any obstructions. |
| Missing parts during assembly. | Parts overlooked during unpacking.                                | Carefully re-check all packaging materials. If still missing, contact customer support.                                                      |

# PRODUCT SPECIFICATIONS

| Feature                        | Detail                                                                               |
|--------------------------------|--------------------------------------------------------------------------------------|
| Brand                          | OLIXIS                                                                               |
| Model Number                   | CAB-7BC-V2-BK                                                                        |
| Product Dimensions (D x W x H) | 11.81"D x 39.37"W x 30"H                                                             |
| Number of Drawers              | 7 (3 small, 4 large)                                                                 |
| Material                       | Metal frame, MDF top board, non-woven synthetic fiber drawers                        |
| Item Weight                    | 29 Pounds                                                                            |
| Max Top Load Capacity          | 66 lbs                                                                               |
| Additional Features            | Adjustable feet, lightweight, rust resistant, space saving, anti-tipping accessories |
| Required Assembly              | Yes                                                                                  |

# WARRANTY AND SUPPORT

OLIXIS products are designed for quality and durability. This product comes with a standard return policy of 30 days for refund or replacement, as per Amazon's policy.

For any questions, concerns, or assistance with assembly or product issues, please contact OLIXIS customer support. Our professional after-sales service team aims to reply to your email within 24 hours to help you find a solution.

Please visit the [OLIXIS Store on Amazon](#) for more information and to explore our range of products.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0FBRY5DMP>

More documents and user manuals: <https://manuals.plus/>