

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Infinix](#) /

› [Infinix XPAD LTE Tablet User Manual](#)

## Infinix X1101B

# Infinix XPAD User Manual

Model: X1101B

## INTRODUCTION

---

Welcome to the user manual for your new Infinix XPAD LTE Tablet. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. The Infinix XPAD is designed for an immersive experience, featuring an 11.0-inch display, powerful performance, and robust connectivity options including 4G and Wi-Fi. Its sleek, metal build ensures both elegance and durability.

## WHAT'S IN THE BOX

---

Please check the contents of your package to ensure all items are present:

- Infinix XPAD Tablet
- Charger
- SIM Ejector Tool
- User Guide (this document)
- Warranty Card

## SETUP

---

### 1. Charging the Device

Before first use, it is recommended to fully charge your Infinix XPAD. Connect the charger to the tablet's charging port and plug it into a power outlet. The battery indicator on the screen will show the charging status.

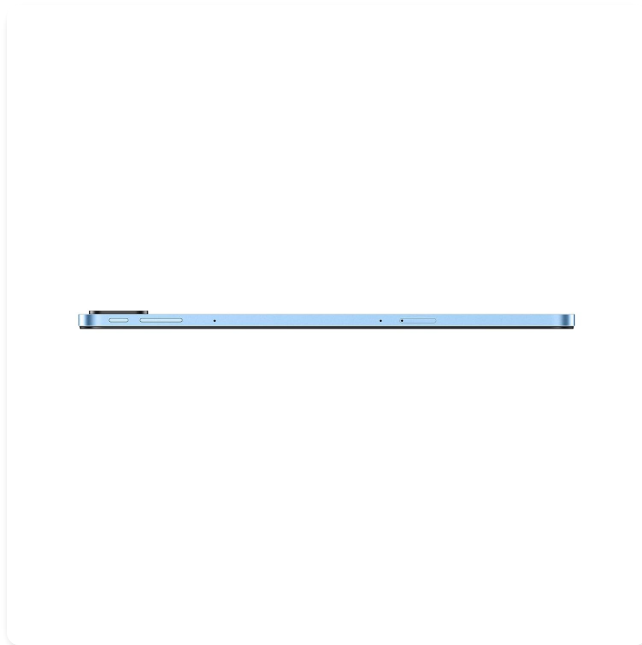 


Image: Side view of the Infinix XPAD, highlighting the charging port and buttons.

## 2. Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the Infinix logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power options menu appears. Select 'Power off' from the menu.

## 3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This typically includes:

- Selecting your language.
- Connecting to a Wi-Fi network.
- Setting up your Google account (or skipping for later).
- Reviewing and accepting terms and conditions.



Image: The Infinix XPAD tablet in its blue finish, ready for use.

### 1. Display and Navigation

Your Infinix XPAD features an 11.0-inch FHD+ display with a 90Hz refresh rate for smooth visuals. Navigate the interface using touch gestures:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through screens or lists.
- **Pinch-to-zoom:** To zoom in or out on images and web pages.

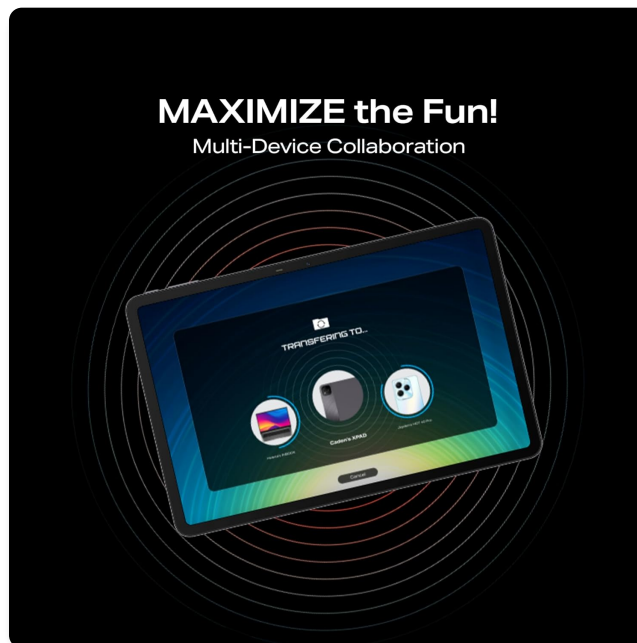 


Image: The Infinix XPAD display showcasing vibrant visuals, emphasizing its immersive viewing experience.

### 2. Connectivity (Wi-Fi, Bluetooth, 4G LTE)

The XPAD offers versatile connectivity options:

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks.
- **Bluetooth:** Enable Bluetooth in Settings > Connected devices to pair with headphones, speakers, or other devices.
- **4G LTE:** Insert a Nano-SIM card into the SIM tray using the provided ejector tool to access mobile data and voice call features.

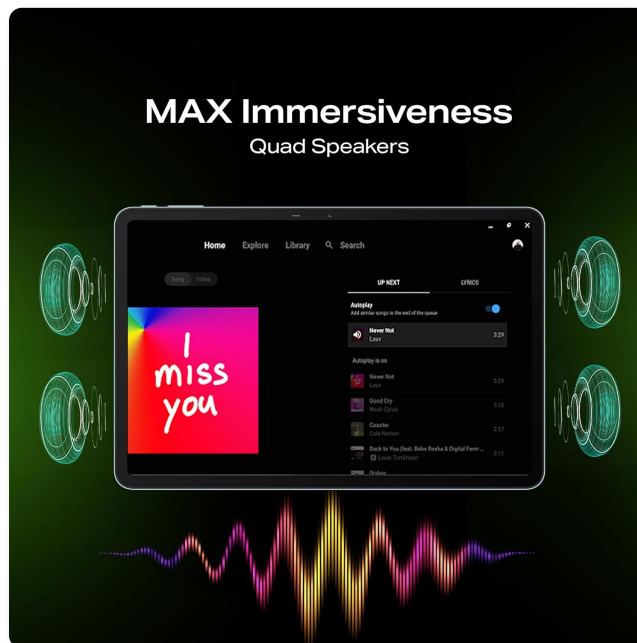 


Image: Visual representation of the Infinix XPAD's high-speed 4G network and Wi-Fi capabilities.

### 3. Camera Usage

The tablet is equipped with 8 MP primary and 8 MP front cameras. Open the Camera app from the home screen or app drawer. Tap the shutter button to take photos or switch to video mode to record.

### 4. Audio and Multimedia

Experience rich audio with the XPAD's quad speakers and DTS Audio Processing. Adjust volume using the volume buttons on the side of the device. Enjoy music, videos, and games with enhanced sound quality.

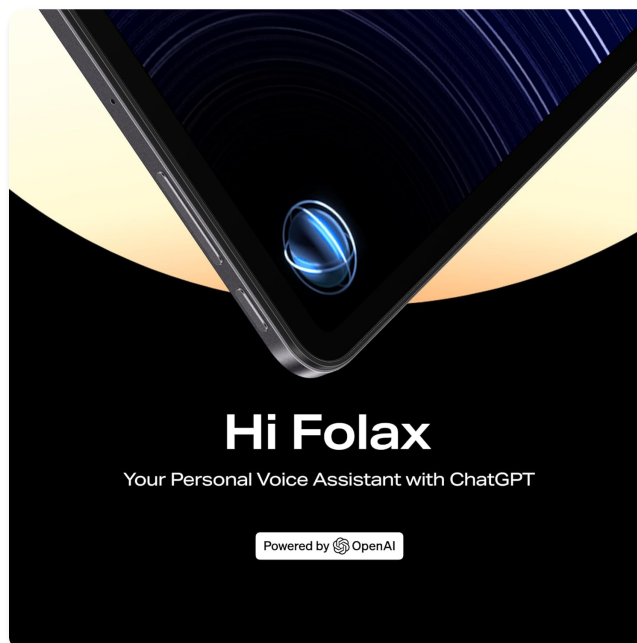 


Image: Diagram illustrating the Infinix XPAD's quad speakers and immersive audio capabilities.

## MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance

and security. Go to Settings > System > System update.

- **Battery Care:** Avoid extreme temperatures. For long-term storage, charge the battery to about 50% and power off the device.
- **Storage Management:** Periodically clear unnecessary files and apps to maintain smooth operation.

## TROUBLESHOOTING

Problem	Solution
Device won't turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, press and hold the power button for 10-15 seconds for a forced restart.
Wi-Fi connection issues	Restart your Wi-Fi router. Go to Settings > Network & internet > Wi-Fi, forget the network, and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance	Close unused apps running in the background. Clear cache for frequently used apps. Restart the tablet. Consider freeing up storage space.
Apps crashing	Ensure the app is updated to the latest version. Clear the app's cache and data (Settings > Apps > [App Name] > Storage & cache). If the issue persists, uninstall and reinstall the app.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	X1101B
Display	11.0 inch (27.94 cm) FHD+ (1920 x 1200 pixels), 90Hz Refresh Rate
Processor	MediaTek, 2.2 GHz
RAM	8 GB
Internal Storage	256 GB ROM (Expandable Upto 1 TB)
Operating System	Android 14
Rear Camera	8 MP
Front Camera	8 MP
Battery	7000 mAh (26 Watt Hours)
Audio	4 speakers, DTS Audio Processing, Equalizer, 4 Sound Modes
Connectivity	Bluetooth, Cellular (4G LTE), Wi-Fi
Weight	496 g

Feature	Specification
Included Components	Tablet, Charger, Sim Ejector Tool, User Guide, Warranty Card

## WARRANTY AND SUPPORT

Your Infinix XPAD comes with a standard manufacturer's warranty. Please refer to the included Warranty Card for detailed terms and conditions, including the warranty period and coverage. For technical support, service, or inquiries, please contact Infinix customer service. Contact information can typically be found on the manufacturer's official website or on the warranty card.

Additional protection plans may be available for purchase to extend your coverage. Please check with your retailer for more details.