

[manuals.plus](#) /

› [Fuse](#) /

› [Fuse Wrap Vertical Vinyl Record Player Instruction Manual \(Model RAD-VERT-6\)](#)

Fuse RAD-VERT-6

Fuse Wrap Vertical Vinyl Record Player Instruction Manual

Model: RAD-VERT-6

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Fuse Wrap Vertical Vinyl Record Player, Model RAD-VERT-6. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Image 1.1: Front view of the Fuse Wrap Vertical Vinyl Record Player with a record playing.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the device or personal injury:

- Do not expose the unit to rain or moisture.
- Do not block ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Fuse Wrap Vertical Vinyl Record Player
- Power Adapter
- User Manual (this document)
- Record Clamp
- Fuse Premium Ceramic Cartridge (pre-installed)

4. PRODUCT OVERVIEW

4.1 Front Panel Controls



Image 4.1: Detailed view of the control panel and display.

- **PLAY/PAUSE Button:** Starts or pauses playback.
- **PRESET+/PRESET- Buttons:** Navigates through FM radio presets or adjusts settings.
- **TIME/SCAN Button:** Sets time or scans FM radio stations.
- **MEM/SNOOZE Button:** Saves FM radio presets or activates snooze for the alarm.
- **MODE Button:** Switches between Vinyl, FM Radio, Bluetooth, and AUX modes.
- **ALARM Button:** Sets or activates the alarm function.
- **POWER Button:** Turns the unit on or off.
- **SLEEP Button:** Activates the sleep timer.
- **TUNE/ $\langle \rangle$ Button:** Adjusts FM radio frequency or navigates menus.
- **VOLUME Knob:** Adjusts the audio output volume.

4.2 Rear Panel Connections



Image 4.2: Rear panel with power input, line out, and AUX in ports.

- **DC 12V Input:** Connects the power adapter.
- **LINE OUT (R/L):** RCA outputs for connecting to external speakers or an amplifier.
- **AUX IN:** 3.5mm input for connecting external audio devices.
- **FM Antenna:** For improved FM radio reception.
- **Speed Selector Switch (33/45/78 RPM):** Located on the side, adjusts playback speed for vinyl records.

5. SETUP

5.1 Unpacking and Placement

1. Carefully remove the unit from its packaging.
2. Place the record player on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations.
3. Ensure adequate ventilation around the unit.

5.2 Power Connection

1. Connect the provided power adapter to the DC 12V input on the rear of the unit.
2. Plug the power adapter into a wall outlet.

5.3 Initial Power On

Press the **POWER** button to turn on the unit. The display will illuminate.

6. OPERATING INSTRUCTIONS

6.1 Playing Vinyl Records

1. Press the **MODE** button until "PHONO" or "VINYL" appears on the display.
2. Place a record onto the platter. Ensure the record clamp is securely fastened to hold the record in place vertically.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch on the side of the unit.
4. Gently lift the tonearm using the cueing lever and position the stylus over the desired track on the record.
5. Lower the tonearm slowly onto the record using the cueing lever. Playback will begin.
6. To pause, lift the tonearm using the cueing lever. To stop, lift the tonearm, return it to its rest, and secure it.



Image 6.1: The record player in operation, showcasing its vertical design.

6.2 Bluetooth Operation

The Fuse Wrap supports Bluetooth 5.0 for both input (receiving audio from a device) and output (sending audio to Bluetooth headphones/speakers).

6.2.1 Bluetooth Input (Receiving Audio)

1. Press the **MODE** button until "BT IN" or "BLUETOOTH IN" appears on the display. The unit will enter pairing mode, indicated by a flashing Bluetooth icon.
2. Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for "Fuse Wrap".
3. Select "Fuse Wrap" from the list of available devices to pair. Once connected, a solid Bluetooth icon will appear.
4. You can now play audio from your device through the record player's speakers.

6.2.2 Bluetooth Output (Sending Audio)

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. Press the **MODE** button until "BT OUT" or "BLUETOOTH OUT" appears on the display. The unit will search for nearby Bluetooth output devices.
3. The record player will attempt to connect to the nearest available Bluetooth output device. Once connected, audio from vinyl or other inputs will be routed to the external Bluetooth device.



Image 6.2: Bluetooth connectivity icon, indicating wireless audio capabilities.

6.3 FM Radio Operation

1. Press the **MODE** button until "FM" appears on the display.
2. To auto-scan and save presets: Press and hold the **TIME/SCAN** button. The radio will scan for stations and save them automatically.
3. To manually tune: Use the **TUNE/< >** buttons to adjust the frequency.
4. To select a preset station: Use the **PRESET+/PRESET-** buttons.

6.4 AUX Input

1. Connect an external audio device (e.g., MP3 player, CD player) to the **AUX IN** port on the rear of the unit using a 3.5mm audio cable.
2. Press the **MODE** button until "AUX" appears on the display.
3. Play audio from your connected device.



Image 6.3: AUX input icon, representing wired audio connection.

6.5 Alarm Clock Function

1. **Setting the Time:** Press and hold the **TIME/SCAN** button. Use the **TUNE/< >** buttons to set the hour and minute, then press **TIME/SCAN** to confirm each setting.
2. **Setting the Alarm:** Press and hold the **ALARM** button. Use the **TUNE/< >** buttons to set the alarm hour and minute,

then press **ALARM** to confirm. You can also select the alarm source (e.g., FM radio, buzzer).

3. **Activating/Deactivating Alarm:** Briefly press the **ALARM** button to toggle the alarm on or off. An alarm icon will appear on the display when active.
4. **Snooze:** When the alarm sounds, press the **MEM/SNOOZE** button to activate snooze. The alarm will sound again after a set interval.

7. MAINTENANCE

7.1 Cleaning the Unit

- Wipe the exterior with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.

7.2 Stylus Care

- Periodically clean the stylus tip with a soft brush, brushing from back to front.
- A worn or damaged stylus can damage records and degrade sound quality. Replace the stylus if it appears worn or bent.

7.3 Record Care

- Handle records by their edges to avoid touching the grooves.
- Store records vertically in their sleeves in a cool, dry place.
- Clean records regularly with a record cleaning brush or solution.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------------|--|--|
| No power | Power adapter not connected; outlet not active. | Ensure power adapter is securely connected and plugged into a working outlet. |
| No sound from speakers | Volume too low; incorrect mode selected; external speakers connected via Line Out. | Increase volume; select correct mode (Vinyl, BT IN, FM, AUX); if using Line Out, ensure external speakers are powered and connected correctly. |
| Record skips or sounds distorted | Record is dirty or damaged; stylus is dirty or worn; unit is not level. | Clean record; clean or replace stylus; ensure unit is on a stable, level surface. |
| Bluetooth pairing fails | Device too far; unit not in pairing mode; incorrect Bluetooth mode (IN/OUT). | Move device closer; ensure unit is in "BT IN" or "BT OUT" pairing mode; restart Bluetooth on both devices. |
| Poor FM reception | Antenna not extended; weak signal. | Extend the FM antenna fully; try repositioning the unit for better reception. |

9. SPECIFICATIONS

- **Model:** RAD-VERT-6
- **Brand:** Fuse

- **Playback Speeds:** 33 1/3, 45, 78 RPM
- **Cartridge:** Premium Ceramic with Diamond Needle
- **Drive System:** Manual Belt-Drive
- **Connectivity:** Bluetooth 5.0 (Input/Output), AUX In, Line Out (RCA)
- **Radio:** FM
- **Speakers:** Built-in Full Range Stereo Speakers
- **Additional Features:** Alarm Clock, Sleep Timer
- **Power Input:** DC 12V
- **Dimensions (approx.):** 14" (W) x 9" (D) x 15" (H)
- **Weight (approx.):** 10.47 pounds (4.76 kg)
- **UPC:** 810080512726



10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for warranty claims.

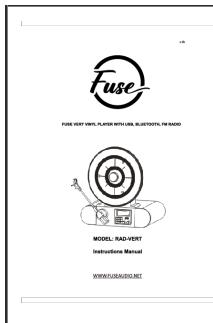
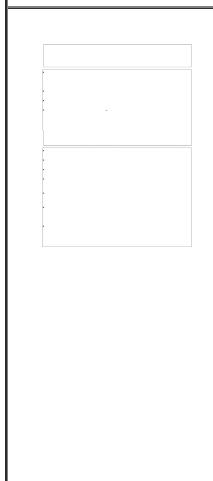
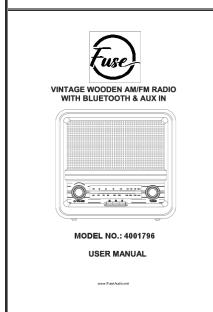
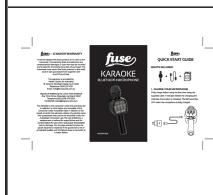
Manufacturer: Fuse

Note: Specific warranty terms may vary by region and retailer.



© 2025 Fuse. All rights reserved.

Related Documents - RAD-VERT-6

| | |
|--|---|
|  The image shows the front cover of the 'Fuse Vert Vinyl Player with USB, Bluetooth, FM Radio - Instructions Manual'. It features the 'Fuse' logo at the top, followed by a stylized illustration of a turntable and speakers. Below the illustration, the text 'MODEL: RAD-VERT' and 'Instructions Manual' is printed, along with the website 'HTTP://FUSEAUDIO.NET'. | <p>Fuse Vert Vinyl Player with USB, Bluetooth, FM Radio - Instructions Manual</p> <p>Comprehensive instructions manual for the Fuse Vert Vinyl Player, detailing setup, operation of vinyl playback, FM radio, Bluetooth, USB, and AUX modes, along with safety precautions and technical specifications.</p> |
|  The image shows the front cover of the 'Fuse Vert Vinyl Player User Manual'. It features a large, stylized illustration of the turntable and speakers. Below the illustration, the text 'USER MANUAL' and the website 'HTTP://FUSEAUDIO.NET' are printed. | <p>Understanding Fuses: Types, Selection, and Applications</p> <p>A comprehensive guide to fuses, explaining their function, construction, common terms, various types like fast-acting and time-delay, and selection criteria for electrical circuits.</p> |
|  The image shows the front cover of the 'Fuse Vintage Wooden AM/FM Radio with Bluetooth & Aux In User Manual'. It features a stylized illustration of the vintage wooden radio. Below the illustration, the text 'VINTAGE WOODEN AM/FM RADIO WITH BLUETOOTH & AUX IN', 'MODEL NO.: 4001796', and 'USER MANUAL' are printed, along with the website 'HTTP://FUSEAUDIO.NET'. | <p>Fuse Vintage Wooden AM/FM Radio with Bluetooth & Aux In User Manual</p> <p>User manual for the Fuse Vintage Wooden AM/FM Radio with Bluetooth & Aux In, Model No. 4001796. Includes safety instructions, operating instructions, and specifications.</p> |
|  The image shows the front cover of the 'Fuse Karaoke Bluetooth Microphone AFS-BTK-BLK Quick Start Guide'. It features a stylized illustration of the microphone. Below the illustration, the text 'KARAOKE', 'QUICK START GUIDE', and the website 'HTTP://FUSEAUDIO.NET' are printed. | <p>Fuse Karaoke Bluetooth Microphone AFS-BTK-BLK Quick Start Guide</p> <p>Get started with your Fuse Karaoke Bluetooth Microphone (AFS-BTK-BLK). This guide covers charging, connecting via Bluetooth, using controls, and enabling Duet Mode for a shared singing experience.</p> |



[MIXX 6.5 Vinyl Record Player User Guide](#)

A comprehensive user guide for the MIXX 6.5 Vinyl Record Player, covering setup, operation, connectivity, maintenance, and safety instructions. Learn how to enjoy your vinyl collection with this stylish turntable.