

Manuals.plus /

› DECAKILA /

› DECAKILA 10-Speed Glass Jar Blender KUJB046W Instruction Manual

DECAKILA KUJB046W

DECAKILA 10-Speed Glass Jar Blender

Model: KUJB046W

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the blender.
- To protect against electrical hazards, do not immerse the blender base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate blender with lid in place.
- Do not blend hot liquids.
- This appliance is equipped with a thermostat protection system to prevent overheating. If the motor stops, unplug the blender and allow it to cool for at least 15 minutes before resuming use.

PRODUCT OVERVIEW

The DECAKILA KUJB046W blender is designed for efficient blending with its powerful motor and durable components. Familiarize yourself with its parts before use.

Components:

- Blender Base (Motor Unit)
- Glass Jar (1.5 Liters capacity)
- Lid with removable filler cap
- 6-Blade Stainless Steel Assembly (detachable)



Figure 1: Fully assembled DECAKILA KUJB046W Blender.



Figure 2: Blender base featuring the control panel with speed and function buttons.



Figure 3: Blender base and glass jar with its detachable blade assembly.



Figure 4: Glass blender jar with its lid and removable filler cap.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the glass jar, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry. Wipe the blender base with a damp cloth. Do not immerse the base in water.
3. **Assemble Jar:** Ensure the blade assembly is securely attached to the bottom of the glass jar. Place the glass jar onto the blender base, aligning the tabs on the jar with the slots on the base. Turn the jar clockwise until it locks into place.

4. **Add Ingredients:** Place your desired ingredients into the glass jar. Do not exceed the maximum fill line indicated on the jar. Securely place the lid on the jar and insert the filler cap.
5. **Connect Power:** Plug the power cord into a standard 120V electrical outlet.

OPERATING INSTRUCTIONS

The DECAKILA KUJB046W blender offers 10 speed settings and a pulse function for versatile blending.

1. **Power On:** Ensure the blender is properly assembled and plugged in. Press the "OFF" button to ensure the blender is in standby mode.
2. **Select Speed:**
 - For continuous blending, select a speed from 1 to 10, or "LO" (Low) or "HI" (High) depending on the desired consistency. Lower speeds are suitable for lighter mixtures, while higher speeds are for tougher ingredients.
 - For short bursts of power, press and hold the "P" (Pulse) button. Release the button to stop. The pulse function is ideal for chopping or breaking down larger pieces.
3. **Blending:** Allow the blender to run until the desired consistency is achieved. If ingredients stick to the sides, turn off the blender, remove the lid, and use a spatula to push them down. Replace the lid before resuming.
4. **Power Off:** Once blending is complete, press the "OFF" button and unplug the blender from the outlet.

Important: Do not operate the blender continuously for more than 2 minutes. Allow a 1-minute rest period between cycles to prevent motor overheating. The built-in thermostat protection will automatically shut off the motor if it overheats. If this occurs, unplug the unit and let it cool for at least 15 minutes before restarting.

Your browser does not support the video tag.

Video 1: Product demonstration showing the blender in operation. This video illustrates the assembly and basic use of a similar blender model, demonstrating the blending process and control panel interaction.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your blender.

1. **Unplug:** Always unplug the blender before cleaning.
2. **Disassemble:** Remove the glass jar from the base. Carefully detach the blade assembly from the bottom of the jar. Remove the lid and filler cap.
3. **Wash Components:** Wash the glass jar, lid, filler cap, and blade assembly in warm, soapy water. The 6 stainless steel blades are sharp; handle with extreme care. Rinse thoroughly and dry immediately to prevent water spots or corrosion.
4. **Clean Base:** Wipe the blender base with a soft, damp cloth. Do not immerse the base in water or any other liquid. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
5. **Storage:** Reassemble the blender or store components separately once dry. The power cord features a stowable design for convenient and organized storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not active; jar not correctly seated on base.	Ensure plug is firmly in outlet; check power outlet with another appliance; ensure jar is locked into place on the base.
Motor stops during operation.	Overheating due to prolonged use or too much load; thermostat protection activated.	Unplug the blender and let it cool for at least 15 minutes. Reduce load or blend in smaller batches.
Ingredients are not blending smoothly.	Too little liquid; ingredients too large; incorrect speed setting.	Add more liquid; cut ingredients into smaller pieces; use a higher speed or the pulse function.
Loud noise or unusual odor.	Foreign object in jar; motor strain.	Immediately turn off and unplug. Check for foreign objects. If odor persists, discontinue use and contact support.

SPECIFICATIONS

Feature	Detail
Model	KUJB046W
Brand	DECAKILA
Power	650 Watts (Pure Copper Motor)
Voltage	120 Volts
Capacity	1.5 Liters (Glass Jar)
Speed Settings	10 Speeds + Pulse (P), Low (LO), High (HI)
Blades	6 Stainless Steel 304 Blades (Detachable)
Dimensions (D x W x H)	19 cm x 16 cm x 37 cm
Weight	1.7 Kilograms
Material	Polycarbonate (Base), Glass (Jar)
Special Features	Thermostat Protection, Stowable Power Cord

WARRANTY AND SUPPORT

This product is designed for durability and performance. For any issues or inquiries, please refer to your purchase documentation for specific warranty details and contact information for customer support.

A 30-day return policy may apply, as per retailer terms. Optional extended protection plans may be available from third-party providers at the time of purchase.

