



Manuals.plus /

› Whuto /

› Whuto Cordless Immersion Hand Blender (Model BL0202-01) User Manual

Whuto BL0202-01

Whuto Cordless Immersion Hand Blender (Model BL0202-01) User Manual

1. INTRODUCTION

Thank you for choosing the Whuto Cordless Immersion Hand Blender. This versatile 5-in-1 appliance is designed to simplify your kitchen tasks, offering convenience and efficiency for blending, whisking, chopping, and frothing. Please read this manual carefully before use to ensure safe and optimal operation.

2. PRODUCT COMPONENTS

The Whuto Cordless Immersion Hand Blender comes with the following components:

- Main Motor Unit (Cordless)
- Immersion Blender Attachment
- Whisk Attachment
- Milk Frother Attachment
- Chopper Bowl with Blade and Lid
- 700ml Beaker
- USB-C Charging Cable
- User Manual

What You Get?



Image: All included components of the Whuto Cordless Immersion Hand Blender.

3. SAFETY INFORMATION

- Always ensure the appliance is switched off and disconnected from power before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the container while blending to prevent injury.
- The blades are sharp. Handle with care.
- Do not immerse the main motor unit in water or other liquids.
- This appliance features a safety lock. Press and hold the safety button for two seconds to activate the blender.
- All food-contact parts are made from BPA-free materials.



Ergonomic Handle & Safety Lock

Ergonomic handle with non-slip grip for easy one-handed use.
Safety lock prevents accidental starts.

Image: Safety lock and variable speed control on the main unit.

4. SETUP AND ASSEMBLY

To assemble an attachment, align the attachment with the main motor unit and twist until it locks securely into place. To disassemble, twist in the opposite direction and pull apart.

Your browser does not support the video tag.

Video: This video demonstrates how to properly disassemble the various accessories from the main motor unit for cleaning or switching attachments.

5. OPERATING INSTRUCTIONS

General Operation

To operate the blender, first ensure an attachment is securely connected. Press and hold the safety button on the top of the main unit for two seconds until the indicator light turns green. Then, press the power button to begin blending. The speed can be adjusted by rotating the knob on the top of the unit.



Infinitely Adjustable Speeds



Low speed

high speed

The appliance offers multiple adjustable speeds to control the fineness of the food, allowing you to select your preferred speed based on the type of food or task you are mixing.

Image: Variable speed control allows for precise adjustment based on ingredients.

Your browser does not support the video tag.

Video: This video illustrates the correct grip posture for comfortable and effective use of the hand blender, minimizing strain.

Immersion Blender Attachment

Attach the immersion blender shaft to the main unit. Submerge the blade guard into your ingredients (e.g., soup, smoothie mixture) in the 700ml beaker or another deep container. Press the power button to blend. The unique bell-shaped blade guard helps prevent splashing and ensures efficient blending.

Anti-Splash Design

Unique bell shape blade guard helps ingredients flow easily through the blades, and prevents splashing to ensure a spotless kitchen.



Image: The anti-splash design of the immersion blender attachment.

Whisk Attachment

Connect the whisk attachment to the main unit. Use it for whipping cream, beating eggs, or preparing light batters. Insert the whisk into your ingredients and activate the blender. Adjust speed as needed for desired consistency.



Image: The whisk attachment is ideal for whipping eggs or cream.

Milk Frother Attachment

Attach the milk frother to the main unit. Submerge the frother into milk or other beverages. Turn on the blender to create rich, creamy froth for coffee, lattes, or hot chocolate.

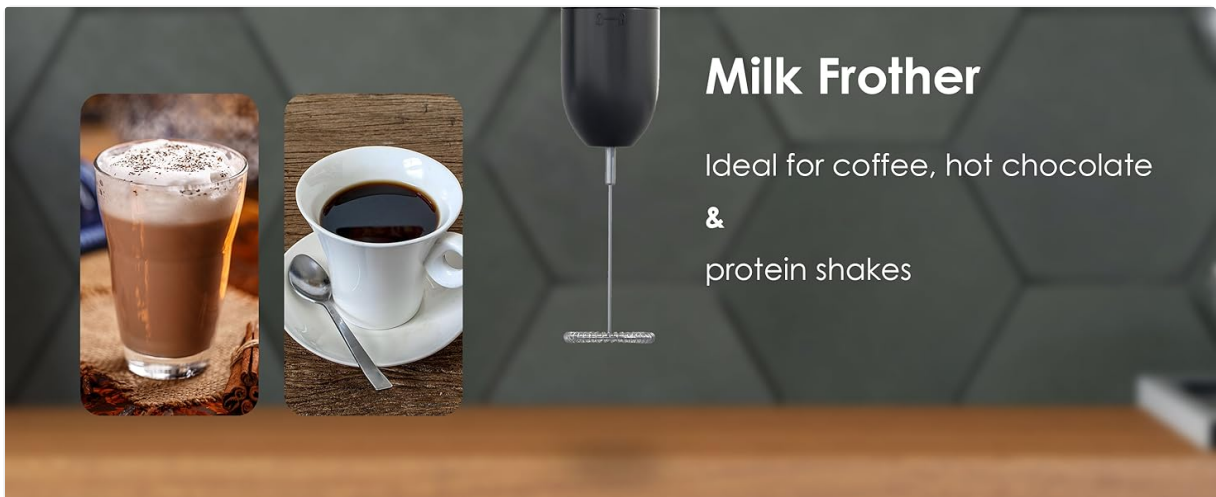


Image: The milk frother attachment for creating creamy beverages.

Chopper Attachment

Place the sharp blade into the chopper bowl, then add your ingredients (e.g., nuts, vegetables, meat). Secure the chopper lid, then attach the main motor unit to the lid. Press the power button to chop. Adjust speed for desired texture.



Image: The chopper attachment for processing various ingredients.

Your browser does not support the video tag.

Video: This video provides a comprehensive overview of the cordless hand blender's various functions and how to use each attachment for different kitchen tasks.

6. CHARGING

The Whuto Hand Blender is equipped with a built-in 2000mAh rechargeable battery. Use the provided USB-C charging cable to charge the main motor unit. A full charge typically takes approximately 4 hours and provides enough power for over 15 uses, or blending up to 25 bowls of soup.



Image: The main unit charging via USB-C cable.

7. CLEANING AND MAINTENANCE

For easy cleaning, the immersion blender shaft, whisk, milk frother, chopper blade, chopper bowl, and beaker are dishwasher-safe. The main motor unit should be wiped clean with a damp cloth. Do not immerse the motor unit in water.

8. TROUBLESHOOTING

- **Appliance not turning on:** Ensure the unit is fully charged. Press and hold the safety button for two seconds before pressing the power button.
- **Attachments not working:** Verify that the attachment is securely locked into the main motor unit.
- **Poor blending/chopping performance:** Ensure the blades are clean and free from obstructions. Do not overload the chopper bowl or beaker. Adjust the speed setting as needed.
- **Excessive splashing:** Ensure the immersion blender attachment is sufficiently submerged in the ingredients.

9. SPECIFICATIONS

Feature	Detail
Brand	Whuto
Model Number	BL0202-01
Power Source	Battery Powered (2000mAh)
Capacity	700 Milliliters (Beaker)
Product Dimensions	2.15"D x 2.15"W x 16.46"H
Blade Material	Stainless Steel
Material Type Free	BPA Free
Special Feature	Portable, Cordless, Variable Speed

**COMPACT,
EXQUISITE,
AND FAST STORAGE**

You can put our cordless hand blender in the drawer for easy storage

Image: Product dimensions for the hand blender and its accessories.

10. WARRANTY AND SUPPORT

The Whuto Cordless Immersion Hand Blender comes with a 1-year limited warranty. For any questions, concerns, or support needs, please contact our customer service. We offer 24-hour prompt responses to ensure your satisfaction.