

[Manuals.plus](#) /

› [BUYDEEM](#) /

› BUYDEEM G52 5.3 Quart Electric Food Steamer Instruction Manual

BUYDEEM G52

BUYDEEM G52 5.3 Quart Electric Food Steamer Instruction Manual

Model: G52 | Brand: BUYDEEM

INTRODUCTION

The BUYDEEM G52 Electric Food Steamer is designed to provide a convenient and healthy cooking experience. This appliance utilizes steam to cook a variety of foods, preserving nutrients and natural flavors. Please read this manual thoroughly before first use to ensure safe and optimal operation.

SAFETY INSTRUCTIONS

- Always place the steamer on a stable, heat-resistant surface.
- Do not immerse the main unit in water or other liquids.
- Ensure the power cord is not damaged and is plugged into a grounded outlet.
- Keep hands and face away from steam vents during operation to avoid burns.
- Always use oven mitts or a cloth when handling hot parts of the steamer.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate the steamer if it is damaged or malfunctioning.
- Keep out of reach of children.

PRODUCT OVERVIEW

The BUYDEEM G52 steamer features a compact design with a 5.3-quart capacity, suitable for 2-4 servings. It includes food-grade 304 stainless steel components and a reinforced tempered glass lid for durability and safety.



Figure 1: BUYDEEM G52 Electric Food Steamer in Cozy Greenish.

Components



Figure 2: Exploded view showing the reinforced tempered glass lid, stainless steel large steamer tray, and BPA-free PP construction base.

- **Reinforced Tempered Glass Lid:** Durable and shatter-resistant, allowing visibility of food during steaming.
- **Stainless Steel Large Steamer Tray:** Corrosion-resistant and durable, made from 304 stainless steel.
- **BPA-Free PP Construction Base:** Cool-touch design for safety, housing the heating element and control panel.
- **Water Inlet:** Located on the side for convenient refilling during operation.
- **Water Level Window:** Clearly marked MIN and MAX levels to indicate water volume.

SETUP

1. Unpack all components and remove any packaging materials.
2. Wash the stainless steel tray and glass lid with warm, soapy water. Rinse thoroughly and dry.

3. Place the main unit on a flat, stable, and heat-resistant surface.
4. Ensure the water inlet cover is closed before adding water.
5. Fill the water reservoir through the side water inlet with clean water, ensuring the level is between the MIN and MAX marks on the visible window.



Figure 3: Adding water to the steamer through the side inlet.

6. Place the stainless steel steamer tray onto the base.
7. Place the food to be steamed onto the tray.
8. Cover with the reinforced tempered glass lid.
9. Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Control Panel

EASY OPERATION



- **Touch to Keep Warm**
Customizable Auto Keep-Warm
(Up to 2 Hours)

- **Twist to Steam**
7 Preset Timings Setting
for Every Dish

Figure 4: Steamer control panel with timer dial and function buttons.

- **Timer Dial:** Rotate to select desired steaming time (5, 10, 15, 20, 30, 45, 60 minutes).
- **Start/Pause Button:** Press to start or pause the steaming process.
- **Warm Button:** Activates the 2-hour automatic keep warm function.
- **Stop Button:** Stops the current operation.
- **Progress Lights:** Indicate the remaining time during steaming.

Steaming Process

1. Prepare your food and place it on the stainless steel tray.
2. Rotate the timer dial to select the desired steaming duration. Refer to the suggested steam times below.
3. Press the 'Start/Pause' button to begin steaming. The progress lights will illuminate.
4. Once the selected time elapses, the steamer will automatically stop.
5. Carefully remove the lid and food using appropriate heat protection.

Keep Warm Function

To activate the 2-hour automatic keep warm function, press the 'Warm' button before or during steaming. This will keep your food warm after cooking. The steamer remembers your setting, so you do not need to turn it on each time.

Dual Boil-Dry Protection

The steamer is equipped with dual boil-dry protection for safety:

- A refill indicator alerts you when the water level falls below the minimum. The steamer will enter standby mode and automatically resume once water is refilled.
- Automatic shut-off prevents overheating if the water runs out completely.



Figure 5: Dual Boil-Dry Protection features.

Suggested Steam Times

Food Item	Suggested Time
-----------	----------------

Food Item	Suggested Time
Eggs	5-15 minutes
Broccoli	10-25 minutes
Corn	15-20 minutes
Fish	10-20 minutes
Shrimp	5-15 minutes
Chicken	20-60 minutes
Dumplings	10-15 minutes
Sweet Potato	20 minutes
Vegetable Soup	15-60 minutes

Note: These times are suggestions and may vary based on food quantity and desired doneness.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the BUYDEEM G52 Electric Food Steamer in use, showcasing its features and versatility.

MAINTENANCE

Cleaning

- Always unplug the steamer and allow it to cool completely before cleaning.
- The stainless steel tray and glass lid are dishwasher safe.
- Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
- For stubborn stains or mineral deposits in the water reservoir, use a solution of water and vinegar, then rinse thoroughly.

TROUBLESHOOTING

- **Steamer not turning on:** Check if the power cord is securely plugged into the outlet. Ensure the water reservoir has sufficient water.
- **No steam produced:** Verify that the water level is above the MIN mark.
- **Food not cooking evenly:** Ensure food is arranged in a single layer on the tray for optimal steam circulation. Cut larger food items into smaller, uniform pieces.
- **Water leaking:** Check that all components are correctly assembled and the lid is properly seated.

SPECIFICATIONS

- **Brand:** BUYDEEM
- **Model:** G52
- **Capacity:** 5.3 Quarts (5L)
- **Color:** Cozy Greenish
- **Material:** Stainless Steel (food-contact parts), BPA-Free PP (base)
- **Product Dimensions:** 13.1"L x 11.2"W x 11.6"H
- **Item Weight:** 10.91 pounds
- **Is Electric:** Yes
- **UPC:** 810059973817

WARRANTY AND SUPPORT

For any questions, concerns, or warranty information regarding your BUYDEEM G52 Electric Food Steamer, please contact BUYDEEM customer support. Refer to the product packaging or the official BUYDEEM website for contact details.

© 2025 BUYDEEM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question