

- Manuals.plus /
- › [Effireli](#) /
 - › Effireli RG10A(F2S)/BGEF Replacement Remote Control User Manual

Effireli YK-RG10A(F2S)/BGEF

Effireli RG10A(F2S)/BGEF Replacement Remote Control User Manual

For Midea Air Conditioners

INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your Effireli RG10A(F2S)/BGEF Replacement Remote Control for Midea Air Conditioners. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

This remote control is designed to be ready for use immediately, requiring no programming or complex setup. Simply insert batteries and begin operation.

PRODUCT OVERVIEW



Image: Front view of the Effireli RG10A(F2S)/BGEF Replacement Remote Control. It is a white, rectangular remote with a large display screen at the top and various control buttons below.

The Effireli RG10A(F2S)/BGEF remote control features a clear LCD display and intuitively arranged buttons for easy operation of your Midea air conditioner. Below is a description of the main components and buttons:

- **LCD Display:** Shows current settings such as temperature, mode, fan speed, and other indicators.
- **Power Button:** Turns the air conditioner On or Off.
- **Mode Button:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **Temperature Adjustment Buttons (Up/Down Arrows):** Increases or decreases the set temperature.
- **Fan Speed Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Swing Button:** Controls the louver swing function.
- **Turbo Button:** Activates rapid cooling or heating.
- **LED Button:** Controls the display light on the air conditioner unit.
- **Clean Button:** Initiates the self-clean function (if supported by the AC unit).
- **SET Button:** Used for confirming settings or entering specific menus.
- **OK Button:** Confirms selections.
- **Timer Button (Clock Icon):** Sets or cancels the timer function.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important: Ensure batteries are inserted correctly. Incorrect polarity can damage the remote control. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

This remote control is pre-programmed for compatible Midea air conditioners and requires no additional setup. Simply point the remote at the air conditioner's receiver and press the desired button.

Basic Functions

- **Power On/Off:** Press the **Power** button (red circle with line) to turn the air conditioner on or off.
- **Changing Mode:** Press the **Mode** button repeatedly to cycle through available operating modes (e.g., Auto, Cool, Dry, Fan, Heat). The current mode will be displayed on the remote's LCD.
- **Adjusting Temperature:** Use the **Up** (^) and **Down** (v) arrow buttons to increase or decrease the desired temperature. The set temperature will be shown on the display.
- **Adjusting Fan Speed:** Press the **Fan Speed** button (fan icon) to cycle through different fan speeds (e.g., Auto, Low, Medium, High).

Advanced Functions

- **Swing Function:** Press the **Swing** button to activate or adjust the vertical louver swing.
- **Turbo Mode:** Press the **Turbo** button for rapid cooling or heating. This mode typically operates at maximum fan speed and a preset temperature for quick climate control.
- **LED Display Control:** Press the **LED** button to turn the air conditioner's display light on or off.
- **Clean Function:** If your air conditioner supports it, press the **Clean** button to initiate a self-cleaning cycle for the indoor unit. Refer to your air conditioner's manual for details on this function.
- **Timer Setting:** Press the **Timer** button (clock icon) to set the auto-on or auto-off timer. Use the temperature adjustment arrows to set the time, and then press **OK** or **SET** to confirm.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's display becomes dim or its response time slows. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and corrosion. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not responding.	Batteries are dead or inserted incorrectly.	Replace batteries with new ones, ensuring correct polarity.
	Remote is too far from the AC unit or obstructed.	Move closer to the AC unit and ensure a clear line of sight.
	Infrared sensor on AC unit is blocked.	Check and clear any obstructions in front of the AC unit's sensor.
Display is dim or blank.	Low battery power.	Replace batteries.
AC unit does not respond to specific buttons.	Function not supported by your specific AC model.	Refer to your Midea air conditioner's original manual to confirm supported functions.
	Remote control malfunction.	If other functions work, the button might be faulty. Contact customer support.

If the problem persists after trying these solutions, please contact customer support for further assistance.

SPECIFICATIONS

- **Model Number:** YK-RG10A(F2S)/BGEF
- **Compatible Models:** RG10A(F2S)/BGEF (Midea Air Conditioners)
- **Brand:** Effireli
- **Connectivity Technology:** Infrared
- **Max Number of Supported Devices:** 1

- **Special Feature:** No Programming Required
- **Item Weight:** 2.82 ounces
- **Package Dimensions:** 7.68 x 1.97 x 0.59 inches
- **ASIN:** B0FBWJHC45
- **Date First Available:** June 4, 2025

WARRANTY AND SUPPORT

Your Effireli RG10A(F2S)/BGEF Replacement Remote Control comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered.

Returns and exchanges are accepted within the warranty period for manufacturing defects. For any issues, questions, or warranty claims, please contact the seller or manufacturer directly. Please have your purchase details and model number ready when contacting support.

For further assistance, you may refer to the contact information provided by your retailer or on the product packaging.

© 2025 Effireli. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FBWJHC45>

More documents and user manuals: <https://manuals.plus/>