

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli Replacement Remote Control for LG Air Conditioners Instruction Manual

## Effireli YK-K-LG1188

# Effireli Replacement Remote Control for LG Air Conditioners

Model: YK-K-LG1188

### INTRODUCTION

This manual provides instructions for the Effireli replacement remote control, designed for use with various LG air conditioner models. This remote control offers a direct replacement solution without the need for complex programming.

### PRODUCT OVERVIEW



**Image:** Effireli Replacement Remote Control. This image displays the front view of the remote control, showing its buttons and display area.

The Effireli replacement remote control is an infrared device designed to operate LG air conditioning units. It features a standard layout for common functions such as power, mode selection, temperature adjustment, and fan speed control.

## COMPATIBILITY

This remote control is compatible with a wide range of LG air conditioner models. Please verify your air conditioner's model number against the list below to ensure compatibility. If your model is not listed, please contact customer support for assistance.

**Compatible Remote Control Models:** AKB73215509, AKB73315601, AKB73456109, AKB64365404, AKB73315602, AKB74235401, AKB73456122, AKB73315611, AKB738555615655, 5716, AKB74395301, AKB74395309, AKB73975615.

**Compatible LG Air Conditioner Models:** H09AWM-NM17 S4NW09M2MPA, H12AWM-NM17 S4NW12M2MPA, H18AWM-N217 S4NW182PMPA, MS07AH2 AMNW07GSJB0, MS07AH3 AMNW07GSJC0, MS09AH2 AMNW09GSJB0, MS09AH3 AMNW09GSJC0, MS12AH2 AMNW12GSJB0, MS12AH3 AMNW12GSJC0, MS18AH2 AMNW18GSKB0, MS18AH3 AMNW18GSKC0, MS24AH2 AMNW24GSKB0, MS24AH3 AMNW24GSKC0, NHXM20S2A2 AMNW07GSJR0, NHXM30S2A2 AMNW09GSJR0, NHXM40S2A2 AMNW12GSJR0, NHXM50S2A2 AMNW18GSKR0, NHXM70S2A2

AMNW24GSKR0, P18AWN-N214 ASNW1862WR1, P24AWN-N214 ASNW2462WR1, P28AWN-N214 ASNW2862WR1, S18AWN-N214 ASNW1862EB1, S24AWN-N214 ASNW2462EB1, S28AWN-N214 ASNW2862EB1, T09AWN-NM17 S4NW09ML3PA, T12AWN-NM17 S4NW12ML3PA, WH09SKN-18 S3NW09KL3ZA, WH12SKN-18 S3NW12KL3ZA, WH18SLN-18 S3NW18LP3ZA, WH18SLN-19 S3NW18L23ZA, WH21SLN-18 S3NW21LP3ZA, WH24SLN-18 S3NW24L43ZA, WH24SLN-18 S3NW24LP3ZA, WH30SRN-18 S3NW30R43ZA, WH34SRN-18 S3NW34R43ZA, WS09TWN S3NW09JL33A, WS12TWN S3NW12JL33A, WS18TWN S3NW18KL33A, WS24TWN S3NW24K233A, Z24AWN-N215 ZSNW2462WR5, LSR122H-3, LSR122T-2, LSR122V-4.

## SETUP

- Battery Installation:** Open the battery compartment cover on the back of the remote control. Insert two new AAA batteries (not included), ensuring the correct polarity (+/-) as indicated inside the compartment. Close the battery cover securely.
- No Programming Required:** This remote control is pre-programmed and does not require any setup or pairing with your LG air conditioner. Once batteries are installed, it is ready for immediate use.

## OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your LG air conditioner unit. Ensure there are no obstructions between the remote and the unit.

- **Power Button:** Press to turn the air conditioner ON or OFF.
- **Mode Button:** Cycle through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **Temperature Adjustment:** Use the **Up** and **Down** arrow buttons to increase or decrease the desired temperature.
- **Fan Speed:** Adjust the fan speed (e.g., Low, Medium, High, Auto).
- **Swing/Vane:** Control the direction of the airflow.
- **Timer:** Set the timer for automatic ON/OFF operations (functionality may vary based on AC unit).

## MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote control's range decreases or it stops responding. Always replace both batteries simultaneously with new ones of the same type.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

| Problem                 | Possible Cause                           | Solution                                                                   |
|-------------------------|------------------------------------------|----------------------------------------------------------------------------|
| Remote not responding.  | Dead or incorrectly installed batteries. | Replace batteries with new ones, ensuring correct polarity.                |
| Remote has short range. | Weak batteries or obstruction.           | Replace batteries. Ensure a clear line of sight to the AC unit's receiver. |

| Problem                               | Possible Cause                    | Solution                                                                                          |
|---------------------------------------|-----------------------------------|---------------------------------------------------------------------------------------------------|
| AC unit does not respond to commands. | Incompatibility or AC unit issue. | Verify AC unit model compatibility. Check if the AC unit is powered on and functioning correctly. |

### SPECIFICATIONS

- **Brand:** Effireli
- **Model Number:** YK-K-LG1188
- **Connectivity Technology:** Infrared
- **Supported Devices:** 1 (LG Air Conditioner)
- **Special Feature:** No Programming Required
- **Power Source:** 2 x AAA Batteries (not included)

### WARRANTY AND SUPPORT

This product comes with a **12-month warranty** for manufacturing defects. A **30-day money-back guarantee** is also provided. Returns and exchanges are accepted within the warranty period. For questions regarding compatibility, troubleshooting, or warranty claims, please contact our customer support. If your specific LG air conditioner model is not listed in the compatibility section, or if your original remote control looks significantly different, please reach out to us directly to confirm suitability before purchase.