

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE Slushie Machine User Manual](#)

FOHERE B0FBWLDSWN

FOHERE Slushie Machine User Manual

Model: B0FBWLDSWN

PRODUCT OVERVIEW

The FOHERE Slushie Machine is designed to create a variety of frozen beverages with ease. Its innovative technology ensures smooth, consistent results without the need for ice, making it a convenient addition to any home or gathering.

Key Features:

- Rapid Chill Technology for uniform freezing and no icy clumps.
- Quick preparation, with frozen treats ready in as little as 15 minutes.
- Five pre-programmed settings for various drink types: Slush, Spiked Slush, Chilled Juice, Milkshake, and Frappe.
- "Custom" function for personalized frozen creations.
- Maintains freshness for up to 12 hours.
- Hassle-free serving with a direct-dispense lever.
- Self-cleaning function and dishwasher-safe components for easy maintenance.
- Child-lock system for safe operation.



Image: The FOHERE Slushie Machine, showcasing its sleek design and the variety of frozen drinks it can produce.

WHAT'S IN THE BOX

Upon unboxing, please ensure all components are present:

- Handle
- Auger
- Easy-Fill Vessel
- Quiet Compressor (integrated)
- Machine Base with 5 Presets control panel
- Drip Tray
- Recipe Book

SETUP AND ASSEMBLY

Follow these steps to set up your FOHERE Slushie Machine:

1. **Unpacking:** Carefully remove all packaging materials. Place the machine on a stable, flat surface.
2. **Initial Placement:** Allow the machine to sit upright for at least 2 hours before plugging it in. This allows the compressor fluids to settle.
3. **Assemble Vessel:** Ensure the easy-fill vessel is correctly seated on the machine base. The auger should be properly installed within the vessel.
4. **Install Drip Tray:** Place the drip tray at the front base of the machine.
5. **First Clean:** Before first use, clean all removable parts (vessel, auger, handle, drip tray) with warm soapy water. Wipe down the main unit with a damp cloth.

Easy-fill vessel

Easy to fill up, top off, and remove for cleaning.



Image: Demonstrates the easy-fill vessel, designed for convenient pouring and cleaning.



Easy to Assemble

It Can Be Easily Installed Or Removed By Simply Rotating

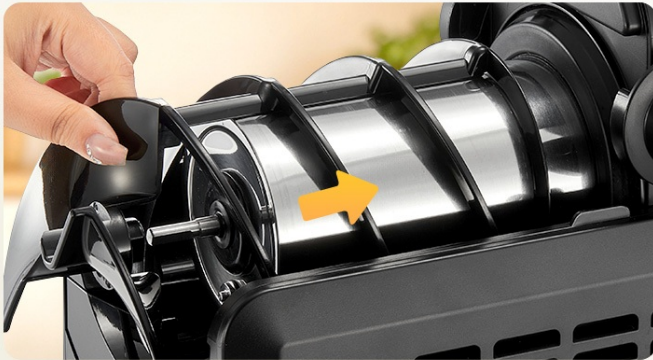


Image: Visual guide for easy assembly of the auger and vessel by rotating components into place.

OPERATING INSTRUCTIONS

Creating delicious frozen drinks is simple with your FOHERE Slushie Machine:

Preparation:

- Ensure your liquid mixture has a sugar content of at least 5% to prevent freezing issues. For sugar-free options, use allulose.
- For alcoholic beverages, maintain an alcohol content between 2.8% and 16%. If the alcohol content is higher than 16%, mix it with another liquid like soda or juice.
- Always pre-mix ingredients thoroughly before pouring into the vessel.
- Chilling your juice or drink mix beforehand can speed up the freezing process.

Making a Slushie:

1. **Fill Vessel:** Open the sliding top cover and pour your pre-mixed ingredients into the easy-fill vessel. Do not exceed the MAX fill line. The vessel has a 48oz liquid capacity within its 68oz total volume.
2. **Select Program:** Use the control panel to select one of the 5 preset modes:
 - **Slush:** For classic lemonade, soda, or fresh juice slushies.
 - **Spiked Slush:** For cocktails like frozen margaritas or daiquiris.
 - **Chilled Juice:** For a rich, tasty chilled juice treat.
 - **Milkshake:** For creamy milkshakes from chocolate milk or eggnog.
 - **Frappe:** For delicious, flavor-filled frappes from lattes or coffees.

You can also use the "Custom" function for unique creations.

3. **Start Operation:** Press the Power/Start button. The machine will begin the freezing process. Freezing times vary from 15 to 60 minutes depending on ingredients and starting temperature.
4. **Child Lock:** During operation, the child lock automatically activates, preventing accidental button presses. To regain control, hold the lock button for 5 seconds.
5. **Dispense:** Once the drink is ready (the machine will signal), use the self-serve handle with the pour spout to dispense directly into your cup.

One - touch frozen drinks

5 preset settings : Smoothies, Red wine smoothies, Milkshake smoothies, Coffee smoothies, Cocktail smoothies.



Image: The control panel with one-touch buttons for various frozen drink settings.



Self-serve **handle** **with pour spout**

Convenient, ergonomically designed
comfort handle with a no - drip,
no - mess pour spout.



Image: The self-serve handle and pour spout for convenient, mess-free dispensing.

Drink Name	INGREDIENTS 2-3 Servings	INGREDIENTS 4-6 Servings	Total Time 2-3 Servings	Total Time 4-6 Servings
 Caramel Frappuccino	1 cup coffee 1 cup whole milk 2 tbsp caramel sauce	2 cups coffee 2 cups whole milk 4 tbsp caramel sauce	15 - 25 min	25 - 35 min
 Strawberry Slushie	2½ cups strawberry juice ½ cup sweet lemon juice	5 cups strawberry juice 1 cup sweet lemon juice	15 - 25 min	25 - 35min
 Cold Cocoa Milkshake	⅓ cup cocoa powder 1 cup whole milk 2 scoops ice cream	⅓ cup cocoa powder 2 cups whole milk 5 scoops ice cream	20 - 30min	30 - 40min
 Frozen Margarita	½ cup tequila ¼ cup orange liqueur 2½ cups lime juice 1 tbsp honey or syrup	1 cup tequila ½ cup orange liqueur 4 ½ cups lime juice 2 tbsp honey or syrup	35 - 45 min	40 - 50min

Image: A recipe table providing ingredient quantities and estimated preparation times for various frozen drinks.





Video: An official demonstration of crafting refreshing slushies with the FOHERE machine.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your machine:

- **Self-Cleaning Function:** The machine features a self-cleaning mode for convenience. Refer to the recipe book for specific instructions on activating this mode.
- **Dishwasher-Safe Components:** The easy-fill vessel, auger, handle, and drip tray are dishwasher-safe for effortless cleaning.
- **Manual Cleaning:** For the main unit and the chilling cylinder (which remains attached), wipe down with a damp, soapy cloth. Ensure no water enters the electrical components.
- **Drip Tray:** Empty and clean the drip tray regularly to prevent spills and maintain hygiene.

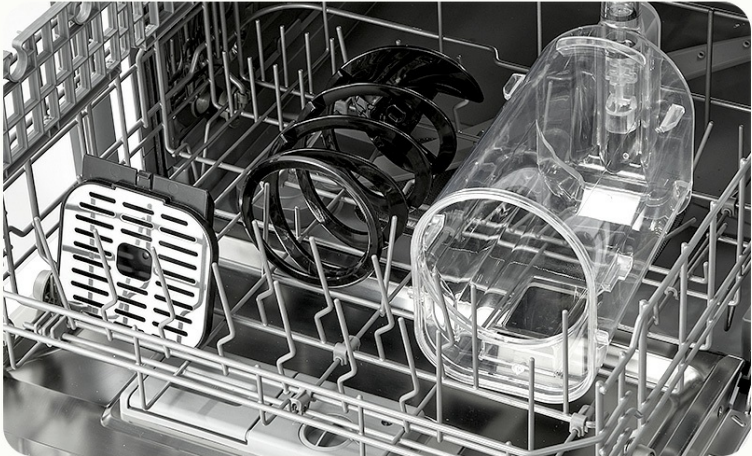



Easy To Clean

Dshwasher Safe, or
CLEAN Mode for Quick Cleaning

Image: Dishwasher-safe components of the slushie machine, highlighting ease of cleaning.

TROUBLESHOOTING

If you encounter issues with your FOHERE Slushie Machine, please refer to the following common solutions:

Problem	Possible Cause	Solution
Machine displays "E4" error or stops freezing.	Low sugar content in the mixture.	Ensure your mixture has a minimum of 5% sugar content. Sugar-free substitutes or artificial sweeteners may not meet the requirements. Add 1-2 spoons of sugar, date paste, honey, or coconut sugar, pre-dissolved, to the mixture.
Slushie texture is too icy or not smooth.	Incorrect sugar/alcohol content or insufficient freezing time.	Verify sugar content is at least 5%. For alcoholic drinks, ensure alcohol content is between 2.8% and 16%. Allow adequate freezing time (15-60 minutes). Set thickness to level 5 for optimal distribution.
Machine does not turn on.	Not plugged in, power outage, or child lock engaged.	Check power connection. Ensure the outlet is functional. If child lock is engaged, hold the lock button for 5 seconds to disengage.

Mind Alcohol content

Alcohol content: Should be between 2.8% and 16%.

PS: If you want to make a smoothie with an alcohol content higher than 16%, you will need to mix in another liquid like cola, soda, or juice.

SUGAR PERCENTAGE

TO MAKE SLUSHIE
sugar shall be above this limit

DIET SODA

LOW LIMIT 8%

FRUIT JUICE

SOFT DRINKS

FRAPPE

SODA

ALCOHOL PERCENTAGE

LOW LIMIT 2.8%

Light Beer

Hard Seltzer

IPA

Wine

Margarita

HIGH LIMIT 16%

Martini

TO MAKE SLUSHIE
alcohol shall be below this limit

Mind Sugar content

Minimum sugar content: 8%
Low sugar content will disrupt the normal freezing of slushies. The smoothie machine will stop and the screen will display E4.

Note: Sugar-free substitutes or artificial sweeteners can't meet the sugar requirements.

How to add sugar?
Add 1-2 spoons of syrup, date paste, honey or coconut sugar, etc. Mix it with the base before pouring into the container.

Image: Important guidelines for sugar and alcohol content to ensure proper slushie consistency and machine operation.

SPECIFICATIONS

Attribute	Detail
Brand	FOHERE
Model	B0FBWLDSWN
Product Dimensions	17.72"D x 6.69"W x 15.75"H
Weight	23 Pounds
Vessel Capacity	68 oz (48 oz liquid capacity)
Wattage	200 watts
Voltage	110 Volts (DC)
Certifications	cETL certified

68^{oz}
VESSEL
6 SERVINGS
PER BATCH

L : 6.52 in

RINSE CYCLE

Easy to clean with
dishwasher-safe
parts

H : 16.28 in

W : 15.74 in

WEIGHT OF UNIT : 23.02 lbs

FOHERE

48-OZ.
LIQUID CAPACITY

 OR 
1.5L SODA 3.5 CANS

**FITS AN
AVERAGE 7.5"
MARGARITA GLASS**



Image: Detailed dimensions and capacity information for the FOHERE Slushie Machine.

WARRANTY AND SUPPORT

Your FOHERE Slushie Machine comes with a 2-year warranty, ensuring peace of mind regarding product quality and

performance.

For technical support, warranty claims, or any inquiries, please contact the manufacturer, FOHERE, or the seller, FOCUSDirect, through their official channels. Refer to your purchase documentation for specific contact information.

For additional resources and product information, you may visit the [FOHERE Store on Amazon](#).