

Keenstone TA7703-UL

Keenstone 2-Slice Digital Smart Toaster User Manual

Model: TA7703-UL

INTRODUCTION

Thank you for choosing the Keenstone 2-Slice Digital Smart Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.

SAFETY INSTRUCTIONS

- Always unplug the toaster from the power outlet when not in use and before cleaning.
- Do not immerse the toaster, cord, or plug in water or any other liquid.
- Do not operate the toaster with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure the toaster is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not touch hot surfaces. Use handles or knobs.
- Do not insert oversized foods, metal foil packages, or utensils into the toaster as this may create a fire or electric shock hazard.
- Never leave the toaster unattended while in use.
- Regularly clean the crumb tray to prevent fire hazards.
- This appliance is for household use only.

PRODUCT FEATURES

The Keenstone Digital Smart Toaster is designed for convenience and precision, offering a range of features to enhance your toasting experience:

- **TiltControl Touch Screen Interface:** Features a 75° ErgoView Display with large icons for easy operation without bending.
- **Preset Toaster with BreadID Tech:** Includes 6 presets (Bagel, Gluten-Free, Waffle, Bread, Pastry, English Muffin) that synchronize with defrost and reheat modes. Smart sensors automatically adjust time and temperature.

- **Smart Single-Slice Mode:** Redirects heat to the occupied slot for even toasting of single slices, reducing energy consumption by 40% compared to conventional methods.
- **Precision Control:** Independent control panels allow for different browning levels and bread types simultaneously in each slot.
- **Easy to Clean and Maintain:** Constructed from non-stick, food-grade stainless steel with a removable crumb tray and hidden cord storage for simple cleaning and organization.



Image: The toaster's 75-degree ergonomic touchscreen display, showing ease of use.



Image: Internal view of the toaster highlighting smart sense technology for even heating and perfect toast.

SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Keep packaging for storage or return if necessary.
2. **Placement:** Place the toaster on a dry, flat, stable, and heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) around the toaster for proper ventilation. Do not place it near curtains or other flammable materials.
3. **Initial Cleaning:** Wipe the exterior of the toaster with a damp cloth. Remove the crumb tray and clean it. Ensure all parts are dry before use.
4. **First Use:** Before toasting food, operate the toaster without bread on the highest browning setting (Level 6) for a few

minutes. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.

5. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

General Toasting

1. **Insert Bread:** Place up to two slices of bread or other items into the toaster slots. The slots are 1.5 inches wide to accommodate various bread types.
2. **Select Bread Type:** On the touchscreen, press the icon corresponding to your bread type (e.g., Bread, Bagel, Waffle, Gluten-Free, Pastry, English Muffin).
3. **Adjust Browning Level:** Select your desired browning level from 1 (lightest) to 6 (darkest) using the numerical icons on the touchscreen.
4. **Lower Lever:** Press the lever on the side of the toaster downwards until it locks into place. The toasting cycle will begin, and the countdown timer will display on the screen.
5. **Completion:** Once the toasting cycle is complete, the bread will automatically pop up.



Image: The toaster's touchscreen displaying various function icons like Defrost, Reheat, Memory, and Single-Slice.



Image: The toaster in operation, illustrating its 800W power and different browning levels with corresponding times.

Special Functions

- **Defrost:** For frozen items, select the bread type and browning level, then press the "Defrost" icon. The toaster will automatically adjust the toasting time to thaw and toast.
- **Reheat:** To warm up previously toasted items without further browning, select the bread type and press the "Reheat" icon.
- **Single-Slice Mode:** When toasting only one slice, place it in either slot, select your settings, and press the "Single Slice" icon. This mode optimizes heat distribution for even toasting and saves energy.
- **Memory Function:** To save your preferred toasting settings (bread type and browning level), long-press the "Memory" icon for 3 seconds after setting your preferences. To recall, simply press the "Memory" icon once.
- **Cancel Function:** To stop the toasting cycle at any time, press the "Cancel" icon. The bread will immediately pop up. A 3-second long press on the cancel button will shut down the toaster.

3S TO CLEAN

Removable tray & food-grade stainless steel



Image: The toaster in single-slice mode, showing how heat is concentrated for one piece of bread.



Image: A user interacting with the toaster's memory function to save custom settings.

Dual Control Panel

The toaster features independent control panels for each slot, allowing you to toast different items or achieve different browning levels simultaneously. Simply set the desired bread type and browning level for each slot independently.

Your browser does not support the video tag.

Video: Demonstration of the Keenstone 2-Slice Toaster with Touch Screen Control and Memory Function, highlighting its dual control capabilities.

Your browser does not support the video tag.

Video: Overview of the Keenstone 2-Slice Toaster with Smart Touch and Custom Memory features.

MAINTENANCE

Cleaning the Crumb Tray

1. **Unplug:** Always ensure the toaster is unplugged and completely cool before cleaning.
2. **Remove Tray:** Pull out the removable crumb tray located at the bottom of the toaster.
3. **Empty Crumbs:** Discard accumulated crumbs.
4. **Clean Tray:** Wipe the crumb tray with a damp cloth or wash it with warm, soapy water. Rinse thoroughly and dry completely before reinserting.
5. **Reinsert Tray:** Slide the dry crumb tray back into its position until it locks.

5 TYPES OF BREAD


Everyone gets their toast just how they like it.



Bagel



Waffle

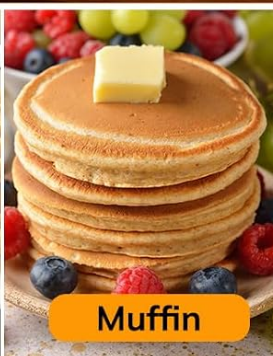

Muffin



Bread



Pastry

Image: The toaster with its removable crumb tray pulled out for cleaning.

Cleaning the Exterior

- Wipe the exterior surfaces of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- Ensure no water or cleaning solution enters the toaster slots.
- Dry thoroughly with a soft, dry cloth.

Storage

- Ensure the toaster is cool and clean before storing.
- Utilize the hidden cord storage on the bottom of the toaster to keep the power cord neatly tucked away.
- Store the toaster in a dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your home's circuit breaker.
Bread is not toasting evenly.	Inconsistent bread thickness; elements may be aging (less common for new units).	Ensure bread slices are of uniform thickness. Try rotating the bread halfway through the cycle. If using single-slice mode, ensure it is activated.
Bread is stuck in the toaster.	Oversized bread; mechanical issue.	Unplug the toaster immediately. Carefully remove the bread using non-metallic tongs. Do not force the lever.
Smoke or burning smell.	Crumbs in the tray; food residue on heating elements; browning level too high.	Unplug the toaster. Clean the crumb tray. If residue is on elements, allow to cool and gently brush off (unplugged). Reduce browning level.
Touchscreen unresponsive.	Temporary software glitch; power cycle needed.	Unplug the toaster for 30 seconds, then plug it back in. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Keenstone
Model Number	TA7703-UL
Power	1400 Watts
Voltage	120V AC
Product Dimensions (D x W x H)	14.7" x 6.2" x 7.2"
Item Weight	1.1 pounds
Slot Count	2 (for 2 slices)
Slot Width	1.5 inches
Material	Stainless Steel
Browning Levels	6
Preset Programs	6 (Bagel, Gluten-Free, Waffle, Bread, Pastry, English Muffin)
Special Features	Removable Crumb Tray, Touch Screen, Memory Function, Single-Slice Mode, Defrost, Reheat

WARRANTY AND SUPPORT

Keenstone products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Keenstone website. Keep your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Keenstone Customer Service. Contact details can typically be found on the product packaging or the official Keenstone website.
Website: [Keenstone Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question