

[Manuals.plus](#) /

› [Prestige](#) /

› Prestige Kitchen Hood Edge 900 Instruction Manual

Prestige Edge 900

Prestige Kitchen Hood Edge 900 Instruction Manual

Model: 42322

1. INTRODUCTION

Thank you for choosing the Prestige Kitchen Hood Edge 900. This advanced kitchen chimney is designed to provide a smoke-free cooking environment with its powerful suction, filterless design, and innovative motion sensor controls. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read it thoroughly before use and retain it for future reference.

Prestige
CHIMNEY

MODEL
EDGE 900mm

**EXPERIENCE PEACE OF MIND
WITH A SMOKE-FREE KITCHEN!**

FREE
INSTALLATION
& KIT WORTH
₹ 2 249.00

Powerful
1200m³ /HR Suction

**Heat Auto-clean For
Easy Maintenance**

Image 1.1: The Prestige Kitchen Hood Edge 900 in a kitchen setting, demonstrating its smoke extraction capability.

2. SAFETY INSTRUCTIONS

Always adhere to basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is for domestic use only.

- Ensure the power supply voltage matches the rating indicated on the appliance.
- Do not allow children to operate or play with the appliance.
- Disconnect the power supply before cleaning or performing any maintenance.
- Do not operate the chimney if the power cord or plug is damaged.
- Ensure proper ventilation in the room when the chimney is in use, especially if other fuel-burning appliances are present.
- Avoid direct flame under the chimney.
- The chimney must be installed by a qualified technician.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Prestige Kitchen Hood Edge 900 Unit
- Instruction Manual
- Mounting Hardware (screws, wall plugs, etc. - may vary)
- Ducting Pipe (if included with model)

4. SETUP AND INSTALLATION

The Prestige Kitchen Hood Edge 900 is a wall-mounted canopy hood. Professional installation is recommended.

4.1 Choosing an Installation Location

Select a location directly above your cooking range. Ensure there is adequate clearance from the cooking surface as per local regulations and the chimney's specifications. The product dimensions are 95D x 58W x 49H Centimeters.

4.2 Mounting the Unit

1. Mark the drilling points on the wall according to the mounting template (if provided) or the unit's mounting brackets.
2. Drill holes and insert wall plugs.
3. Secure the mounting bracket to the wall.
4. Carefully lift and attach the chimney unit to the mounting bracket.
5. Connect the ducting pipe to the chimney outlet and route it to the exterior vent. Ensure the ducting is sealed properly to prevent air leakage.



FEATURES

- 1200 m³/h Suction Power
- Motion Sensor For Convenient Operation
- Thermal Auto Clean



Customer Care

☎ 080-46824000

✉ Customercare@ttkprestige.com



Image 4.1: Dimensional drawing of the Prestige Kitchen Hood Edge 900, indicating key measurements for installation.

4.3 Electrical Connection

Connect the chimney to a grounded electrical outlet. The appliance operates on 230 Volts. Ensure the connection is secure and meets all local electrical codes.

5. OPERATING INSTRUCTIONS

The Prestige Kitchen Hood Edge 900 features a digital display, touch controls, and a revolutionary motion sensor for convenient operation.

5.1 Motion Sensor Control

The motion sensor allows for hands-free operation:

- **To Turn On:** Wave your hand from left to right in front of the sensor.
- **To Adjust Speed:** Continue waving your hand from right to left or left to right to cycle through the 3 speed settings.
- **To Turn Off:** Wave your hand from right to left in front of the sensor.



Image 5.1: Illustration of the advanced gesture control feature for turning the chimney on/off and adjusting speed.

5.2 Touch Control Panel

In addition to motion control, the chimney can be operated via its digital touch control panel. Use the dedicated buttons for power, speed adjustment, and light control.

5.3 LED Lighting

The integrated LED lights provide illumination for your cooking area. These can be controlled via the touch panel.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Prestige Kitchen Hood.

6.1 Heat Auto-Clean Function

The chimney features a thermal auto-clean function to remove sticky oil particles from the internal components. To activate:

1. Ensure the chimney is off and cool.

2. Press the 'Auto Clean' button on the touch control panel.
3. The chimney will initiate a heating cycle to melt and collect oil into the oil collector tray.
4. Once the cycle is complete, carefully remove and clean the oil collector tray.

6.2 Filterless Design

This chimney features a filterless design, which eliminates the need for traditional filter cleaning. The auto-clean function handles internal grease accumulation. However, regular cleaning of the oil collector tray is essential.

6.3 Exterior Cleaning

Clean the exterior surfaces of the chimney regularly with a soft cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals that could damage the finish.



Image 6.1: Overview of the chimney's features, including its filterless design and auto-clean capability.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Chimney does not turn on.	No power supply; loose connection; faulty switch.	Check power plug and circuit breaker. Ensure connections are secure.
Low suction power.	Ducting obstruction; improper installation; oil collector full.	Check ducting for blockages. Ensure proper installation height. Clean oil collector.
Unusual noise during operation.	Loose components; motor issue; ducting vibration.	Check for loose screws. Ensure ducting is securely fastened. Contact service if motor noise persists.
Motion sensor not responding.	Sensor obstructed; incorrect gesture; sensor malfunction.	Ensure sensor area is clean and unobstructed. Practice gestures. If issue persists, use touch controls or contact support.

8. SPECIFICATIONS

Brand	Prestige
Model Number	42322
Product Dimensions (D x W x H)	95D x 58W x 49H Centimeters
Item Weight	24.05 Kilograms
Colour	Black
Air Flow Capacity	1200 Cubic Meters Per Hour
Noise Level	64.5 Decibels
Wattage	180 Watts
Voltage	230 Volts
Filter Type	Filterless
Controls Type	Motion Sensor, Touch Control
Number Of Speeds	3
Light Source	LED
Mounting Type	Wall Mount
Material Type	Glass

9. WARRANTY INFORMATION

The Prestige Kitchen Hood Edge 900 comes with a **Life Time Warranty**. Please retain your purchase receipt for warranty claims. For specific terms and conditions, refer to the warranty card included with your product or contact customer support.

10. CUSTOMER SUPPORT

For any queries, assistance, or service requests, please contact Prestige customer care:

Customer Care Number: 080-46824000

Email: Customercare@ttkprestige.com

Manufacturer: TTK PRESTIGE LIMITED, REGISTERED OFFICE PLOT NO. 38, SIPCOT INDUSTRIAL COMPLEX, HOSUR-635126, TAMILNADU, INDIA.



Image 10.1: Customer support contact details and a summary of key features.