

## OffiGo B0FBX5CD6N

# OffiGo Electric Mobile TV Stand with Wheels - 66 cm Adjustable Height

Model: B0FBX5CD6N

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembly and use. Failure to follow these instructions may result in serious personal injury or property damage.

- **Weight Capacity:** Do not exceed the maximum weight capacity specified for your TV and the stand. Refer to the product packaging for specific weight limits.
- **Stability:** Ensure the stand is placed on a flat, stable surface. Lock the wheels when the stand is in a stationary position to prevent accidental movement.
- **Assembly:** Assemble the stand according to the instructions provided. Use all supplied hardware. If any parts are missing or damaged, contact customer support immediately.
- **Electrical Safety:** This product features an electric height adjustment mechanism. Ensure the power cord is not pinched or damaged. Do not operate with a damaged cord or plug. Keep liquids away from electrical components.
- **Children:** Keep children away from the stand during assembly and operation. Do not allow children to play with the stand or its electrical components.
- **Movement:** When moving the stand, ensure the TV is securely mounted and the path is clear of obstacles. Move slowly and carefully.

## PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact OffiGo customer support.

- Base with Wheels (x1)
- Vertical Support Column (x1)
- TV Mounting Bracket (x1)
- Electric Motor and Control Unit (pre-installed or separate)
- Remote Control (x1)
- Power Adapter and Cable (x1)
- Hardware Kit (screws, washers, spacers for assembly and TV mounting)
- Instruction Manual (this document)

## Setup and Assembly

Follow these steps to assemble your OffiGo Electric Mobile TV Stand. It is recommended to have two people for assembly, especially when mounting the TV.

- 1. Attach Wheels to Base:** Securely attach the wheels to the base unit using the provided screws and tools. Ensure all wheels are firmly tightened. Lock the wheels once attached.
- 2. Assemble Vertical Column:** Connect the vertical support column to the base. Follow the specific instructions in your hardware kit for aligning and securing the column.
- 3. Install TV Mounting Bracket:** Attach the TV mounting bracket to the top of the vertical column. Ensure it is oriented correctly and all fasteners are tightened.
- 4. Prepare TV for Mounting:** Attach the VESA adapter plates (if necessary) to the back of your television using the appropriate screws and spacers from the hardware kit. Ensure the screws are not too long, which could damage internal components.
- 5. Mount TV to Stand:** With assistance, carefully lift your television and hook it onto the TV mounting bracket. Secure the TV to the bracket using the safety screws or locking mechanisms provided. Double-check that the TV is stable and level.
- 6. Connect Power:** Plug the power adapter into the stand's control unit, then plug the power cable into a grounded electrical outlet.



Image: The OffiGo Electric Mobile TV Stand, showcasing its design, adjustable height, and mobile base. This GIF illustrates the product's overall appearance and functionality.

## Operating Instructions

This section details how to use the features of your OffiGo Electric Mobile TV Stand.

- Power On/Off:** Ensure the stand is plugged into a power outlet. The control unit may have an indicator light.
- Adjusting Height:** Use the provided remote control to adjust the TV height. Press the "Up" button to raise the TV and the "Down" button to lower it. The electric motor will smoothly move the TV to your desired position within its 66 cm adjustable range. Release the button to stop movement.
- Moving the Stand:** Unlock the wheels on the base. Carefully push or pull the stand to its desired location. Once positioned, lock the wheels to ensure stability.
- Rotating the TV:** The TV mounting bracket allows for rotational movement. Gently rotate the TV screen to achieve the optimal viewing angle. Avoid excessive force.

## Maintenance

Regular maintenance ensures the longevity and safe operation of your TV stand.

- Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying. Avoid abrasive cleaners or solvents.
- Check Connections:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- Cable Management:** Ensure all cables are neatly managed and not interfering with the stand's movement or wheels.
- Electrical Components:** Inspect the power cord and adapter for any signs of damage. If damage is found, discontinue use and contact customer support.

## Troubleshooting

If you encounter issues with your TV stand, refer to the following common problems and solutions.

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                        | Possible Cause                                           | Solution                                                                                                                                                   |
|--------------------------------|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TV stand does not power on.    | No power supply; loose connection; faulty power adapter. | Check if the power cable is securely plugged into the wall outlet and the stand. Ensure the outlet is functional. Try a different outlet.                  |
| Height adjustment not working. | Power issue; motor obstruction; remote control battery.  | Verify power supply. Check for any obstructions preventing motor movement. Replace remote control batteries.                                               |
| Stand is unstable or wobbles.  | Wheels unlocked; uneven surface; loose assembly screws.  | Ensure all wheels are locked. Move the stand to a flat, level surface. Re-tighten all assembly screws, especially those connecting the column to the base. |
| Wheels are difficult to move.  | Wheels locked; debris in wheels; damaged wheels.         | Unlock the wheels. Clear any debris from the wheel casters. If wheels are damaged, contact customer support for replacements.                              |

## SPECIFICATIONS

- Brand:** OffiGo
- Model:** B0FBX5CD6N
- Material:** Alloy Steel
- Compatible TV Sizes:** 32 inches and up
- Height Adjustment Range:** Approximately 66 cm (electric)
- Mount Type:** Floor Mount
- Movement Type:** Rotational, Electric Height Adjustment, Mobile (with wheels)
- Product Weight:** 19.3 Kilograms
- UPC:** 850073546901
- Maximum Weight Capacity:** Refer to product packaging for specific weight limits.

## WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please contact OffiGo customer service. Details can typically be found on the product packaging or the official OffiGo website.

Please have your model number (B0FBX5CD6N) and purchase date ready when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question