

## Rowenta QV5040

# Rowenta Turbo Swift Silence Pedestal Fan QV5040

## User Manual

### 1. INTRODUCTION

---

Thank you for choosing the Rowenta Turbo Swift Silence Pedestal Fan QV5040. This fan is engineered to provide intense cooling with exceptional quietness, featuring a versatile 3-in-1 design that adapts to your needs. Its multidirectional oscillation ensures optimal air circulation throughout your space. Please read this manual carefully before use to ensure proper operation and maintenance.

### 2. SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using this appliance.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan before moving, cleaning, or performing maintenance.
- Do not immerse the fan in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Do not insert fingers or foreign objects into the grille while the fan is operating.
- This appliance is intended for indoor use only.

### 3. PRODUCT COMPONENTS

---

The Rowenta Turbo Swift Silence Pedestal Fan QV5040 includes the following main components:

- Fan Head with Grille and Blades

- Adjustable Pedestal/Stand
- Base
- Control Panel with Digital Display
- Power Adapter and Cable
- Remote Control



**Figure 1:** Front view of the Rowenta Turbo Swift Silence Pedestal Fan QV5040, showing the fan head, adjustable stand,

and base.

## 4. SETUP AND ASSEMBLY

---

The Rowenta Turbo Swift Silence Pedestal Fan QV5040 is designed for simple assembly. Follow these general steps:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Base:** Attach the pedestal stand securely to the base.
3. **Attach Fan Head:** Mount the fan head onto the top of the pedestal stand. Ensure all connections are firm.
4. **Connect Power:** Plug the power adapter into the fan's power input, then plug the adapter into a suitable electrical outlet.



**Figure 2:** Side view of the fan, illustrating its adjustable angle and compact design.



Figure 3: The fan's compact design allows for easy storage, as shown in a shelving unit.

## 5. OPERATING INSTRUCTIONS

---

The fan can be operated using the control panel on the unit or the included remote control.

### 5.1 Power On/Off

- Press the **Power button** (*symbol: circle with a vertical line*) on the control panel or remote control to turn the fan on or off.

### 5.2 Speed Adjustment

The fan offers 20 speed settings for customized airflow.

- Use the '+' and '-' buttons on the control panel or remote control to increase or decrease the fan speed.

### 5.3 Mode Selection

Select from three automatic modes: Natural, Silent, and Night.

- Press the **Mode button** on the control panel or remote control to cycle through the available modes.
- The **Night mode** operates at an exceptionally low noise level of 20 dB(A), ideal for undisturbed sleep.

## 5.4 Oscillation Control

The fan features multidirectional oscillation for wide air distribution.

- Press the **Oscillation button** (*symbol: two curved arrows*) to activate or deactivate horizontal oscillation (120°).
- The fan also supports vertical oscillation (90°). Specific controls for vertical oscillation may be integrated with the main oscillation button or an additional button.


## 5.5 Height Adjustment

The fan's height can be adjusted to 72 cm, 95 cm, or 120 cm, allowing use as a pedestal or table fan.

- To adjust the height, ensure the fan is off and unplugged. Loosen the height adjustment collar on the pedestal, set to desired height, and tighten securely.



**Figure 4:** The remote control and integrated control panel buttons for fan operation.

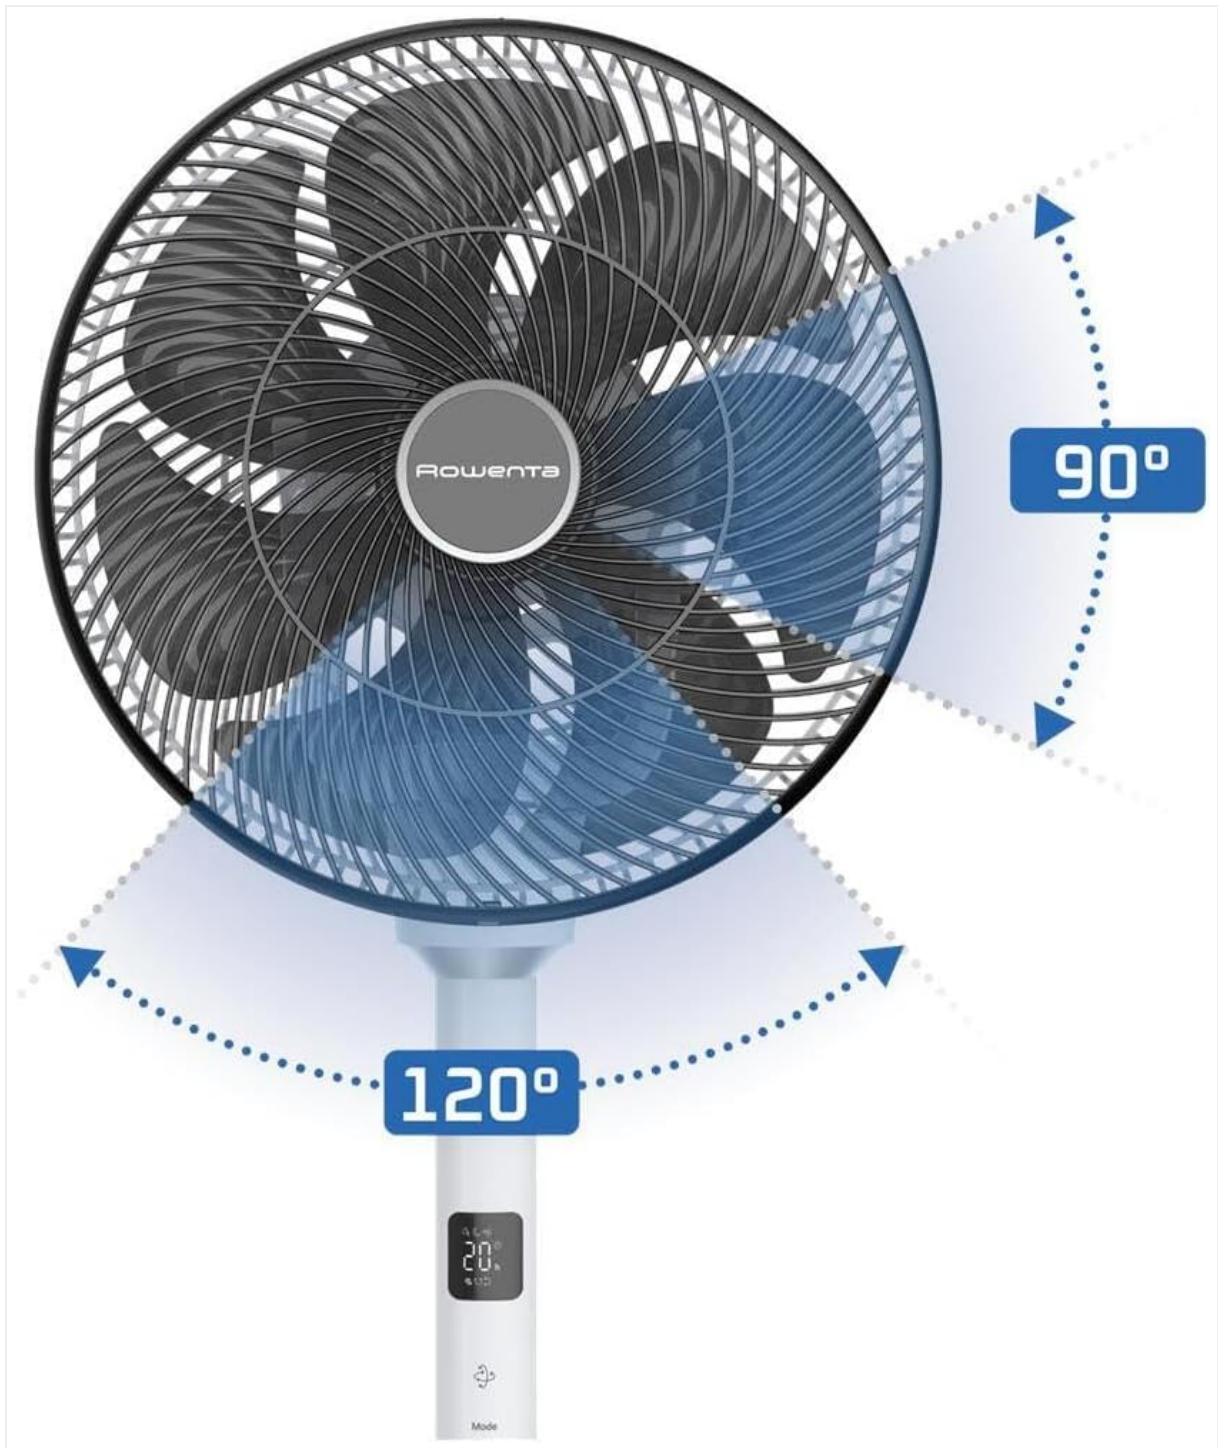

**Figure 5:** Illustration of the fan's 90° vertical and 120° horizontal multidirectional oscillation capabilities.



Figure 6: Detailed view of the fan's digital display, showing current settings and indicators.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning helps maintain the fan's performance and extends its lifespan.

- **Always unplug the fan** from the power outlet before cleaning.
- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Grille Cleaning:** Use a vacuum cleaner with a brush attachment to remove dust from the front and rear grilles. For deeper cleaning, the grilles may be removable (refer to specific assembly instructions if provided with your unit).
- **Storage:** When not in use for extended periods, store the fan in a dry, dust-free location.

## 7. TROUBLESHOOTING

---

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Check if the power cord is securely plugged into the outlet and the fan. Ensure the outlet is functional.
Weak or no airflow.	Fan speed is too low; Grilles are obstructed.	Increase the fan speed. Clean any dust or debris from the grilles.
Fan is making unusual noise.	Loose parts; Obstruction in blades.	Turn off and unplug the fan. Check for any loose components or foreign objects near the blades. Tighten any loose parts if safe to do so.
Remote control not working.	Dead batteries; Obstruction between remote and fan.	Replace the remote control batteries. Ensure there is a clear line of sight between the remote and the fan's receiver.

If the problem persists after attempting these solutions, please contact Rowenta customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Rowenta
Model Name/Number	QV5040
Type	Pedestal Fan (3-in-1: Pedestal, Table)
Color	White
Power Source	Corded Electric
Power Consumption	65 Watts
Number of Speeds	20
Noise Level	20 Decibels (in Silent/Night mode)
Air Speed	Up to 3.7 m/s (at max. speed)
Oscillation	Multidirectional (90° vertical, 120° horizontal)
Adjustable Height	72 cm, 95 cm, 120 cm
Control Method	Push Button, Remote Control
Material	Plastic
Dimensions (D x W x H)	14.5 cm x 14.5 cm x 72 cm (minimum height)
Included Components	Remote Control

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Rowenta website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Rowenta customer service directly.